





## Whirlpool 3360619 Installation Instructions Manual

Commercial electronic washer 120-volt, 60-hz models



1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
Table Of Contents
17




- 

[Table of Contents](#)

•

## Bookmarks

Available languages

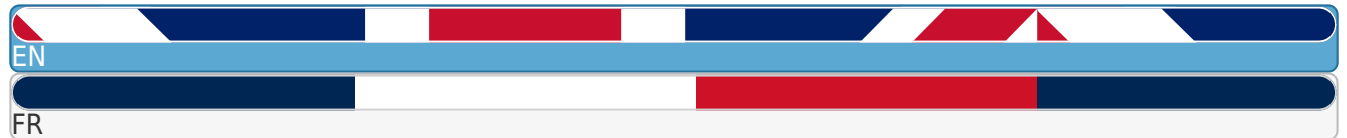

## Quick Links

[Download this manual](#)





# Installation Instructions


**IMPORTANT:**

**Read and save  
these instructions**

**IMPORTANT:**

**Installer:**

Leave Installation Instructions

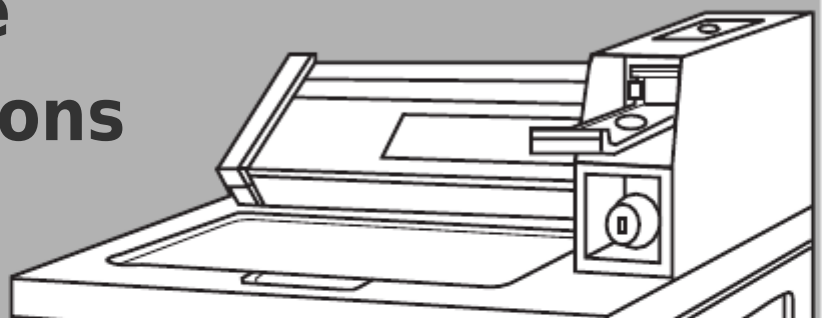

with the owner.

**Owner: Keep Installation Instructions for future reference.**


**Save Installation Instructions for local electrical inspector's use.**

[www.whirlpool.com](http://www.whirlpool.com)

# COMMERCIAL ELECTRONIC WASHER

## 120-volt, 60-Hz Models

Part No. 3360619

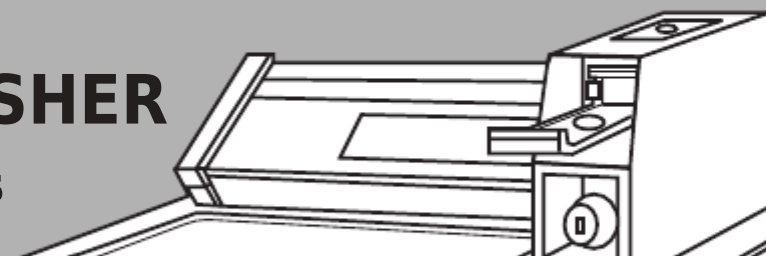

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Whirlpool 3360619

### [Washer Whirlpool 3360464 Use And Care Manual](#)

Two speed automatic washers (23 pages)

### [Washer Whirlpool 3363565 Use And Care Manual](#)

Two speed automatic washers (22 pages)

### [Washer Whirlpool 3363562 Use And Care Manual](#)

Two speed automatic washers (23 pages)

### [Washer Whirlpool 3363569 Use And Care Manual](#)

Two speed automatic washers with quick wash (23 pages)

### [Washer Whirlpool 3363834 Use And Care Manual](#)

Two speed automatic washers (23 pages)

### [Washer Whirlpool 3366875 Use And Care Manual](#)

Three speed automatic washers (44 pages)

### [Washer Whirlpool 3363573 Use And Care Manual](#)

One speed automatic washers (24 pages)

### [Washer Whirlpool 3360461 Use And Care Manual](#)

Two speed washers (28 pages)

### [Washer Whirlpool 3360462 Use And Care Manual](#)

One speed washers (24 pages)

### [Washer Whirlpool 3363560 Use And Care Manual](#)

Whirlpool speed automatic washers use and care 3363560 (23 pages)

### [Washer Whirlpool 3366859 Use And Care Manual](#)

Whirlpool washer/dryer pair useandcare guide (56 pages)

### [Washer Whirlpool 3366860 Use And Care Manual](#)

Roper washer/dryer pair useandcare (53 pages)

### [Washer Whirlpool Washer 3366855 Use And Care Manual](#)

Two speed automatic washer (61 pages)

### [Washer Whirlpool 3360468 User And Care Manual](#)

Two speed automatic washers (55 pages)

### [Washer Whirlpool 3360620 Installation Instructions Manual](#)

(8 pages)

### [Washer Whirlpool 3354199 Installation Instructions Manual](#)

(8 pages)

## Summary of Contents for Whirlpool 3360619

### [Page 1: Installation Instructions](#)

Installation Instructions Part No. 3360619 IMPORTANT: Read and save COMMERCIAL these instructions ELECTRONIC WASHER 120-volt, 60-Hz Models IMPORTANT: Installer: Leave Installation Instructions with the owner. Owner: Keep Installation Instructions for future reference. Save Installation Instructions for local electrical inspector's use.

### [Page 2: Before You Start](#)

Before you start... Do Not store or operate washer below Your safety and the safety of DANGER 0°C (32°F) (some water may remain in others is very important. washer). We have provided

many important You will be killed or seriously injured if See Use &...

### [Page 3: Electrical Requirements](#)

Tools needed for Electrical requirements 3-prong ground- 3-prong type outlet ground installation: plug WARNING level pliers ground prong power supply cord Figure 1 Electrical Shock Hazard Plug into a grounded 3-prong outlet. Now start... wrench Do not remove ground prong. With washer in laundry area.

[Page 4](#) Use new hoses and washers that came with your Whirlpool washer. Stack two corner posts on top of each other. Tilt washer backwards coupling washer and insert corner posts 7.6 cm (3 inches) in from one side of washer Insert a flatwasher into each as shown.

[Page 5](#) CHECK ELECTRICAL Check the wash cycle time. REQUIREMENTS. BE SURE YOU HAVE The coin-operated washer has a CORRECT ELECTRICAL SUPPLY AND 9-minute wash in the Normal cycle. RECOMMENDED GROUNDING Remove the meter case top of coin- METHOD. operated washers to manually start the timer.

### [Page 6: Typical Full Load Sizes](#)

Typical full load sizes. Owner options (coin- operated models) Load Loading Load Loading CAUTION: Disconnect power cord. Type Suggestion Type Suggestion 1. For WARM RINSE and WATER SAVER: • Remove screws from each end Mixed 3 double sheets Heavy 3 pair pants of the console bottom.

[Page 7](#) 18 cm (7") Power supply cord Cold 4 cm (1-1/2") 109 cm Water (43") Inlets 97 cm (38-1/8") Drain hose connector 89 cm (35") 70.5 cm (27-3/4") 18 cm (7") 65 cm 12.7 cm (25-1/2") (5") 68.5 cm 13.3 cm (27") (5-1/4") 2.5 cm...

[Page 8](#) Part No. 3360619 Printed in U.S.A. ©1999 Whirlpool Corporation...

### [Page 9: Instructions D'installation](#)

Instructions d'installation Pièce n° 3360619 IMPORTANT : Lire et conserver LAVEUSE ÉLECTRONIQUE ces instructions. COMMERCIALE Modèles 120V, 60Hz IMPORTANT : Installateur : Remettre la brochure des instructions d'installation au propriétaire. Propriétaire : Conserver la brochure des instructions d'installation pour référence ultérieure.

### [Page 10: Avant De Commencer](#)

Avant de commencer... Ne pas entreposer ni utiliser la laveuse Votre sécurité et celle des autres DANGER à une température inférieure à 0°C est très importante. (32° F) (un peu d'eau peut rester dans Nous donnons de nombreux messages la laveuse). Risque certain de décès ou de blessure de sécurité...

### [Page 11: Installation Électrique](#)

Installation électrique Outillage nécessaire AVERTISSEMENT - La connexion incorrecte du conducteur de mise à la pour l'installation : terre de la machine peut susciter un risque AVERTISSEMENT de choc électrique. En cas de doute quant à la qualité de mise à la terre, niveau vérifier auprès d'un électricien ou pince...

[Page 12](#) Utiliser les tuyaux d'arrivée d'eau et du tuyau de décharge flexible.) joints neufs fournis avec la laveuse. Relier le tuyau inférieur (entrée NE PAS FAIRE DESCENDRE DE FORCE marquée «H») au robinet d'eau L'EXC ´ E S DE TUYAU DANS LE TUYAU chaude.

[Page 13](#) Ôter le ruban adhésif du cordon d'alimentation électrique et brancher la fiche sur la prise de courant. Contrôler la durée encoches d'exécution des programmes de lavage. Pour une laveuse commandée par pièces de monnaie, la durée de lavage du programme barre de conversion normal est de 9 minutes.

### [Page 14: Taille Typique Des Charges Complètes](#)

Taille typique des charges complètes Choix du propriétaire (modèles commandés Type de Suggestion de Type de Suggestion de par pièces de charge chargement charge chargement monnaie) Charge 3 draps (lit à 2 places) Vêtements 3 pantalons MISE EN GARDE : Débrancher le mixte 4 taies d'oreiller de travail très...

[Page 15](#) 18 cm (7 po) Cordon d'alimentation Eau froide 4 cm Eau chaude (1 1/2 po) 109 cm Arrivées (43 po) d'eau 97 cm Raccord du (38 1/8 po) tuyau de décharge 89 cm (35 po) 70,5 cm (27 3/4 po) 18 cm (7 po) 65 cm...

[Page 16](#) Pièce n° 3360619 Imprimé aux É.-U. ©1999 Whirlpool Corporation...