



Whirlpool 1186896B User Manual

1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18
19
20

--	--

•

-


Troubleshooting

•

Bookmarks

--

Available languages

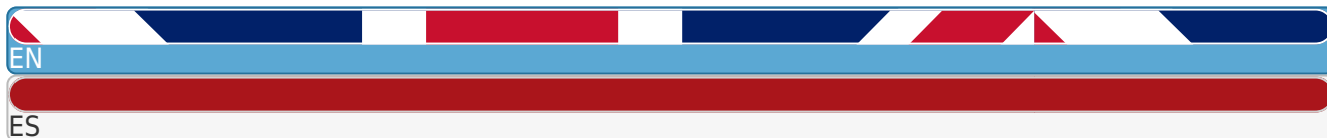


Quick Links

[1 Starting Your Air Conditioner](#)

[2 Troubleshooting](#)

[Download this manual](#)

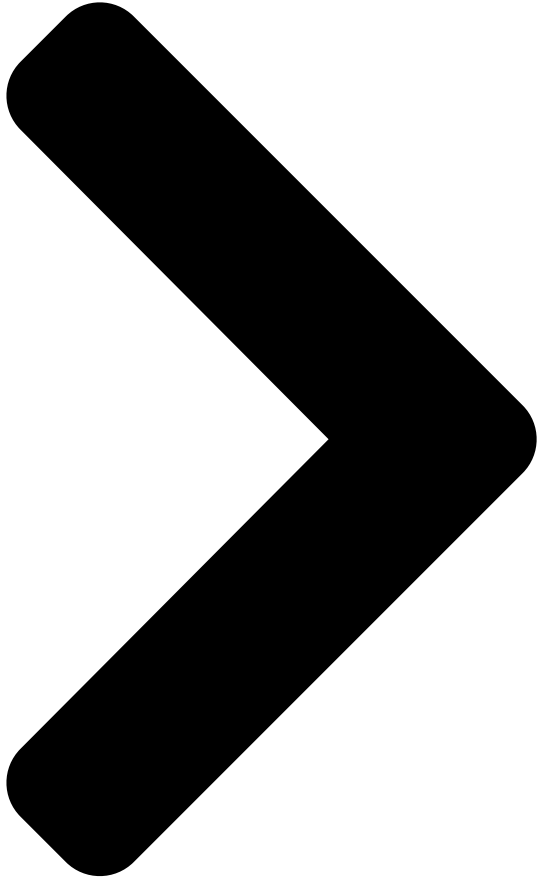

AIR CONDITIONER

Use and Care Guide

This guide contains useful information.

Read it carefully before using your room air conditioner.

For questions about features, operation/performance parts, accessories or service, call: 1-800-253-1201 in the U.S.A.

ACONDICIONADOR DE AIRE

Manual de Uso y Cuidado

Esta guía contiene información útil. Léala cuidadosamente antes de usar su acondicionador de aire de habitación.

Para consultas respecto a características, operación/desempeño,

partes, accesorios o servicio técnico, llame al 1-800-253-1301
en los EE. UU.

Table of Contents/Índice 2

1186896B

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool 1186896B

[Air Conditioner Whirlpool 1187361 Use And Care Manual](#)

Whirlpool air conditioner 1187361 use & care guide (32 pages)

[Air Conditioner Whirlpool 1188177 Use And Care Manual](#)

Through-the-wall air conditioner (32 pages)

[Air Conditioner Whirlpool ACE082XR0 Use And Care Manual](#)

Whirlpool room air conditioner use & care guide (28 pages)

[Air Conditioner Whirlpool ACE184XR0 Use And Care Manual](#)

Whirlpool air conditioner use & care guide air conditioner (36 pages)

[Air Conditioner Whirlpool ACS088PR0 Use And Care Manual](#)

Room air conditioners for slider and casement windows (44 pages)

[Air Conditioner Whirlpool ACS102PP Use And Care Manual](#)

Room air conditioners for slider and casement windows (28 pages)

[Air Conditioner WHIRLPOOL 1187617-W Warranty](#)

(1 page)

[Air Conditioner WHIRLPOOL 1188176-W Warranty](#)

(1 page)

[Air Conditioner WHIRLPOOL 1188177-W Warranty](#)

(1 page)

[Air Conditioner WHIRLPOOL 1188647 Energy Manual](#)

Without reverse cycle with louvered sides (1 page)

[Air Conditioner WHIRLPOOL 1188018 Use And Care Manual](#)

(44 pages)

[Air Conditioner WHIRLPOOL 1188907 Energy Manual](#)

Without reverse cycle with louvered sides (1 page)

[Air Conditioner WHIRLPOOL 1188908 Energy Manual](#)

Without reverse cycle with louvered sides (1 page)

[Air Conditioner WHIRLPOOL 1188910 Energy Manual](#)

Without reverse cycle with louvered sides (1 page)

[Air Conditioner WHIRLPOOL 1187680 Use And Care Manual](#)

Through-the-wall air conditioner (28 pages)

[Air Conditioner Whirlpool ACE184XS0 Use & Care Manual](#)

(36 pages)

Summary of Contents for Whirlpool 1186896B

[Page 1: Air Conditioner](#)

Esta guía contiene información útil. Léala cuidadosamente antes de usar su acondicionador de aire de habitación. Para consultas respecto a características, operación/desempeño, partes, accesorios o servicio técnico, llame al 1-800-253-1301 en los EE. UU. Table of Contents/Índice2 1186896B...

[Page 2: Table Of Contents](#)

TABLE OF CONTENTS ÍNDICE AIR CONDITIONER SAFETY3 SEGURIDAD DEL ACONDICIONADOR DE AIRE.....12 INSTALLATION REQUIREMENTS3 REQUISITOS DE INSTALACIÓN12 Tools and Parts3 Herramientas y piezas.....12 Location

Requirements	4	Requisitos de ubicación.....	13	Electrical Requirements	4
Requisitos eléctricos	13	INSTALLATION INSTRUCTIONS	5	INSTRUCCIONES DE	
INSTALACIÓN.....	14	Unpack the Air Conditioner.....	5	Desempaque el acondicionador de	
aire	14...				

[Page 3: Air Conditioner Safety](#)

AIR CONDITIONER SAFETY Your safety and the safety of others are very important. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages. This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others.

[Page 4: Location Requirements](#)

Location Requirements **Electrical Requirements** **IMPORTANT:** Observe all governing codes and ordinances. **WARNING** Check the location where air conditioner will be installed. Proper installation is your responsibility. Make sure you have everything necessary for correct installation. The location should provide: Grounded electrical outlet within 4 ft (122 cm) of where the power cord exits the air conditioner.

[Page 5: Installation Instructions](#)

It is the customer's responsibility: Recommended ground method To contact a qualified electrical installer. To assure that the electrical installation is adequate and in For your personal safety, this air conditioner must be grounded. conformance with National Electrical Code, ANSI/NFPA 70 - This air conditioner is equipped with a power supply cord having latest edition, and all local codes and ordinances.

[Page 6: Position The Air Conditioner](#)

Bottom View Position the Air Conditioner Handle air conditioner with care. Be sure your air conditioner does not fall out of the opening during installation or removal. The place where the power cord exits the air conditioner should be no more than 4 ft (122 cm) from a grounded 3 prong outlet.

[Page 7: Complete Installation](#)

2. Insert one of the #8 x ¾" round-head screws through left- hand curtain and into the window channel or through Complete Installation alternate hole at the top of the curtain and into the window 1. Insert foam seal behind the top of the lower window sash and sash to fasten the curtain to the window.

[Page 8: Air Conditioner Use](#)

AIR CONDITIONER USE Operating your air conditioner properly helps you to obtain the Fan Only—fan will run continuously to move air, but the air best possible results. will not be cooled. This section explains proper air conditioner operation. **NOTE:** Fan runs on Turbo speed only. **IMPORTANT:** Power Saver (on some models)—When the air conditioner is If you turn the air conditioner off, wait at least 3 minutes...

[Page 9: Changing Air Direction](#)

Changing Air Direction **Normal Sounds** Use the tabs to direct the air right or left (on some models). When your air conditioner is operating normally, you may hear Rotate the whole cartridge to direct air up, down or straight sounds such as: ahead.

[Page 10: Troubleshooting](#)

TROUBLESHOOTING You can solve many common air conditioner problems easily, saving you the cost of a service call. Try the suggestions below to see whether you can solve your problem without outside help. Air conditioner will not operate. Air conditioner cycles on and off too much, or does not cool.

[Page 11: Assistance Or Service](#)

ASSISTANCE OR SERVICE To avoid unnecessary service calls, please check the Please record your model's information. "Troubleshooting" section. It may save you the cost of a service Whenever you call to request service on your appliance, you call. If you still need help, follow the instructions below. need to know your complete model number and serial number.

[Page 12: Seguridad Del Acondicionador De Aire](#)

SEGURIDAD DEL ACONDICIONADOR DE AIRE Su seguridad y la seguridad de los demás es muy importante. Hemos incluido muchos mensajes importantes de seguridad en este manual y en su electrodoméstico. Lea y obedezca siempre todos los mensajes de seguridad. Este es el símbolo de advertencia de seguridad. Este símbolo le llama la atención sobre peligros potenciales que pueden ocasionar la muerte o una lesión a usted y a los demás.

[Page 13: Requisitos De Ubicación](#)

Dimensiones del Requisitos de ubicación acondicionador de aire IMPORTANTE: Observe todos los códigos y reglamentos aplicables. 5.000-7.000 Btu/h 25" a 38" 14" (63,5 cm a (35,6 cm) Verifique el lugar donde se instalará el acondicionador de aire. La 96,5 cm) instalación correcta es su responsabilidad.

[Page 14: Instrucciones De Instalación](#)

terminales debidamente puesto a tierra por un instalador Método recomendado para la puesta a tierra eléctrico calificado. Es responsabilidad del cliente: Para su seguridad personal, este acondicionador de aire debe Llamar a un instalador eléctrico calificado. ser puesto a tierra. Este acondicionador de aire está equipado con un cable de suministro de energía provisto de un enchufe Asegurarse de que la instalación eléctrica sea adecuada y con tres terminales.

[Page 15: Colocación Del Acondicionador De Aire](#)

Vista inferior Colocación del acondicionador de aire Trate el acondicionador de aire con cuidado. Asegúrese de que el acondicionador de aire no se caiga de la abertura durante la instalación o al quitarlo. La parte de donde sale el cordón eléctrico del acondicionador de aire debe colocarse a no más de 4 pies (122 cm) de un tomacorriente de conexión a tierra de 3 terminales.

[Page 16: Complete La Instalación](#)

2. Inserte uno de los tornillos de cabeza redonda #8 x 3/4" a través de la cortina izquierda, en el canal de la ventana o a Complete la instalación través de un orificio alternativo en la parte superior de la cortina, 1.

[Page 17: Cómo Usar Su Acondicionador De Aire](#)

CÓMO USAR SU ACONDICIONADOR DE AIRE Operar debidamente su acondicionador de aire le permite Low Cool—para dormir cómodo obtener los mejores resultados posibles. Fan Only (Sólo ventilación)—el ventilador funciona Esta sección le explica cómo operar su acondicionador de aire continuamente para hacer circular el aire, pero el aire no se debidamente.

[Page 18: Cómo Cambiar La Dirección Del Aire](#)

Cómo cambiar la dirección del aire Sonidos normales Use las lengüetas para dirigir el aire hacia la derecha, o hacia la Cuando el acondicionador de aire está funcionando izquierda (en algunos modelos). Gire el cartucho completo para normalmente, usted podrá escuchar sonidos como: dirigir el aire hacia arriba, hacia abajo o directamente hacia Gotas de agua que caen sobre el condensador, produciendo adelante.

[Page 19: Solución De Problemas](#)

SOLUCIÓN DE PROBLEMAS Usted puede resolver fácilmente muchos problemas frecuentes del acondicionador de aire ahorrándose el costo de una llamada de servicio. Pruebe las sugerencias que se incluyen a continuación para ver si puede resolver el problema sin ayuda. Su acondicionador de aire no funciona. El acondicionador de aire se enciende y se apaga demasiado, o no enfría.

[Page 20: Ayuda O Servicio Técnico](#)

484067 Por favor incluya en su correspondencia un número de teléfono en el que se le pueda localizar durante el día. 8.000-12.000 Btu/h 4392940 484184 1186896B © 2004. 5/04 All rights reserved. Printed in U.S.A. Todos los derechos reservados. Impreso en EE. UU.