



Whirlpool COOLVOX Quick Start Manual

Kitchen sound system

1
2
3
4
5
6
7
8
9
10
11
12

--

•

[Table of Contents](#)

•

Troubleshooting

•

Bookmarks

--

Available languages

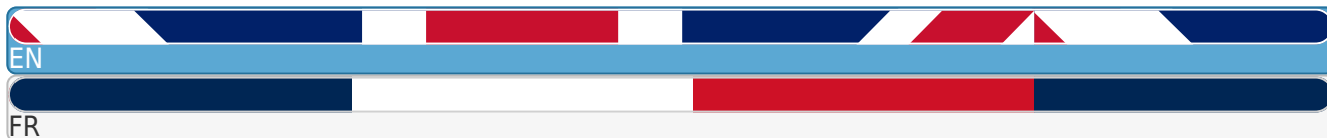



Table of Contents

- 1 Sound System Overview
- 2 Setup and Operation
- 3 Troubleshooting

[4 Présentation du Système Audio](#)

[5 Dépannage](#)

[Download this manual](#)

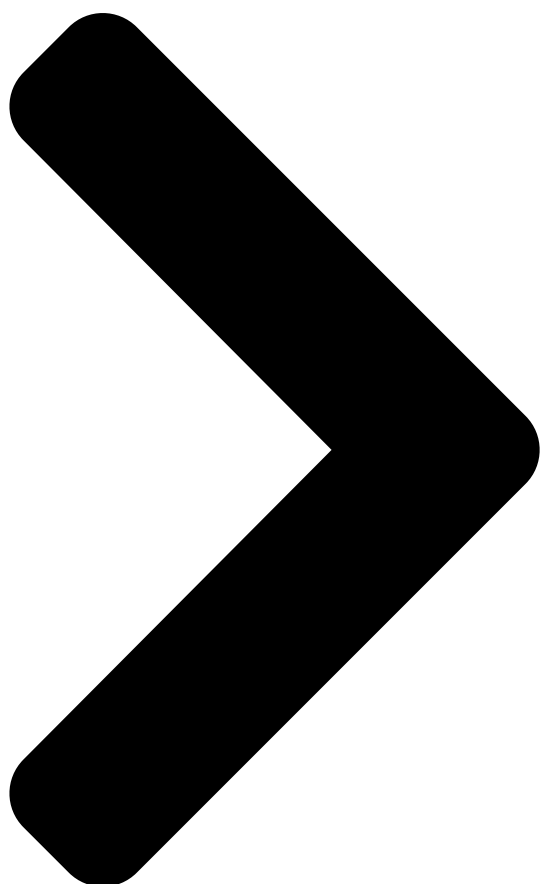

Quick Start Guide / Guide de démarrage rapide

W10687103A



audio by **harman**/I

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool COOLVOX

[Speaker System Whirlpool COOLVOX Quick Start Manual](#)

Kitchen sound system (11 pages)

Summary of Contents for Whirlpool COOLVOX

[Page 1](#) Quick Start Guide / Guide de démarrage rapide W10687103A...

[Page 2](#) COOLVOX™ KITCHEN SOUND SYSTEM SAFETY Your safety and the safety of others are very important. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages. This is the safety alert symbol.

[Page 3: Sound System Overview](#)

The Status LED (A) will glow solid blue when the sound system is properly paired with your Bluetooth device. You are now ready to play your music through CoolVox. Use the controls of your Bluetooth-enabled device to start, stop, or pause the audio.

[Page 4: Troubleshooting](#)

Mobile Device is not Bluetooth paired Pair the BlueTooth source. See "Set Up and Operation." The CoolVox™ sound system is available for pairing when the Status LED (A) flashes blue. Pairing is accomplished when the Status LED glows constant blue.

[Page 5](#) Bluetooth audio sources only Cannot charge mobile No USB jack or docking port The CoolVox™ sound system does not offer a USB port or any device from CoolVox™ provision for charging or powering mobile devices. sound system Volume too high or low Adjust volume levels on CoolVox™ ...

[Page 6](#) 3. The consultant will advise whether the Refrigerator Accessory qualifies for factory specified replacement parts or product replacement. 4. You may be directed to forward the product to a Whirlpool designated service center. You are responsible for insurance and freight to the designated service center.

[Page 7](#) SÉCURITÉ DU SYSTÈME AUDIO DE CUISINE COOLVOX™ Votre sécurité et celle des autres est très importante. Nous donnons de nombreux messages de sécurité importants dans ce manuel et sur votre appareil ménager. Assurez-vous de toujours lire tous les messages de sécurité et de vous y conformer.

[Page 8: Présentation Du Système Audio](#)

PRÉSENTATION DU SYSTÈME AUDIO A. Témoin d'état à DEL B. Témoin C. Réglage d'alimentation du volume Orange : mode veille /couplage Bleu clignotant : mode couplage Bleu fixe : connecté Conçu pour être posé au-dessus du réfrigérateur; faible Connectivité Bluetooth ®†...

[Page 9: Dépannage](#)

Bluetooth. REMARQUES : Si le système audio CoolVox™ est déjà couplé à un autre terminal, appuyer sur le bouton Power/Pair (témoin d'alimentation/couplage) (B) sur le panneau de commande et le maintenir enfoncé pendant 3 secondes pour annuler le couplage existant.

[Page 10](#) Tant que le témoin d'état à DEL bleue fixe du témoin d'état à DEL (A). clignote en bleu, le système audio CoolVox™ est prêt au couplage avec un nouveau terminal mobile. Lorsque le nouveau couplage est réalisé, le témoin d'état à...

[Page 11](#) à ou fournies avec ce produit, Whirlpool Corporation ou Whirlpool Canada LP (ci-après désignées sous le nom de "Whirlpool") choisira à sa seule discrétion de fournir les pièces de rechange spécifiées par l'usine pour corriger les vices de matériaux ou de fabrication, ou de

remplacer le produit.

[Page 12](#) ® /™ ©2014 Whirlpool. All rights reserved. Used under license in Canada. Tous droits réservés. Utilisé sous licence au Canada. 4/14 W10687103A Harman/Kardon and its logo are trademarks of Harman International Industries, Inc. Printed in China SP PN W10698692A Harman/Kardon et son logo sont des marques de commerce de Harman International Industries, Inc.