Removing A Pc Card; Setting Up A Pc Card For Your Computer - Toshiba P100-ST1072 User Manual

P100-st1072 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
Table Of Contents
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237

•

Table of Contents

-

Bookmarks

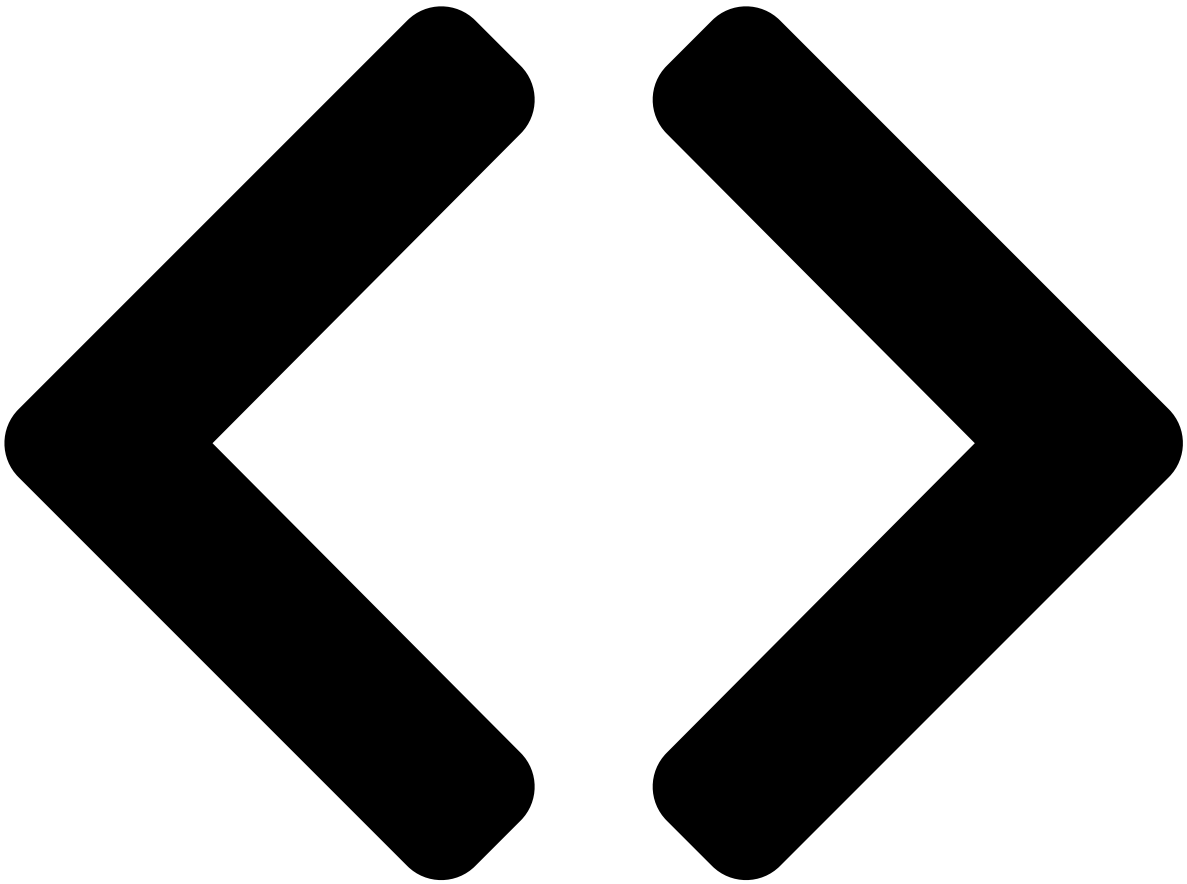

Removing a PC Card

NOTE

1

Prepare the card for removal by clicking the Safely Remove **Hardware icon on the Notification Area and then selecting the** card or device you want to remove.

CAUTION

If the system is unable to prepare the card for safe removal, a message will tell you to try again later. If the card can be removed now, the system displays Safe to Remove Hardware.

2

Locate the PC Card eject button.

3

Press the PC Card eject button once to pop it out slightly, and push it in to remove the PC Card.

The PC Card ejects slightly from the slot.

CAUTION

4

Grasp the edges of the PC Card and slide it out of the slot.

(Sample Illustration) Removing a PC Card

Setting up a PC Card for your computer

Some PC Cards are ready to use as soon as you install them. Others, such as hard disk cards, network cards, and SCSI adapters, may need to be set up to work with your computer. To set up your PC Card, refer to the documentation that came with the card or refer to

your operating system manual or online Help.

Exploring Your Computer's Features

Be sure to disable the PC Card prior to removing it. Otherwise, the system may be damaged.

Before removing a PC Card, make sure that no applications or system services are using the card.

Using PC Cards

PC Card
eject button

ManualsLib.com

Previous Page
Next Page

Related Manuals for Toshiba P100-ST1072

Laptop Toshiba Satellite P100-ST1072 Series Specifications

Toshiba satellite p100-st1072: specifications (8 pages)

Laptop Toshiba Satellite P100 Series Maintenance Manual

Pc (314 pages)

Laptop Toshiba Satellite P100 Series Maintenance Manual

(311 pages)

Laptop Toshiba P100/P105 User Manual

Toshiba satellite p100/p105 series user's guide (280 pages)

Laptop Toshiba P100-ST9732 User Manual

P100-st9732 user's guide (278 pages)

Laptop Toshiba P105-S9337 User Manual

P105-s9337 user's guide (278 pages)

Laptop Toshiba Satellite P100 Series User Manual

(196 pages)

Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual

Pa3943u-1cam camileo p100 user's guide (146 pages)

Laptop Toshiba Satellite P100/P105Series Resource Manual

Toshiba laptop pc user's guide (72 pages)

Laptop Toshiba Satellite P105-S6157 Specifications

Toshiba satellite p105-s6157: specifications (11 pages)

Laptop Toshiba Satellite P105-S6177 Specifications

Toshiba satellite p105-s6177: specifications (11 pages)

Laptop Toshiba Satellite P105-S6197 Specifications

Toshiba satellite p105-s6197: specifications (11 pages)

Laptop Toshiba Satellite P105-S6207 Specifications

Toshiba satellite p105-s6207: specifications (11 pages)

Laptop Toshiba Satellite P105-S6217 Specifications

Toshiba satellite p105-s6217: specifications (11 pages)

Laptop Toshiba Satellite P105-S6227 Specifications

Toshiba satellite p105-s6227: specifications (11 pages)

Laptop Toshiba Satellite P100 Specifications

Toshiba satellite p100: specifications (2 pages)

Related Content for Toshiba P100-ST1072

PORTEGE R200 Figure 4-2 Removing The Pc Card

Toshiba PORTEGE R200

Portege 2010 Removing A Pc Card

TOSHIBA Portege 2010

TECRA S1 Removing The Optional Pc Card

Toshiba TECRA S1

Satellite U300 Removing A Pc Card

Toshiba Satellite U300

Satellite M20 Removing The Optional Pc Card

Toshiba Satellite M20

Satellite A205 Series Removing A Pc Card

Toshiba Satellite A205 Series

Satellite M30 Removing The Pc Card

Toshiba Satellite M30

Satellite L300D Removing The Optional Pc Card

Toshiba Satellite L300D

This manual is also suitable for:

P100-st1071P105-s6147P105-s6148P105-s6157P105-s6158P105-s6167 ... Show all