Remote Controller Test Run Settings - Sanyo XM18AAB Installation Instructions Manual

W-2way system air conditioner

1
2
3
4
5
Table Of Contents
6
7
8
9
10
11
12
13
14
15
16
17

-

Table of Contents

Bookmarks

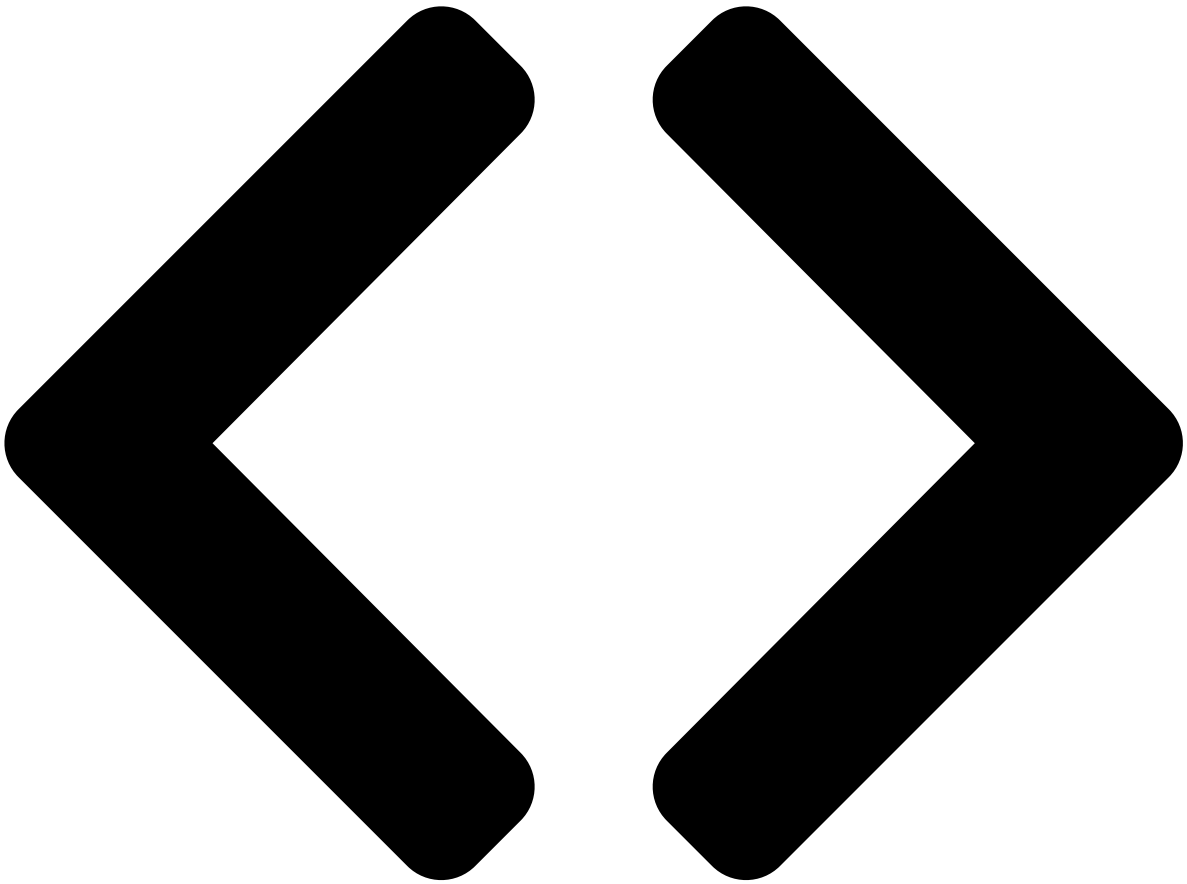

Request concerning recording the indoor/outdoor unit combination Nos.
After automatic address setting has been completed, be sure to record them for future reference.
List the outdoor main unit system address and the addresses of the indoor units in that system in an easily visible location (next to
the nameplate), using a permanent marking pen or similar means that cannot be abraded easily.
Example: (Outdoor) 1 – (Indoor) 1-1, 1-2, 1-3...
These numbers are necessary for later maintenance. Please be sure to indicate them.
Checking the indoor unit addresses
Use the remote controller to check the indoor unit address.
<If 1 indoor unit is connected to 1 remote controller>
1. Press and hold the
2. The address is displayed for the indoor unit that is connected to the remote controller.
(Only the address of the indoor unit that is connected to the remote controller can be checked.)
3. Press the
button again to return to normal remote controller mode.
<If multiple indoor units are connected to 1 remote controller (group control)>
1. Press and hold the

2. "ALL" is displayed on the remote controller.
3. Next, press the
4. The address is displayed for 1 of the indoor units which is connected to the remote controller. Check that the fan of that indoor
unit starts and that air is discharged.
5. Press the
button again and check the address of each indoor unit in sequence.
6. Press the
button again to return to normal remote controller mode.
Number changes to indicate
which indoor unit is currently selected.
Indoor unit address

7-5. Remote Controller Test Run Settings

1. Press the remote controller
● "TEST" appears on the LCD display while the test run is in progress.
● The temperature cannot be adjusted when in Test Run mode.
(This mode places a heavy load on the machines. Therefore use it only when performing the test run.)
2. The test run can be performed using the HEAT, COOL, or FAN operation modes.
Note: The outdoor units will not operate for approximately 3 minutes after the power is turned ON and after operation is
stopped.
3. If correct operation is not possible, a code is displayed on the remote controller LCD display.
(Refer to "Table of Self-Diagnostic Functions" and correct the problem.)
4. After the test run is completed, press the
(To prevent continuous test runs, this remote controller includes a timer function that cancels the test run after 60 minutes.)
* If the test run is performed using the wired remote controller, operation is possible even if the cassette-type ceiling panel has not
been installed. ("P09" display does not occur.)
button and
button for 4 seconds or longer (simple settings mode).
button and
button for 4 seconds or longer (simple settings mode).
button.
button for 4 seconds or longer. Then press the
button again. Check that "TEST" disappears from the LCD display.
(Outdoor) 2 – (Indoor) 2-1, 2-2, 2-3...
Number changes to indicate
which indoor unit is currently selected.
Indoor unit address
45
button.

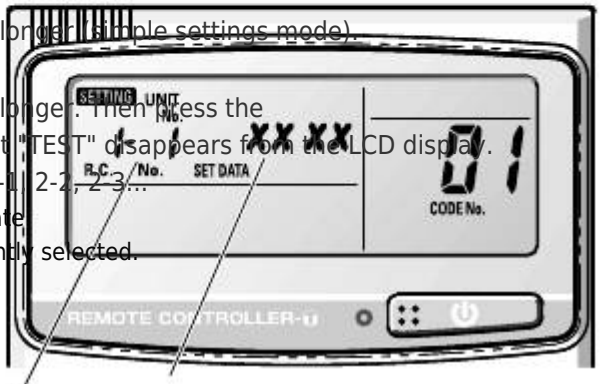

Table of Contents

Previous Page
Next Page

Related Manuals for Sanyo XM18AAB

Air Conditioner Sanyo ECO-i AHX0752 Technical Data Manual

(265 pages)

Air Conditioner Sanyo MINI ECO-i XHX1252 Service Manual & Test Run Service Manual

(190 pages)

Air Conditioner Sanyo ECO-i CHDZR07263 Series Service Manual

(146 pages)

Air Conditioner Sanyo CHDXR09663* Service Manual

2-way eco-i multi system (142 pages)

Air Conditioner Sanyo CHDZ07263 Service Manual

(128 pages)

Air Conditioner Sanyo AHX0752 Service Manual

W-2way eco-i multi system (114 pages)

Air Conditioner Sanyo W-3WAY ECO-i 85464369098000 Installation Instructions Manual

W-3way eco-i system air conditioner (106 pages)

Air Conditioner Sanyo 85464359982001 Installation Instructions Manual

W-2way system air conditioner (96 pages)

Air Conditioner Sanyo Mini ECO-i CHXR03652 Service Manual

(93 pages)

Air Conditioner Sanyo Mini ECO-i 85464359981002 Installation Instructions Manual

Sanyo air conditioner installation instructions (90 pages)

Air Conditioner Sanyo R410A Installation Instructions Manual

W-3way eco-i system air conditioner (54 pages)

Air Conditioner Sanyo ECO R410A Installation Instructions Manual

Eco-i system air conditioner (48 pages)

Air Conditioner Sanyo XHX1252 Instruction Manual

Split system air conditioner (20 pages)

Air Conditioner Sanyo THX2452 User Manual

(4 pages)

Air Conditioner Sanyo DHX4852 Manual

Indoor unit (4 pages)

Air Conditioner Sanyo THX1852 Manual

Indoor unit (4 pages)

Related Content for Sanyo XM18AAB

AHX0752 Remote Controller Test Run Settings

Sanyo AHX0752

85464359982001 Remote Controller Test Run Settings

Sanyo 85464359982001

SPW-C256VH 2-5.Test Run Using The Remote Controller

Sanyo SPW-C256VH

Big PACi 18 Series Test Run Using The Remote Controller

Sanyo Big PACi 18 Series

26 series Test Run Using The Remote Controller

Sanyo 26 series

SPW-CR365GXH56 I Remote Controller Test Run Setting

Sanyo SPW-CR365GXH56

C4272R Test Run Using The Remote Controller

Sanyo C4272R

SPW-C0705DZH8 Remote Controller Test Run Settings

Sanyo SPW-C0705DZH8

This manual is also suitable for:

Xhx1252Xhx1852Xhx3652Xmhx1252Xmhx1852Ahx0752 ... Show all