



# Parts Location - Sanyo GCD 2000 Service Manual

Cd changer stereo music system



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40

---

•

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks







ii  
s

PARTS LOCATION

**(TUNER) PARTS LOCATION (TUNER)**

TUNER P.C.B

TP202

TP201

C2102

TP202

TP201

TP201

TP201

TP201

TP201

TP201


TP201

TP201

TP201

TP201


TUNER P.C.B

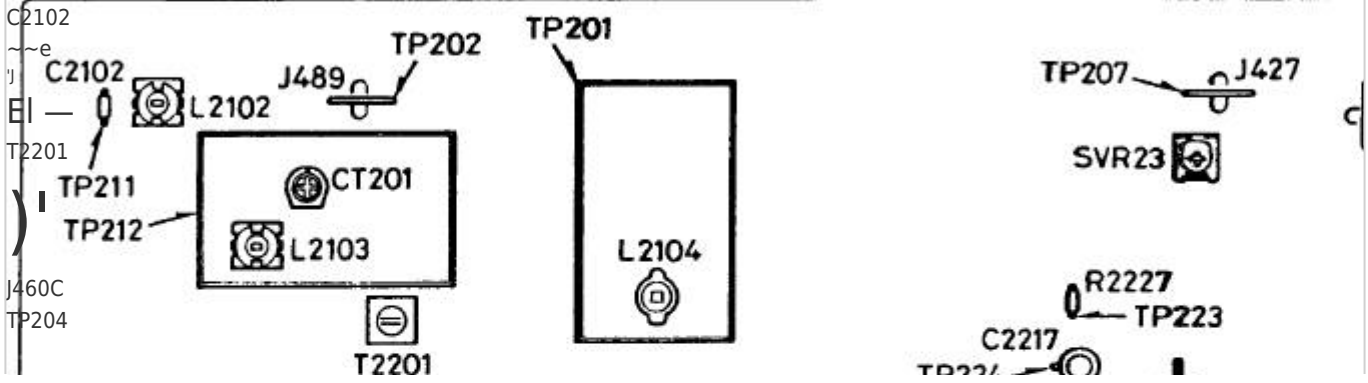

!!Qil

3432  
T2202  
J436

**PARTS LOCATION (TUNER)**

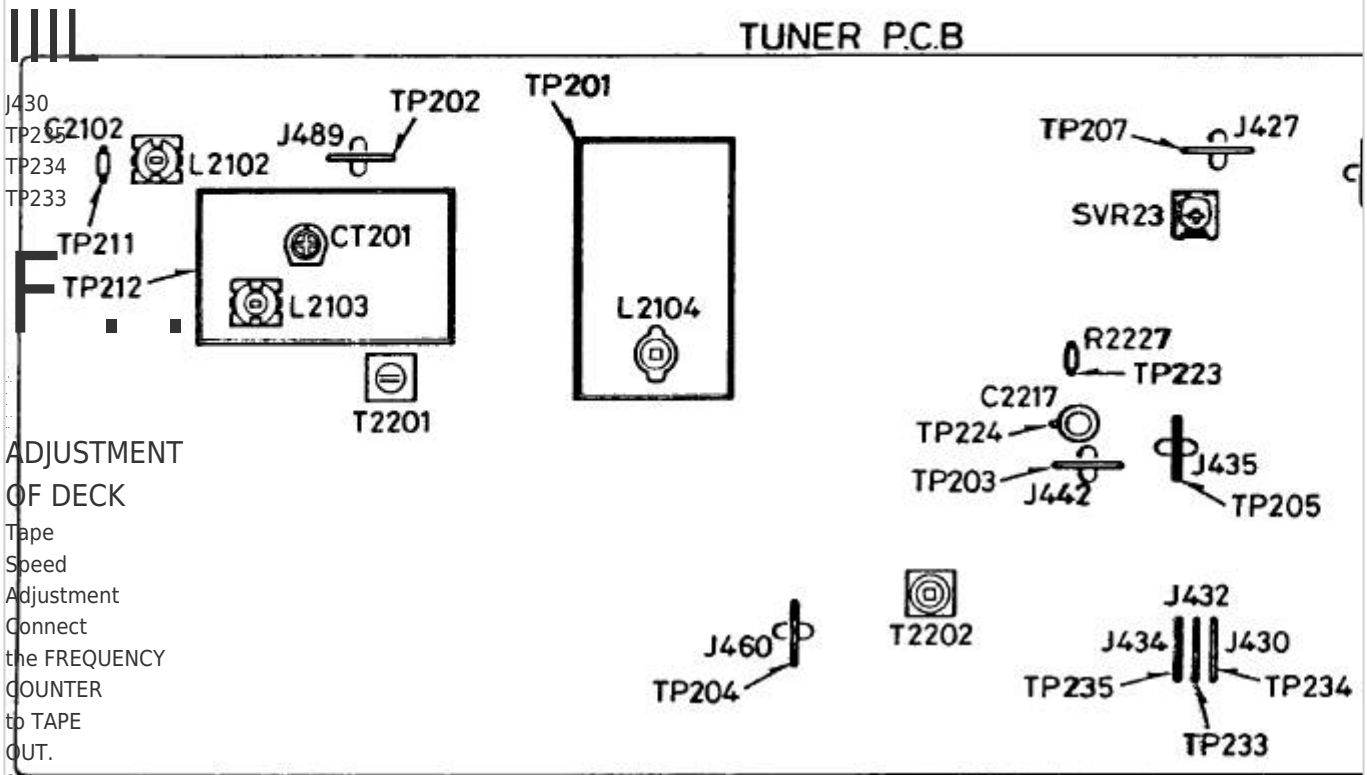

**ADJUSTMENT OF DECK**

Tape Speed Adjustment  
Adjustment of the FREQUENCY COUNTER to TAPE OUT.

1. Insert

the test tape(MTT-1

11N, etc. : 3000 Hz) into the

DECK 1.

Note: Set the test tape

near the tape

end

STOP

button

and

3. Adjust

SVR401

so that a

frequency

counter

reading

of

$3000 \pm 5$  Hz

is

obtained.

4. Press

the

STOP

button,

and

eject

the

test

tape.

5. Insert

the

test

tape

(TCW-211,

etc. :

1500 Hz)

into

the

DECK 1.

(The

mechanism

is

high

speed

dubbing.)

9. Confirm

that

a

frequency

counter

reading

of

$3000 \text{ Hz} \pm 10\%$

(300 Hz)

is

obtained.

(C-60

Blank

tape

into

the

DECK 2.

REC

button

of


DECK 2

and

press

**PARTS LOCATION (DECK)**

**DECK AMP P.C.B**

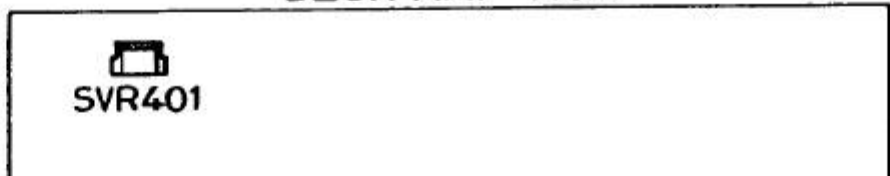

the  
DECK  
1 / 2 button.  
FWD  
PLAY  
button.

Both  
mechanism

become

normal  
speed  
dubbing.  
high  
speed  
test  
pin  
to the  
high  
speed  
position.

2.  
Press  
the  
FWD  
PLAY  
button.  
3. Adjust  
SVR401  
so that  
a frequency  
counter  
reading  
of

3000 Hz  
5 Hz %  
obtained.

## ADJUSTMENT OF DECK

### 4. Tape Speed Adjustment

5. Connect the FREQUENCY COUNTER to the C.U.
6. Insert the test tape (MTT-111N, etc. : 3000Hz) into the DECK 1. (Refer to the test tape.)
7. Press the FWD PLAY button.
8. Adjust SVR401 so that a frequency counter reading of  $3000 \pm 5$  Hz is obtained.
9. Press the STOP button, and eject the test tape.
10. Short the high speed test pin to the high speed position.
11. Insert the test tape (TCW-211, etc. : 1500Hz) into the DECK 1.
12. Insert the tape (C-60 Blank tape) into the DECK 2.
13. Press the REC button of DECK 2 and press the DECK 1 / 2 button.
14. Press the FWD PLAY button. Both mechanism become normal speed dubbing.
15. Short the high speed test pin to the high speed position.
16. Confirm that a frequency counter reading of  $3000 \text{ Hz} \pm 10\%$  (300Hz) is obtained.

## PARTS LOCATION (DECK)

of  
3000Hz  
t 10% (300 Hz) is obtained.


PARTS LOCATION

(DECK)


DECK AMP Pc.6

-

## TUNER P.C.B

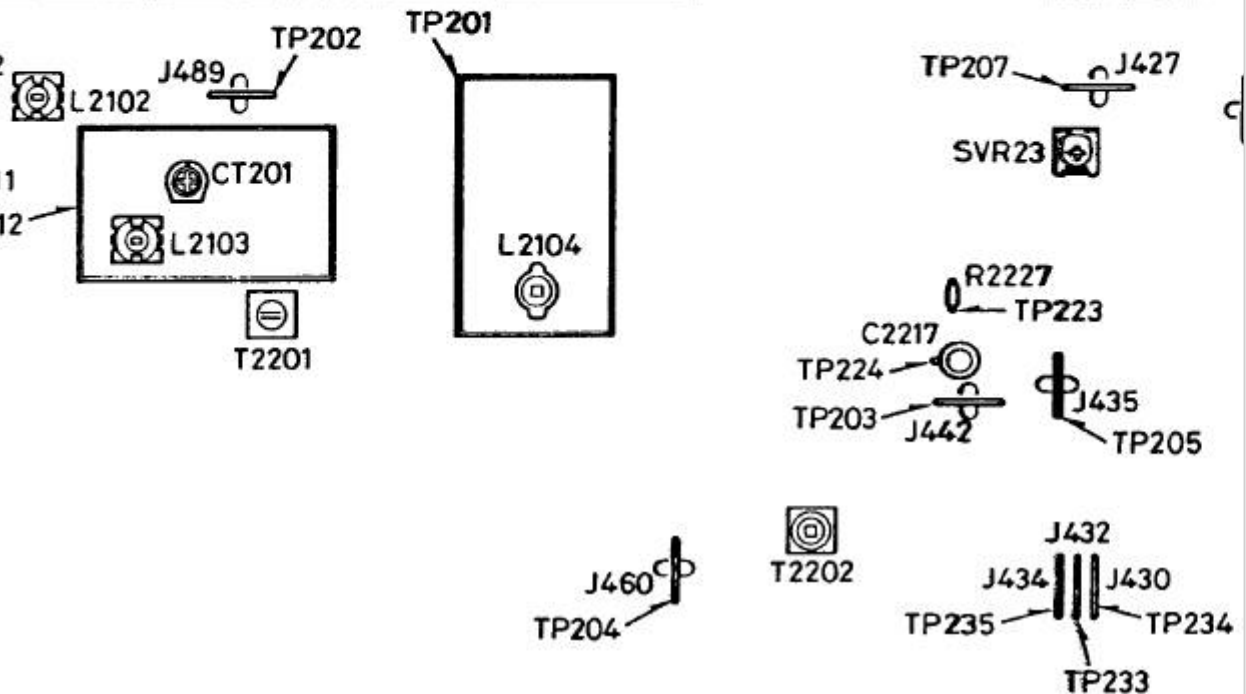

## DECK AMP P.C.B

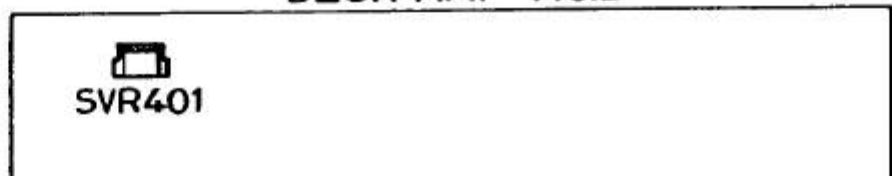

EII  
SVR401

**PARTS LOCATION (TUNER)**

---

1  
-3-

**TUNER P.C.B**

---

TP202 TP201

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
2  
3  
4  
5  
6  
7  
8

Quick Links:

[Operation](#)

## Related Manuals for Sanyo GCD 2000

[Media Converter Sanyo GCD2000 Instruction Manual](#)

Cd changer stereo music system (20 pages)

[Stereo System Sanyo GCD 1500 \(AU\) Service Manual](#)

Sanyo gcd 1500 (au) cd stereo sound system (38 pages)

[Stereo System Sanyo GCD 2700 Service Manual](#)

Cd changer stereo music system (54 pages)

[Stereo System Sanyo GCD 1500 Instruction Manual](#)



Cd stereo sound system (13 pages)

[Stereo System Sanyo G-2915NK Service Manual](#)

Portable stereo music system (20 pages)

[Stereo System Sanyo GXT 4615K Service Manual](#)

Stereo music system (16 pages)

[Stereo System Sanyo GCX7060LU Service Manual](#)

(20 pages)

[Stereo System Sanyo G-2615H Service Manual](#)

Portable stereo music system (13 pages)

[Stereo System Sanyo G-2601KC Service Manual](#)

(19 pages)

[Stereo System Sanyo DC-X8CT Service Manual](#)

Separate mini component system (66 pages)

[Stereo System Sanyo DC-007C Manual](#)

(6 pages)

[Stereo System Sanyo DC Service Manual](#)

(53 pages)

[Stereo System Sanyo AWM-660 Instruction Manual](#)

Sanyo awm-660 stereo systems: instruction manual (18 pages)

[Stereo System Sanyo DC D60 Service Manual](#)

(52 pages)

[Stereo System Sanyo DC-MCR80M Instruction Manual](#)

Micro component system (13 pages)

[Stereo System Sanyo DC-MCR80M Service](#)

(17 pages)

## Related Content for Sanyo GCD 2000

[DC-DA1250M Parts List](#)

Sanyo DC-DA1250M

[RB-DA280 Parts List](#)

Sanyo RB-DA280

[DC-DA1000 Parts List \(Cabinet & Chassis\)](#)

Sanyo DC-DA1000

[DC-MCR80M Parts List](#)

Sanyo DC-MCR80M

[DC-DA1400M Parts List](#)

Sanyo DC-DA1400M

[DC-F320 Parts List](#)

Sanyo DC-F320

[DC-MP4500\(BK\)/XE Parts List](#)

Sanyo DC-MP4500(BK)/XE

[DC-AS1600DX/XE Parts List](#)

Sanyo DC-AS1600DX/XE