

How To Install The Indoor Unit; 4-Way Air Discharge Semi-Concealed Type; (X Type); Suspending The Indoor Unit - Sanyo C4272R S/C Installation Instructions Manual

Sanyo split system heat pump air conditioner installation instructions

1

2

3

4

5

Table Of Contents

6

7

8

9

10

11

12

13

14


15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111



•

[Table of Contents](#)

•

Bookmarks



07-115 SSHP_II
5/7/07
3:59 PM

3. HOW TO INSTALL THE INDOOR UNIT

I 4-Way Air Discharge Semi-Concealed Type

(X Type)

3-1. Suspending the Indoor Unit

This unit uses a drain pump. Use a carpenter's level to check that the unit is level.

3-2. Preparation for Suspending

(1) Fix the suspension bolts securely in the ceiling using the method shown in the diagrams (Figs. 3-1 and 3-2), by attaching them to the ceiling support



structure, or by any other method that ensures that the unit will be securely and safely suspended.

(2) Follow Fig. 3-2 and Table 3-1 to make the holes in the ceiling.

Table 3-1

Type

XH(W)2672R

(PNR-XH2442)

XH(W)3672R, XH(W)4272R

(PNR-XH3642)

(3) Determine the pitch of the suspension bolts using the supplied full-scale installation diagram. The diagram and table (Fig. 3-3 and Table 3-2) show the relationship between the positions of the suspension fitting, the unit, and the panel.

Table 3-2

Type

XH(W)2672R

(PNR-XH2442)

XH(W)3672R, XH(W)4272R

(PNR-XH3632)

Page 26

Unit: inch (mm)

Length

A

B

32-9/32

22-9/32

(820)

(566)

43-11/16

33-11/16

(1,110)

(856)

Refrigerant tubing joint (gas tube side)

Suspension lug

Length

A

B

6-3/16

7-5/32

(157)

(182)

6-3/16

7-5/32

(157)

(182)

Hole-in-anchor

Hole-in-plug

Suspension bolt (M10 or 3/8")

(field supply)

A (Ceiling opening)

(Suspension bolt pitch)

Grille center

Fig. 3-3

Unit: inch (mm)

C



D

E

10-9/32


12-1/8

4-7/8

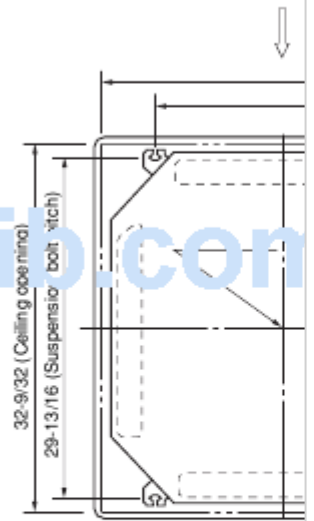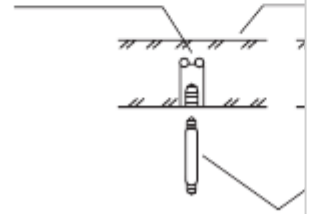

Refrigerant tubing joint (gas tube side)		
Suspension lug		

ManualsLib.com

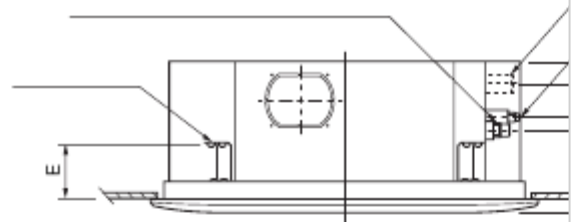

(261)
(308)
(124)
11-15/32
13-1/16
4-7/8
(291)
(338)
(124)

26
Concrete
Insert

Fig. 3-1

X
B
Drain hose
side
Refrigerant
tubing side
Unit: inch

Fig. 3-2

Drain connection (other side)
(VP25)
Refrigerant tubing joint
(liquid tube side)
Unit: inch





Table of Contents

[Previous Page](#)
[Next Page](#)

1
...
23
24
25
26
27
28
29
30

Quick Links:

[Indoor Unit](#)

[Trouble Diagnostics](#)

Related Manuals for Sanyo C4272R S/C

[Air Conditioner Sanyo C4272R Service Manual](#)

Sanyo split system air conditioner service manual (181 pages)

[Air Conditioner Sanyo CH1872 Technical & Service Manual](#)

Dc inverter split system air conditioner (111 pages)

[Air Conditioner Sanyo 26 series Installation Instructions Manual](#)

Split system heat pump air conditioner (110 pages)

[Air Conditioner Sanyo RCS-BH80UA.WL Instruction Manual](#)

Split system air conditioner (48 pages)

[Air Conditioner Sanyo C3072R Parts List](#)

Outdoor unit (4 pages)

[Air Conditioner Sanyo KH3672R Parts List](#)

Sanyo air conditioner parts list (4 pages)

[Air Conditioner Sanyo CH3672R Parts List](#)

Outdoor unit (4 pages)

[Air Conditioner Sanyo THHW3672R Parts List](#)

Sanyo air conditioner parts list (4 pages)

[Heat Pump Sanyo 26THW72R Specifications](#)

Ceiling suspended heat pump (2 pages)

[Air Conditioner Sanyo 26UW72R Specifications](#)

Concealed duct air conditioner (2 pages)

[Air Conditioner Sanyo 36KHS72R Datasheet](#)

Wall mounted heat pump (2 pages)

[Air Conditioner Sanyo 36UW72R Specifications](#)

Concealed duct air conditioner (2 pages)

[Air Conditioner Sanyo KHS3672R Datasheet](#)

Wall mounted air conditioner (2 pages)

[Air Conditioner Sanyo THW3672R Specifications](#)

Ceiling suspended air conditioner (2 pages)

[Air Conditioner Sanyo XHW2672R Specifications](#)

Ceiling recessed air conditioner (2 pages)

[Air Conditioner Sanyo 30K72R Dimensional Information](#)

Sanyo air conditioner data sheet (1 page)

Related Content for Sanyo C4272R S/C

[SPW-X483GH56 How To Install The Indoor Unit](#)

Sanyo SPW-X483GH56

[26 series How To Install The Indoor Unit](#)

Sanyo 26 series

[COOL How To Install The Indoor Unit](#)

Sanyo COOL

[SAP-CRV93EHN Remove The Grille To Install The Indoor Unit](#)

Sanyo SAP-CRV93EHN

[SAP-KRV94EHDX Remove The Grille To Install The Indoor Unit](#)

Sanyo SAP-KRV94EHDX

[KS3082 How To Install The Indoor Unit](#)

Sanyo KS3082

[COOL How To Install The Indoor Unit](#)

Sanyo COOL

[KS1872 Remove The Grille To Install The Indoor Unit](#)

Sanyo KS1872

This manual is also suitable for:

[Ch4272r h/pUhw2672rUhw3672r26khs72r26ks72r26uhw72r ...](#) [Show all](#)