

I Wall-Mounted Type (K Type); Removing The Wall Fixture From The Unit; Selecting And Making A Hole - Sanyo C4272R S/C Installation Instructions Manual

Sanyo split system heat pump air conditioner installation instructions

1

2

3

4

5

Table Of Contents

6

7

8

9

10

11

12

13

14


15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111




•

[Table of Contents](#)

•

Bookmarks

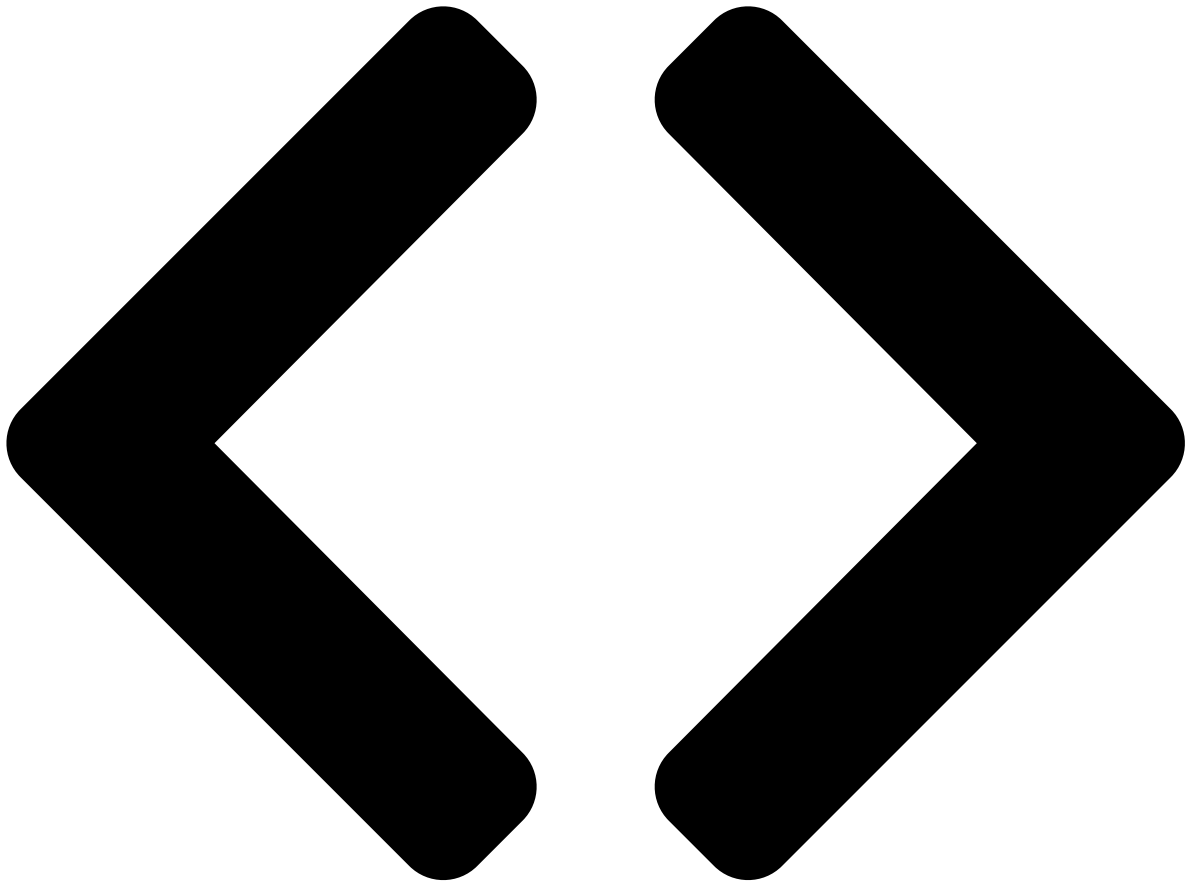

Enlarged version

07-115 SSHP_II
5/7/07
3:59 PM

I Wall-Mounted Type (K Type)

3-10. Removing the Wall Fixture from the Unit


KH(S)2672R

Remove and discard the set screws and take off the rear panel. (Fig. 3-19)

Tubing can be extended in 3 directions as shown in Fig. 3-20. Select the direction that provides the shortest run to the outside unit.

3-11. Selecting and Making a Hole

KH(S)2672R

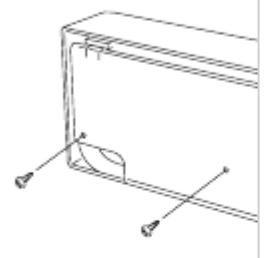

(1) Remove the rear panel from the indoor unit and place it on the wall at the location selected. Make sure the unit is horizontal using a carpenter's level or tape measure to measure down from the ceiling.

(2) Determine which side of the unit you should make the hole. (Fig. 3-21)

(3) Before making a hole, check carefully that no studs or pipes are directly run behind the spot to be cut.

CAUTION

The above precautions are also applicable if tubing goes through the wall in any other location.

(4) Using a sabre saw, key hole saw or hole-cutting drill attachment, cut a hole in the wall. See Table 3-3 and Fig. 3-22.

Table 3-3

Hole Dia. (inch)

3-3/16"
(5) Measure the thickness of the wall from the inside edge to the outside edge and cut PVC pipe at a slight angle 1/4" shorter than the thickness of the wall. (Fig. 3-23)

(6) Place the plastic cover over the end of the pipe (for indoor side only) and insert in the wall.

(Fig. 3-24)

Page 34

Also avoid areas where electrical wiring or conduits are located.

Set screws for transportation only

Fig. 3-19

Left-rear tubing

Fig. 3-20

In case of left-rear or right-rear tubing

Center of left-rear tubing hole

Fig. 3-21

Hole should be made at a slight downward slant to the outdoor side.

Indoor side
Outdoor side

Fig. 3-22

INSIDE

Plastic cover (Field supply)

Fig. 3-24

34

Right-rear tubing (recommended)

Right tubing

Center of right-rear tubing hole





PVC pipe (locally purchased)

Cut at slight angle

Fig. 3-23

OUTSIDE

Wall

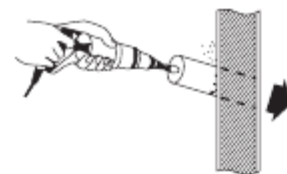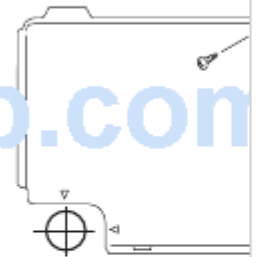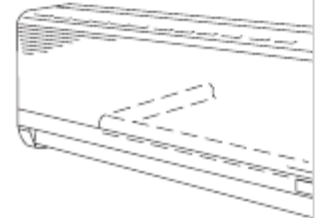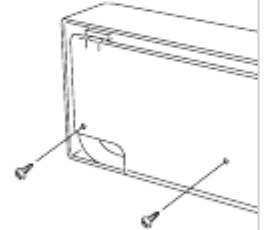

ManualsLib.com

Table of Contents

[Previous Page](#)
[Next Page](#)

1
...
31
32
33
34
35
36
37
38

Quick Links:

[Indoor Unit](#)

[Trouble Diagnostics](#)

Related Manuals for Sanyo C4272R S/C

[Air Conditioner Sanyo C4272R Service Manual](#)

Sanyo split system air conditioner service manual (181 pages)

[Air Conditioner Sanyo CH1872 Technical & Service Manual](#)

Dc inverter split system air conditioner (111 pages)

[Air Conditioner Sanyo 26 series Installation Instructions Manual](#)

Split system heat pump air conditioner (110 pages)

[Air Conditioner Sanyo RCS-BH80UA.WL Instruction Manual](#)

Split system air conditioner (48 pages)

[Air Conditioner Sanyo C3072R Parts List](#)

Outdoor unit (4 pages)

[Air Conditioner Sanyo KH3672R Parts List](#)

Sanyo air conditioner parts list (4 pages)

[Air Conditioner Sanyo CH3672R Parts List](#)

Outdoor unit (4 pages)

[Air Conditioner Sanyo THHW3672R Parts List](#)

Sanyo air conditioner parts list (4 pages)

[Heat Pump Sanyo 26THW72R Specifications](#)

Ceiling suspended heat pump (2 pages)

[Air Conditioner Sanyo 26UW72R Specifications](#)

Concealed duct air conditioner (2 pages)

[Air Conditioner Sanyo 36KHS72R Datasheet](#)

Wall mounted heat pump (2 pages)

[Air Conditioner Sanyo 36UW72R Specifications](#)

Concealed duct air conditioner (2 pages)

[Air Conditioner Sanyo KHS3672R Datasheet](#)

Wall mounted air conditioner (2 pages)

[Air Conditioner Sanyo THW3672R Specifications](#)

Ceiling suspended air conditioner (2 pages)

[Air Conditioner Sanyo XHW2672R Specifications](#)

Ceiling recessed air conditioner (2 pages)

[Air Conditioner Sanyo 30K72R Dimensional Information](#)

Sanyo air conditioner data sheet (1 page)

Related Content for Sanyo C4272R S/C

[SPW-X483GH56 Wall-Mounted Type \(K Type\)](#)

Sanyo SPW-X483GH56

[26 series I Wall-Mounted Type \(K Type\)](#)

Sanyo 26 series

[SPW-CR365GXH56 Wall-Mounted Type \(K Type\)](#)

Sanyo SPW-CR365GXH56

[KH2442 / CH2442 Wall-Mounted Type](#)

Sanyo KH2442 / CH2442

[CH2442 Wall-Mounted Type \(Kh Type\)](#)

Sanyo CH2442

[W-3WAY ECO-i 85464369098000 Wall-Mounted Type \(K Type\)](#)

Sanyo W-3WAY ECO-i 85464369098000

[Mini ECO-i 85464359981002 I Wall-Mounted Type \(K Type\)](#)

Sanyo Mini ECO-i 85464359981002

[ECO R410A Wall-Mounted Type \(K Type\)](#)

Sanyo ECO R410A

This manual is also suitable for:

[Ch4272r h/pUhw2672rUhw3672r26khs72r26ks72r26uhw72r ...](#) [Show all](#)