

Wired Remote Controller Installation - Sanyo C4272R S/C Installation Instructions Manual

Sanyo split system heat pump air conditioner installation instructions

1

2

3

4

5

Table Of Contents

6

7

8

9

10

11

12

13

14


15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111



•

[Table of Contents](#)

•

Bookmarks



07-115 SSHP_II
5/7/07
4:00 PM

6-2. Wired Remote Controller Installation

CAUTION


(1) When you open the decorative cover, you will see two gaps under the remote controller. Insert a coin into these gaps and pry off the back case.

(Fig. 6-4)

(2) Attach the back case with the 2 small screws provided. Using a screwdriver, push open the cut-outs on the back case. These holes are for screws. Use the spacers and take care not to tighten the screws excessively. If the back case will not seat well, cut the spacers to a suitable thickness.

(Fig. 6-3)

(3) Connect the remote controller wiring (2 wires) cor-



rectly to the corresponding terminals in the electrical component box of the indoor unit.

CAUTION

(4) To finish, fit the back tabs of the case into the remote controller and mount it.

Page 61

G

Do not supply power to the unit or try to operate it until the tubing and wiring to the outdoor unit are completed.

G

Do not twist the control wiring with the power wiring or run it in the same metal conduit, because this may cause malfunction.

G

Install the remote controller away from sources of electrical noise.



G

Install a noise filter or take other appropriate action if electrical noise affects the power supply circuit of the unit.



G

If local electrical codes allow, this remote controller can be mounted using a conventional wall box for flush mounting.

When wiring, do not connect the remote controller wires to the adjacent terminal block for the power wiring. Otherwise, the unit will break down.

M4 x 25

Screws (2)

Wired remote controller

Decorative cover

Fig. 6-3

Control panel

Gap

Coin

Fig. 6-4

61

Concealed box for 1

Spacer

Under case

(Back case)

Gap



ManualsLib.com

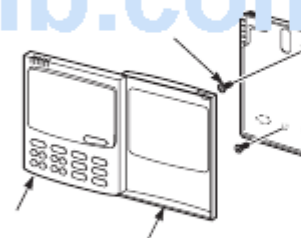


Table of Contents

[Previous Page](#)
[Next Page](#)

1
...
58
59
60
61
62
63
64
65

Quick Links:

[Indoor Unit](#)

[Trouble Diagnostics](#)

Related Manuals for Sanyo C4272R S/C

[Air Conditioner Sanyo C4272R Service Manual](#)

Sanyo split system air conditioner service manual (181 pages)

[Air Conditioner Sanyo CH1872 Technical & Service Manual](#)

Dc inverter split system air conditioner (111 pages)

[Air Conditioner Sanyo 26 series Installation Instructions Manual](#)

Split system heat pump air conditioner (110 pages)

[Air Conditioner Sanyo RCS-BH80UA.WL Instruction Manual](#)

Split system air conditioner (48 pages)

[Air Conditioner Sanyo C3072R Parts List](#)

Outdoor unit (4 pages)

[Air Conditioner Sanyo KH3672R Parts List](#)

Sanyo air conditioner parts list (4 pages)

[Air Conditioner Sanyo CH3672R Parts List](#)

Outdoor unit (4 pages)

[Air Conditioner Sanyo THHW3672R Parts List](#)

Sanyo air conditioner parts list (4 pages)

[Heat Pump Sanyo 26THW72R Specifications](#)

Ceiling suspended heat pump (2 pages)

[Air Conditioner Sanyo 26UW72R Specifications](#)

Concealed duct air conditioner (2 pages)

[Air Conditioner Sanyo 36KHS72R Datasheet](#)

Wall mounted heat pump (2 pages)

[Air Conditioner Sanyo 36UW72R Specifications](#)

Concealed duct air conditioner (2 pages)

[Air Conditioner Sanyo KHS3672R Datasheet](#)

Wall mounted air conditioner (2 pages)

[Air Conditioner Sanyo THW3672R Specifications](#)

Ceiling suspended air conditioner (2 pages)

[Air Conditioner Sanyo XHW2672R Specifications](#)

Ceiling recessed air conditioner (2 pages)

[Air Conditioner Sanyo 30K72R Dimensional Information](#)

Sanyo air conditioner data sheet (1 page)

Related Content for Sanyo C4272R S/C

[XS1271 Wired Remote Controller](#)

Sanyo XS1271

[XHS3632 Service Functions Of Optional Wired Remote Controller](#)

Sanyo XHS3632

[XHS1271 Wired Remote Controller](#)

Sanyo XHS1271

[XS1872 Wired Remote Controller](#)

Sanyo XS1872

[12XHS71 Wired Remote Controller](#)

Sanyo 12XHS71

[XMHS1272 Wired Remote Controller](#)

Sanyo XMHS1272

[XMS1272 Wired Remote Controller](#)

Sanyo XMS1272

[SPW-C0705DZH8 Installation Manual For Timer Remote Controller](#)

Sanyo SPW-C0705DZH8

This manual is also suitable for:

[Ch4272r h/pUhw2672rUhw3672r26khs72r26ks72r26uhw72r ...](#) [Show all](#)