



Whirlpool 2180633 Use And Care Manual

Automatic ice maker

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48

• PAGE

1

OF 48 GO

-

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

--


Available languages

EN

FR

Quick Links

[Download this manual](#)

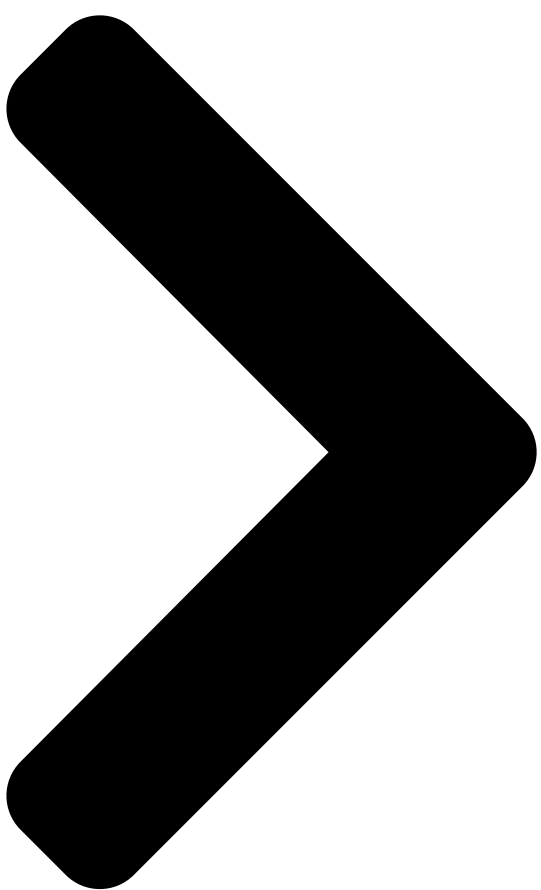

VL E@ 8

01

Applanc04



UseAndCare

[A Note to You](#) 2
[Ice Maker Safety](#) 3

Use And Cai

[Parts and Features](#) 4

[Using Your](#)

[Ice Maker](#) 5

[Cleaning Your](#)

[Ice Maker](#) 9

[Vacation and](#)

[Moving Care](#) 15

[Troubleshooting](#)

. 16

[Requesting Assistance](#)

[or Service](#) 17

[Index](#) 19

[Warranty](#) 20-21

1-800-253-1 301

Call our Consumer
Assistance
Center
with questions
or comments
from
anywhere
in the U.S.A.

**AUTOMATIC
ICE MAKER**

Part No. 2180633
1 0/94
1' 4 14



Use And Care

G U I D E



[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool 2180633

[Ice Maker Whirlpool 2208357 Use And Care Manual](#)

Whirlpool ice maker 2208357 use & care guide (36 pages)

[Ice Maker Whirlpool W10136155B Use And Care Manual](#)

Whirlpool ice maker use & care guide (28 pages)

[Ice Maker WHIRLPOOL 2217406-D-WH Dimension Manual](#)

(1 page)

[Ice Maker Whirlpool 2180913 Installation Manual](#)

Automatic ice maker (18 pages)

[Ice Maker Whirlpool 2180911 Installation Instructions](#)

Automatic ice maker (5 pages)

[Ice Maker Whirlpool ECKMF94 - Automatic Ice Maker Installation Manual](#)

Modular ice maker kit (28 pages)

[Ice Maker Whirlpool ICE MAKER User Manual](#)

Whirlpool ice maker (17 pages)

[Ice Maker Whirlpool AGB 022 Service Manual](#)

Ice cube maker (5 pages)

[Ice Maker Whirlpool AGH 326/01/G/NE Service Manual](#)

Ice cube maker (5 pages)

[Ice Maker Whirlpool R-106 Training Manual](#)

Ice maker familiarization and troubleshooting (34 pages)

[Ice Maker Whirlpool IC13B Installation And Operating Instructions Manual](#)

Bottom freezer refrigerator ice maker kit (41 pages)

[Ice Maker Whirlpool W10190965 Installation Instructions](#)

(2 pages)

[Whirlpool WUI95X15HZ - 15-inch Icemaker with Clear Ice Technology Manual](#)

(article)

[Ice Maker Whirlpool W11517113 Installation Manual](#)

(32 pages)

[Ice Maker Whirlpool K20 Instructions For Use And Installation](#)

Integral icemaker (8 pages)

[Ice Maker Whirlpool Ice Maker Instructions For Use Manual](#)

(21 pages)

Summary of Contents for Whirlpool 2180633

[Page 1: Table Of Contents](#)

VL E@ 8 UseAndCare AUTOMATIC Part No. 2180633 1 O/94 Applanc04 A Note to You2 Ice Maker Safety ... 3 Parts and Features .

[Page 2: A Note To You](#)

Thank you for choosing one of our quality products. You have made an excellent choice. Michel Trudel General Manager Inglis Limited appliance. Whirlpool Ice Makers are easy to Registration Card provided with your appliance. This information. Model Number Serial Number Purchase Date...

[Page 3: Ice Maker Safety](#)

Ice Maker Safety Your safety is important to us. This guide contains statements under warning symbols. Please pay special attention to these symbols and follow any instructions given. Here is a brief explanation of the use of the warning symbol. IMPORTANT SAFETY Read all instructions...

[Page 4: Parts And Features](#)

Parts and Features This section contains captioned illustrations with the location and appearance of all parts and features. (not shown) Ice retainer baffle Lower access your appliance. Use them to become familiar Ice thickness...

[Page 5: Using Your](#)

Using Your Ice Maker In order to obtain the best possible results from your ice maker, you must operate it properly. This section will tell you how to do just that. Understanding how your ice maker 1. Water is constantly circulated over a freezing plate.

[Page 6: Ice Maker](#)

Setting the controls 1. Select ice thickness. The ice maker has been preset to produce ice approximately 1/2" (13 mm) thick, while operating in a room temperature of 70°F (21°C). Operation in different room temperatures may require readjusting the control toward "THICK"...

[Page 7](#) 6. Replace the handle insert and tighten the screws in both side trim pieces. Replace the handle and the screws. NOTE: You can make a decorative wood front to match existing cabinets. The panel Changing the lower Electrical Shock Hazard Do not operate ice maker with lower access panel or control panel removed.

[Page 8](#) Changing the light Electrical Shock Hazard Before removing the light bulb, either unplug the ice maker or disconnect the electricity leading to the ice maker at the main power supply. Shock and injury can occur if electricity remains connected. The ice maker has a light bulb in the top of the storage bin.

[Page 9: Cleaning Your](#)

Cleaning Your Ice Maker Periodically inspect and clean the ice maker to keep it operating at peak efficiency and to prevent premature failure of system components. Both the ice making system and the air cooled condenser need to be cleaned regularly.

[Page 10: Ice Maker](#)

Cleaning the condenser Personal Injury and Product Damage Hazard Be sure the ice maker is OFF and disconnected from the main power supply. Unit could suddenly start if not disconnected. Condenser fan rotation, sharp condenser fins, and hot tubing could cause personal injury. Condenser fins can bend easily.

[Page 11](#) Cleaning the ice maker Personal Injury Hazard Most ice machine cleaners are citric or phosphoric acid which can cause irritation even after dilution. In case of contact with eyes, flush eyes thoroughly with fresh water and contact a physician immediately. In case of contact with skin, rinse well with water.

[Page 12](#) 6. Pour 2 quarts (2 L) of hot water into the water pan and turn the cycle control to "CLEAN." This step warms up the system and allows the cleaning solution to be more effective. Allow to circulate 5 minutes. Turn switch to "OFF" and drain. Prepare the cleaning solution by thoroughly mixing 6 oz.

[Page 13](#) Cleaning the interior Electrical Shock and Product Damage Hazard Do not operate ice maker with lower access panel or control panel removed. Electrical shock or personal injury could result. Do not wash plastic parts in dishwasher. They cannot withstand temperatures

above 145°F (63°C).

Page 14 6. Remove the water distributor from the freezing plate. It is held in place by rubber end caps. Remove the inlet hose and clean all water distributor holes and the small orifices in the inlet side of the distributor. When replacing the distributor, make sure the end caps are located in the evaporator flange detents and that the water distributor holes face down.

Page 15: Moving Care

Vacation and Moving Electrical Shock Hazard Make sure the ice maker is disconnected from the main power supply before removing lower access panel. Failure to do so could result in electrical shock or personal injury. To shut down the ice maker: Turn the Cycle Control Knob to "OFF," ...

Page 16: Troubleshooting

Troubleshooting Performance problems often result from little things you can find and fix without tools of any kind. Please check the chart below for problems you can fix. It could save you the cost of a service call. PROBLEM Unit does not Cycle Control Knob must be in the "CM"...

Page 17: Or Service

Whirlpool appliance. To locate FSP replacement parts in your area, refer to Step 2 or call the Whirlpool Consumer Assistance Center number in Step 1. 4. If you are not satisfied...

Page 18 For service or assistance 1. If the problem is not due to one of the items listed "Troubleshooting" ... Contact the dealer from whom you purchased your appliance or your nearest Inglis Limited Appliance Service Branch. Please include a daytime phone number in your correspondence.

Page 19: Index

Index This index is alphabetical. Look for the word or phrase you are interested in, then look for the page number. TOPIC CARE Moving .. Vacation15 CLEANING .

Page 20: Warranty

Outside the United States or Canada, a different warranty may apply. For details, please contact your authorized Whirlpool distributor or military exchange. If you need service, first see the "Requesting Assistance or Service" section of this book. After checking "Requesting..."

Page 21: Warranty

WARRANTY (Canada) Dear Customer: Good performance. That's what our warranty is all about. Here's how the good performance that you expect from your Ice Maker is protected. WARRANTY During the first year after purchase, all parts of the appliance which prove to be defective in materials or workmanship will be repaired or replaced free of charge (parts and labour).

Page 22 Printed on recycled paper - 100% post-consumer waste. 509Lrecmmedmmlehh Printed In U.S.A © 1994 Whirlpool Corporation. Registered Trademark of Whirlpool. U.S.A.

Page 23 MACHINE A GLACONS AUTOMATIQUE Pike no 2180633 1 0/94 et d'entretien Veuillez noter Sécurité de la machine à glacons Pikes et caractéristiques Utilisation de la machine & glacons Nettoyage de la machine à glacons Précautions & prendre pour les...

Page 24 Michel Trudel Directeur général Inglis Limitée électroménager Whirlpool® et plus compliquée, les machines à glacons Whirlpool du temps et aident à mieux administrer votre foyer. Pour et d'entretien. Il est plein de renseignements et en sécurité. du propriétaire fournie concernant votre Numéro de modèle...

Page 25 Sécurité de la machine à glacons Votre sécurité nous tient Ce guide contient des instructions de sécurité sous des symboles d'avertissement. accorder une attention particulière & ces symboles et observer toutes les instructions qui les accompagnent. Voici une brève explication du sens de ce symbole. IMPORTANTES INSTRUCTIONS Afin de réduire les risques d'incendie, de choc électrique ou...

Page 26 Pikes et caractéristiques On présente dans cette section une illustration de l'appareil

identifiint L'utilisateur doit s'en servir pour se familiariser avec l'emplacement composants, et avec les caractéristiques Plaque signal&ique numéros mod& de sCrie (non illustrée) Panneau retenue de8 glacona (P. 16) Panneau de la Porte d'accia...

Page 27 Utilisation de la machine glaGons Il nvnient d'utiliser la machine & glacons wrrectement C'est pr&cis&ment ce que d&it cette section. Comment fonctionne 1. L'eau circule wnstantment sur un plateau de cong&lation. Tandis que l'eau se cong&le, les min&raux qu'elle wntient exp&Ms.

Page 28 R&glage des commandes 1. R&gler la commande de M&aisseur glace. La machine a glacons a &te pr®&ee pour produire des plaques de glace d'environ 1.3 cm ('12 d'&aisseur, dans une p&ce air la temp&erature ambiante est de 21 °C (70 °F). Si la machine se trouve dans une p&ce air la temp&erature est diff&rente,...

Page 29 Changement du panneau 3 glacons Le panneau de la porte du bat B glacons peut facilement Gtre change par un panneau de couleur diff&rente. Deux couleurs sent disponibles : noir et blanc. Pour remplacer IO panneau : Ouvrir la porte du bat B glacons. Enlever les deux vis situe&es au sommet de la porte et servant &...

Page 30 Changement du panneau inf&rieur Risque de choc Electrique Ne pas utiliser la machine A glacons lorsque le panneau de la porte d'acc&es inf&rieure ou le tableau de commande est enlev&e. Il pourrait y avoir un risque de choc electrique ou de blessures. 1.

Page 31 3. Faire gliir soigneusement le panneau vers rext&rieur. 4. Choisir la couleur B montrer et refaire glisser soigneusement le panneau dans la porte d&c&s inf&rieure. REMARQUE : Faire attention & ne pas &gratigner le panneau brsq&on l'ins&re. 5. Remplacer la garniture sup&rieure et les vis.

Page 32 3. Appuyer sur le devant du prot&ge-ampoule tout en tirant vers le bas afin de retirer l'ampoule de son support. 4. Enlever l'ampoule et la remplacer par une ampoule de 12 watts I culot en forme de coin. 5. Remettre en place le proth&ge-ampoule, plateau quadrille et les deux vis 21 ailettes.

Page 33 Nettoyage de la machine glaGoris - V&ifier et nettoyer pkodiquement machine a glacons afin qu'elle continue a bien fonctionner et pour pr&venir toute panne prematuree de ses composants. Le dispositif de fabrication des glacons et le condenseur 31 refroidissement par air doivent &re nettoys&es r&gulierement.

Page 34 Nettoyage du condenseur Risque de blessures et de dommages pour le produit S'assurer que la machine B glacons est r&gl&e a position "OFF et qu'elle est d&branch&e. L'appareil pourrait se mettre subitement en marche s'il n'est pas d&branch&e rotation du ventilateur du condenseur, les ailettes coupantes du condenseur chaleur des tuyaux risqueraient de causer des blessures.

Page 35 Nettoyage du dispositif glaGons Risque de blessures La plupart des produits de nettoyage pour machines B glacons sont des acides citriques ou phosphoriques m&me dilu&es, peuvent causer des irritations. Si un tel produit entre en contact avec les yeux, bien rincer les yeux a l'eau Claire et appeler imm&diatement un m&kin.

Page 36 MISE EN GARDE : s'il y a de la glace sur le plateau quadrille, la faire fondre en passant le plateau sous l'eau chaude. Toute tentative d'enlever la gtace par tout autre moyen que ce soit risquerait d'&tirer ou d'endommager les fils formant le quadrillage.

Page 37 7. Verser la solution de nettoyage dans la cuve h eau et mettre le bouton de wmm&nde sur c-&LEAN>> (nettoyage). Si la solution fait de la mousse pendant qu'on la verse, la laker se resorber avant de verser le reste du liquide. kisser circuler la solution aussi longtemps que le tartre n'est pas dissous.

Page 38 Nettoyage des Mments Risque de choc Electrique et de dommages pour le produit Ne pas faire fonctionner la machine A glacons lorsque le panneau de la porte d'acc&s inf&rieure ou le tableau de wmm&nde est enlev&e. Il pourrait y avoir un risque de choc electrique ou de blessures.

Page 39 5. Detacher le tyau de la pompe A eau. 6. Sortir le distributeur d'eau du plateau de

congelation qui est maintenu en place par des embouts en caoutchouc. Enlever le tuyau d'arrière d'eau et nettoyer tous les trous du distributeur d'eau et le petit orifice situé sur le c&g de l'arrivée d'eau du distributeur.

[Page 40](#) 10. Brancher de nouveau le faisceau de fils conducteurs, remettre en place le plateau quadrille et serrer les vis à ailettes. Replacer le panneau de retenue des glaçons. 11. Tourner le bouton de commande à "ON". Filtration et traitement Dans la plupart des régions, il s'avère avantageux de filtrer ou de traiter l'eau qui alimente la machine à glaçons.

[Page 41](#) Précautions les vacances Démontage Risque de choc électrique S'assurer que la machine & glaçons débrancher de l'alimentation principale avant d'enlever le panneau de la porte d'accès inférieure. Le non-respect de cette instruction peut être l'origine d'un choc électrique ou de blessures.

[Page 42](#) Dépannage Les problèmes de rendement sont souvent de détecter et de régler vous-même sans outils d'aucune sorte. Veuillez vérifier les points suivants pour voir les problèmes que vous pouvez économiser le coût d'un appel de service. PROBLÈME L'appareil ne bouton de commande du cycle doit être réglé à "ON" (marche). fonctionne pas Vérifier si le bouton d'alimentation Vérifier si un fusible a sauté ou si le disjoncteur...

[Page 43](#) @\$.s de remplacement . . . FSP est une marque déposée de la Corporation Whirlpool pour les pièces de qualité. Recherchez ce symbole de qualité chaque fois que vous avez besoin d'une pièce de remplacement pour votre appareil ménager Whirlpool.

[Page 44](#) Pour appel d'aide 1. Si cause problème n'a été mentionnée dans section "Dépannage"... Contactez le concessionnaire chez qui vous avez acheté votre appareil ménager ou votre succursale de service Inglis Limited. Veuillez inclure un numéro de téléphone air l'on peut vous joindre pendant la journée.

[Page 45](#) Index Cet index est dans l'ordre alphabétique. Intéressé, puis regardez le numéro de la page. SUJET AMPOULE D'ÉCLAIRAGE9 Remplacement BESOINS D'ÉLECTRICITÉ~ .

[Page 46](#) Ce produit est conçu non autorisées POUR DES DOMMAGES DIRECTS OU et vous pouvez aussi avoir d'autres peut s'appliquer. autorise Whirlpool ou bureau militaire. pour par nous. 6104 Pour les peut être...

[Page 47](#) Garantie (Canada) Cher client, Une bonne performance. Voici l'objet de notre garantie. Et voici comment est protégée la performance que vous attendez de votre machine à glaçons. GARANTIE DE VOTRE Au cours de la première année suivant l'achat. toutes les pièces tant un vice de matériau ou de fabrication seront réparées ou remplacées (pièces)...

[Page 48](#) 0 lire4 Whirlpool ccqratbl...