



Whirlpool WMH32L19AS Dimensions

1.9 cu. ft. microwave hood combination with 4-speed fan

1

--

•

Bookmarks

--

[Download this manual](#)

Quick Links

PRODUCT MODEL NUMBERS

GMH3204XV
WMH1160XV
GMH5205XV
WMH2175XV
GMH6185XV

WMH2205XV

WMH1162XV


WMH3205XV

WMH1163XV

Electrical: A 120-Volt, 60-Hz, AC-only, 15- or 20-amp fused electrical supply with a fuse or circuit breaker. A time-delay fuse or time-delay circuit breaker is recommended. It is recommended that a separate circuit serving only this microwave oven be provided.

VENTING REQUIREMENTS

A 3 " x 10" (8.3 x 25.4 cm) rectangular or 6" (15.2 cm) round vent should be used. The total length of the vent system including straight vent, elbow(s), transitions and wall or roof caps must not exceed the equivalent of 140 ft (42.7 m) for either type of vent.

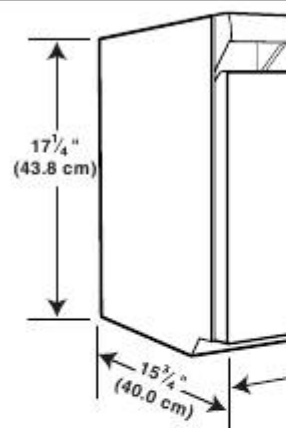

For best performance, use no more than three 90° elbows.

To calculate the length of the system you need, add the equivalent length for each vent piece used in the system. See the following examples:

A
B
D
E

A. Rectangular to round transition piece: 3" x 10" to 6" = 5 ft
(8.3 x 25.4 cm to 15.2 cm = 1.5 m)

B. Roof cap: 3" x 10" = 24 ft (8.3 x 25.4 cm = 7.3 m)

C. 90° elbow: 3" x 10" = 25 ft (8.3 x 25.4 cm = 7.6 m)

D. 90° elbow: 6" = 10 ft (15.2 cm = 3 m)

E. Wall cap: 3" x 10" = 40 ft (8.3 x 25.4 cm = 12.2 m)

F. 45° elbow: 6" = 5 ft (15.2 cm = 1.5 m)

G. 90° flat elbow: 3" x 10" = 10 ft (8.3 x 25.4 cm = 3 m)

6" (15.2 cm) vent system = 73 ft (22.2 m) total

A

6 ft (1.8 m)

2 ft

A. Two 90° elbows = 20 ft (6.1 m)

(0.6 m)

B. 1 wall cap = 40 ft (12.2 m)

C. 1 rectangular to round transition

D. 2 ft (0.6 m) + 6 ft (1.8 m)

C

D

3" x 10" (8.3 x 25.4 cm) vent system = 73 ft (22.2 m) total

A

6 ft (1.8 m)

2 ft

(0.6 m)

C

A. One 3" x 10" (8.3 x 25.4 cm) 90° elbow = 25 ft (7.6 m)

B. 1 wall cap = 40 ft (12.2 m)

C. 2 ft (0.6 m) + 6 ft (1.8 m) straight = 8 ft (2.4 m)

Because Whirlpool Corporation policy includes a continuous commitment to improve our products, we reserve the right to change materials and specifications without notice.

Microwave Hood Combination

WMH31017A

WMH32517A

WMH53520A

WMH32L19A

WMH73L20A

C

F

G

B

piece = 5 ft (1.5 m)

straight = 8 ft (2.4 m)

B

B

PRODUCT DIMENSIONS

CABINET OPENING DIMENSIONS

The grounded 3-prong outlet must be inside the upper cabinet.

69" (175.3 cm) min.

*30" (76.2 cm) is typical for 66" (167.6 cm) installation height.

Exact dimensions may vary depending on type of range/cooktop below.

Rectangular to Round Transition for Roof Venting

NOTE: The minimum 3" (7.6 cm) clearance must exist between

the top of the microwave oven and the rectangular to round transition piece so that the damper can open freely and fully.

A



B

C


3" (7.6 cm)

Dimensions are for planning purposes only. For complete details, see Installation Instructions packed with product. Specifications subject to change without notice.

A

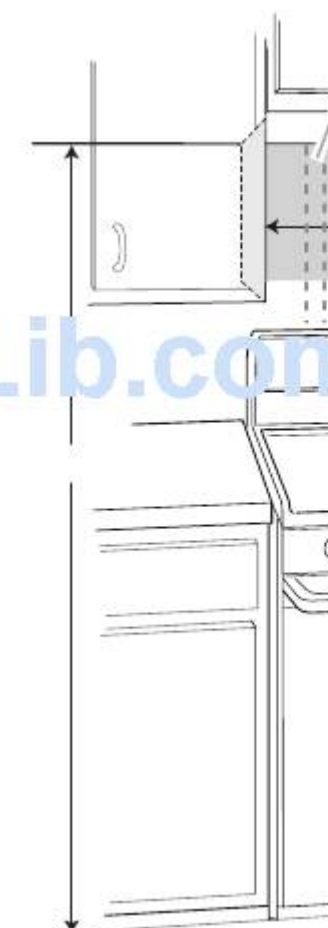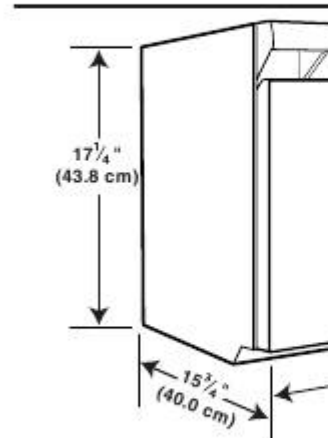

B
 12" (30.5 cm) min.
 13" (33.0 cm) max.
 upper cabinet and
 30"
 side cabinet depth
 (76.2 cm)
 min.
 33"
 (83.8 cm)
 typical*
 A. 2" x 4" wall stud
 B. Grounded 3-prong outlet
 D
 A. Roof cap
 B. 6" (15.2 cm) min. diameter round vent
 C. Elbow (for wall venting only)
 E
 D. Wall cap
 E. 3" x 10" to 6" (8.3 x 25.4 cm to 15.2 cm)
 F
 rectangular to round transition piece
 F. Vent extension piece, at least 3" (7.6 cm) high
Ref. W10247296B
 3/28/12

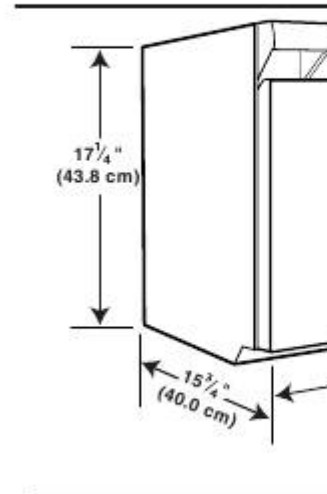

Related Manuals for Whirlpool WMH32L19AS

[Microwave Oven Whirlpool WMH32L19AS User Instructions](#)

1.9 cu. ft. microwave hood combination with 4-speed fan (9 pages)

[Microwave Oven Whirlpool WMH32517AB Warranty Information](#)

Warranty information (1 page)

[Microwave Oven Whirlpool GMH3204XV Installation Instructions Manual](#)

Microwave hood combination (21 pages)

[Microwave Oven Whirlpool W10238252A Installation Instructions Manual](#)

Whirlpool microwave hood combination installation instructions (12 pages)

[Microwave Oven Whirlpool GMH5205XVB User Instructions](#)

Microwave hood combination (8 pages)

[Microwave Oven Whirlpool W10249249A User Instructions](#)

Whirlpool microwave hood combination user instructions (8 pages)

[Microwave Oven Whirlpool WMH31017AD User Manual](#)

(7 pages)

[Microwave Oven Whirlpool WMH31017AW User Instructions](#)

1.7 cu. ft. microwave hood combination with 2-speed fan (6 pages)

[Microwave Oven Whirlpool 461966100611 User Instructions](#)

Whirlpool microwave hood combination user instructions (6 pages)

[Microwave Oven Whirlpool GMH3174XV Dimensions](#)

Microwave hood combination (1 page)

[Microwave Oven Whirlpool WMH31017AB Warranty Information](#)

Warranty information (1 page)

[Microwave Oven Whirlpool WMH75520AB Dimensions](#)

Dimension guide (1 page)

[Microwave Oven Whirlpool WMH31017 Installation Instructions](#)

(1 page)

[Microwave Oven Whirlpool WMH32519FB User Manual](#)

Microwave hood combination (8 pages)

[Microwave Oven Whirlpool WMH31017HS User Manual](#)

Microwave hood combination (6 pages)

[Whirlpool WMH31017HS - 1.7 cu. ft. Microwave Hood Combination with Electronic Touch Controls Manual](#)

(article)

Related Products for Whirlpool WMH32L19AS

[Whirlpool W10120482A](#)

[Whirlpool WMH32519CS](#)

[Whirlpool WMH32519HV](#)

[Whirlpool WMH31017](#)

[Whirlpool WMH31017HS](#)

[Whirlpool WMH1162XVD - 1.6 cu. ft. Microwave-Range Hood Combination](#)

[Whirlpool WMH11015](#)

[Whirlpool WMH53520CW](#)

[Whirlpool WMH53520CH](#)

[Whirlpool WMH53520CS](#)

[Whirlpool WMHA9019](#)

[Whirlpool WMHA9019EN](#)

[Whirlpool WMH78519LV](#)

[Whirlpool WMH78019HV](#)

[Whirlpool WMH53521HZ](#)

[Whirlpool WMH76719CH](#)

This manual is also suitable for:

wmh3205xvq wmh3205xvs **wmh73l20as** gmh5205xvb gmh5205xvq gmh5205xvs ... [Show all](#)