



# Power And The Batteries - Toshiba P100-ST1072 User Manual

P100-st1072 user's guide



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

Table Of Contents

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217



218  
219  
220  
221  
222  
223  
224  
225  
226  
227  
228  
229  
230  
231  
232  
233  
234  
235  
236  
237

|  |
|--|
|  |
|--|

•


[Table of Contents](#)

•

Bookmarks

|  |
|--|
|  |
|--|



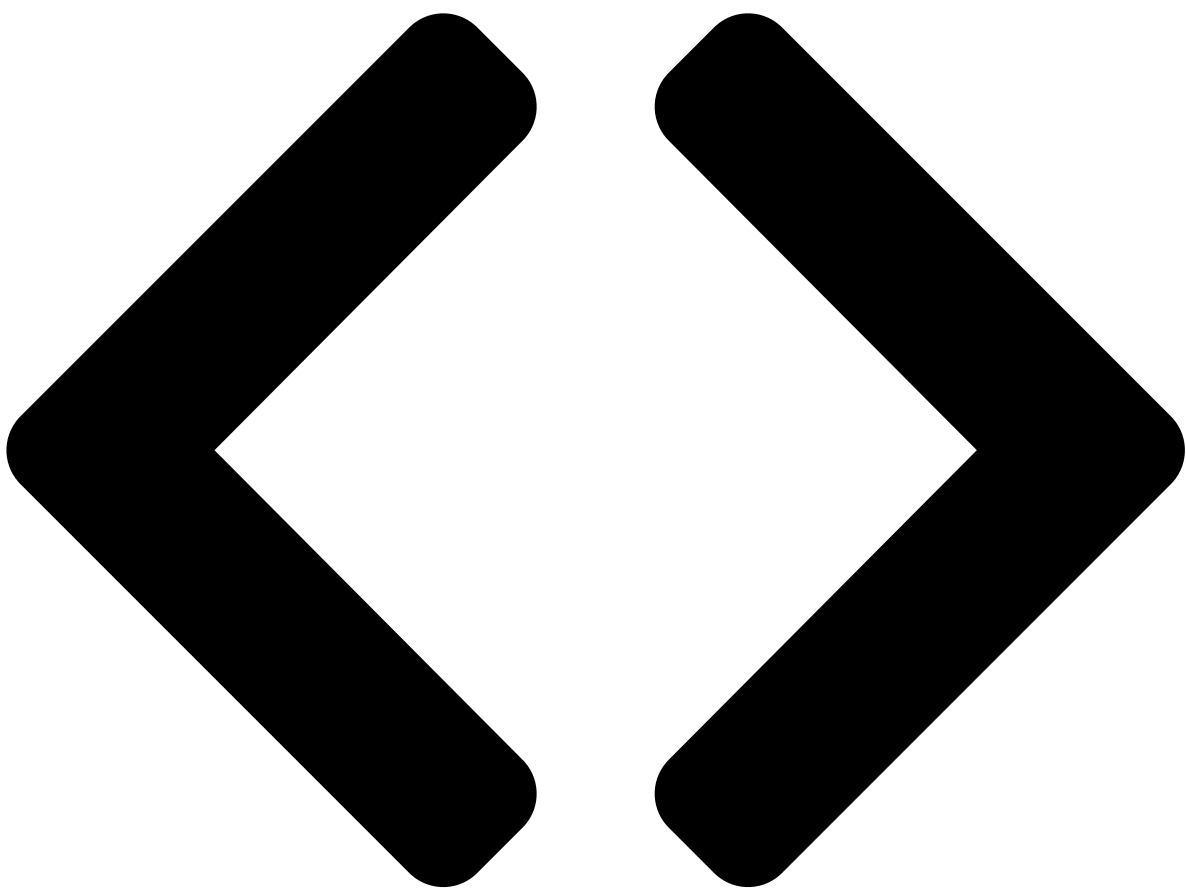

# 178

## **If Something Goes Wrong**

---

*Resolving a hardware conflict*

### **Power and the batteries**

Your computer receives its power through the AC adaptor and power cord/cable or from the system batteries (battery, optional secondary battery, and real-time clock (RTC) battery). Power problems are interrelated. For example, a faulty AC adaptor or

power cord/cable will neither power the computer nor recharge the batteries.

Here are some typical problems and how to solve them:

**The AC power light does not come on when you plug in the AC adaptor and power cord/cable.**

Make sure the AC adaptor and power cord/cable are firmly plugged into both the wall outlet and the computer.

If the AC power light still does not come on, check that the wall outlet is working properly by plugging in a lamp or other appliance.

**The AC adaptor and power cord/cable work correctly, but the battery will not charge.**

The battery does not charge while the computer is consuming full power. Try turning off the computer.

The battery may not be inserted correctly in the computer. Turn off the computer, remove the battery, clean the contacts with a soft dry

cloth (if necessary) and replace the battery. See [battery from the computer" on page](#)

The battery may be too hot or too cold to charge properly. If you think this is the probable cause, let the battery reach room temperature and try again.

If the battery has completely discharged, it will not begin charging

immediately. Leave the AC adaptor and power cord/cable connected, wait 20 minutes and see if the battery is charging.

If the battery light is glowing after 20 minutes, let the computer continue charging the battery for at least another 20 minutes before

---

you turn on the computer.

If the battery light does not glow after 20 minutes, the battery may have reached the end of its useful life. Try replacing it.

**The battery appears not to power the computer for as long as it usually does.**

If you frequently repeat shallow charge and discharge, the battery

meter may become inaccurate. Let the battery discharge completely, then try charging it again.

["Removing the](#)

111.

[Table of Contents](#)



[Previous Page](#)  
[Next Page](#)

1

...

177

178

179

180

## Related Manuals for Toshiba P100-ST1072

### [Laptop Toshiba Satellite P100-ST1072 Series Specifications](#)

Toshiba satellite p100-st1072: specifications (8 pages)

### [Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

### [Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

### [Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

### [Laptop Toshiba P100-ST9732 User Manual](#)

P100-st9732 user's guide (278 pages)

### [Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

### [Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

### [Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

### [Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

### [Laptop Toshiba Satellite P105-S6157 Specifications](#)

Toshiba satellite p105-s6157: specifications (11 pages)

### [Laptop Toshiba Satellite P105-S6177 Specifications](#)

Toshiba satellite p105-s6177: specifications (11 pages)

### [Laptop Toshiba Satellite P105-S6197 Specifications](#)

Toshiba satellite p105-s6197: specifications (11 pages)

### [Laptop Toshiba Satellite P105-S6207 Specifications](#)

Toshiba satellite p105-s6207: specifications (11 pages)

### [Laptop Toshiba Satellite P105-S6217 Specifications](#)

Toshiba satellite p105-s6217: specifications (11 pages)

### [Laptop Toshiba Satellite P105-S6227 Specifications](#)

Toshiba satellite p105-s6227: specifications (11 pages)

### [Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

## Related Content for Toshiba P100-ST1072

### [Satellite Click 2 PRO Power And The Batteries](#)

Toshiba Satellite Click 2 PRO

### [Satellite CL40 Series Power And The Batteries](#)

Toshiba Satellite CL40 Series

### [Satellite E40-A Power And The Batteries](#)

Toshiba Satellite E40-A

### [Portege 2010 Power And The Batteries](#)

Toshiba Portege 2010

### [Satellite A35 Series Power And The Batteries](#)

Toshiba Satellite A35 Series

[C50 Series Power And The Batteries](#)

Toshiba C50 Series

[Qosmio X70-A series Power And The Batteries](#)

Toshiba Qosmio X70-A series

[Satellite L40 series Power And The Batteries](#)

Toshiba Satellite L40 series

This manual is also suitable for:

P100-st1071P105-s6147P105-s6148P105-s6157P105-s6158P105-s6167 ... [Show all](#)