



# Chassis And Cabinet Replacement Parts List - Toshiba S5ES Series Service Manual



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50

--

•

[Table of Contents](#)

•

## Bookmarks







## CHASSIS AND CABINET REPLACEMENT PARTS LIST

**WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" ON PAGE 3 OF THIS MANUAL.**

**CAUTION: The international hazard symbols "**

which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals.

Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE. Do not degrade the safety of the receiver through improper servicing.

**NOTICE:**

• The part number must be used when ordering parts, in order to assist in processing, be sure to include the Model number and Description.

• The PC board assembly with

Capacitors ..... CD

:

Ceramic Disk

Resistors ..... CF



:  
 Carbon Film  
 OMF :  
 Oxide Metal Film  
 (All CD and PF capacitors are ±5%, 50V and all resistors, ±5%, 1/6W unless otherwise noted.)

**Location**  
**Parts No.**  
**Description**  
**No.**

[#1: 29CZ5DE]  
 [#2: 29CZ5T]  
 [#3: 29CZ6SI]

**CAPACITORS**

C101  
 76797479  
 ELECTROLYTIC 50V 4.7UF M  
 C102  
 76109103  
 CERAMIC CHIP 50V B 0.01UF K  
 C103  
 76109103  
 CERAMIC CHIP 50V B 0.01UF K  
 C104  
 #1 76109103  
 CERAMIC CHIP 50V B 0.01UF K  
 #3 76109103  
 CERAMIC CHIP 50V B 0.01UF K  
 C105  
 76109103  
 CERAMIC CHIP 50V B 0.01UF K  
 C106  
 76109103  
 CERAMIC CHIP 50V B 0.01UF K  
 C107  
 76109102  
 CERAMIC CHIP 50V B 1000PF K  
 C108  
 76797100  
 ELECTROLYTIC 50V 10UF M  
 C109  
 76797221  
 ELECTROLYTIC 50V 220UF M  
 C110  
 76797221  
 ELECTROLYTIC 50V 220UF M  
 C114  
 76109103  
 CERAMIC CHIP 50V B 0.01UF K  
 C116  
 76109103  
 CERAMIC CHIP 50V B 0.01UF K  
 C121  
 76797100  
 ELECTROLYTIC 50V 10UF M  
 C122  
 76100104  
 CERAMIC CHIP 25V F 0.1UF Z  
 C123  
 76109332  
 CERAMIC CHIP 50V B 3300PF K  
 C124  
 76100104  
 CERAMIC CHIP 25V F 0.1UF Z  
 C125  
 76797229  
 ELECTROLYTIC 50V 2.2UF M  
 C127  
 76797229  
 ELECTROLYTIC 50V 2.2UF M  
 C128  
 76100104  
 CERAMIC CHIP 25V F 0.1UF Z  
 C129  
 76793471  
 ELECTROLYTIC 10V 470UF M  
 C131



76109103  
CERAMIC CHIP 50V B 0.01UF K  
C140  
#2 76000445  
CHIP JUMPER 1608TYPE  
C141

#2 76109103  
CERAMIC CHIP 50V B 0.01UF K  
C142  
#2 76109103  
CERAMIC CHIP 50V B 0.01UF K  
C144

#2 76797100  
ELECTROLYTIC 50V 10UF M  
C145

#2 76100104  
CERAMIC CHIP 25V F 0.1UF Z  
C156  
76105120  
CERAMIC CHIP 50V CH 12PF J  
C157  
76105510  
CERAMIC CHIP 50V CH 51PF J



C158  
76797100  
ELECTROLYTIC 50V 10UF M  
C159  
76100104  
CERAMIC CHIP 25V F 0.1UF Z  
C201

76109682  
CERAMIC CHIP 50V B 6800PF K  
C202

76125006  
E. CAP 25V 1.5UF REA1R5K1EFC-0511  
C203

76503045  
PLASTIC FILM 63V 0.22UF J  
C204

76795100  
ELECTROLYTIC 25V 10UF M  
C205

76109223  
CERAMIC CHIP 25V B 0.022UF K  
C206

76100104  
CERAMIC CHIP 25V F 0.1UF Z  
C211

76100104  
CERAMIC CHIP 25V F 0.1UF Z  
C212

76206010  
ELECTROLYTIC 50V 1.0UF M 7L 3A  
C219

76092729  
CERAMIC CHIP 16V B 0.068UF K  
C220

76503047  
PLASTIC FILM 63V 0.33UF J  
C303

76214471  
CERAMIC DISC 500V B 470PF K  
C308

76669221  
ELECTROLYTIC 50V 220UF M

All manuals and user guides at [all-guides.com](http://all-guides.com)

" in the schematic diagram and the parts list designate components  
mark is no longer available after the end of the production.

\*

**Model: 29CZ5DE/29CZ5T/29CZ6SI**

- 19 -

PF

:

Plastic Film

CC :

Carbon Composition

VR

:

Variable Resistor

**Location**

**Parts No.**

**Description**

**No.**

C309

76667102

ELECTROLYTIC 25V 1000UF M

C310

76667222

ELECTROLYTIC 25V 2200UF M 3A

C313

76082061

PLASTIC FILM 100V 0.47UF J

C315

76109102

CERAMIC CHIP 50V B 1000PF K

C321

76109272

CERAMIC CHIP 50V B 2700PF K

C322

76214471

CERAMIC DISC 500V B 470PF K

C327

76100102

CERAMIC CHIP 50V F 1000PF Z

C328

76693104

PLASTIC FILM 100V 0.1UF J

C329

76100102

CERAMIC CHIP 50V F 1000PF Z

C331

76109472

CERAMIC CHIP 50V B 4700PF K

C333

76667222

ELECTROLYTIC 25V 2200UF M 3A

C335

76667221

ELECTROLYTIC 25V 220UF M

C336

76109272

CERAMIC CHIP 50V B 2700PF K

C350

76503043

PLA CAP PCMT36676154

C363

76693104

PLASTIC FILM 100V 0.1UF J

C401

76105151

CERAMIC CHIP 50V CH 150PF J

C402

76693472

PLASTIC FILM 100V 4700PF J

C413

76214821

CERAMIC DISC 500V B 820PF K

C416

76678479

ELECTROLYTIC 200V 4.7UF M

C417

76214391

CERAMIC DISC 500V B 390PF K

C430

76092731



CERAMIC CHIP 16V B 1UF K

C432

76100102



CERAMIC CHIP 50V F 1000PF Z  
C435  
76794220  
ELECTROLYTIC 16V 22UF M  
C439  
76503125  
PLASTIC FILM 400V 0.075UF J  
C442  
76503298  
PLASTIC FILM 315V 0.3UF J  
C443  
76503194  
PLASTIC FILM 1500VH 0.01UF H  
C444  
76503228  
PLASTIC FILM 1500VH 0.0800PF H  
C447  
76679220  
ELECTROLYTIC 250V 22UF M 3A  
C448  
76640908  
ELECTROLYTIC 160V 33UF M 3A LI  
C449  
76667102  
ELECTROLYTIC 25V 1000UF M  
C463  
76212222  
CERAMIC DISC 50V B 2200PF K  
C464  
76073124  
ELECTROLYTIC 100V 10UF M  
C467  
76503159  
PLASTIC FILM 630V 0.039UF J  
C470  
76766101  
ELECTROLYTIC 50V 100UF M  
C4700  
76109332  
CERAMIC CHIP 50V B 3300PF K  
C4703  
76764221  
ELECTROLYTIC 25V 220UF M  
C4712  
76109332  
CERAMIC CHIP 50V B 3300PF K  
C4717  
76000445  
CHIP JUMPER 1608TYPE  
C472  
76503049  
PLASTIC FILM 63V 0.47UF J  
C475  
76100103  
CERAMIC CHIP 50V F 0.01UF Z  
C501  
76793471  
ELECTROLYTIC 10V 470UF M  
C502  
76092730  
CERAMIC CHIP 16V B 0.1UF K  
C503  
76203100  
ELECTORLYTIC 16V 10UF M 7L 3A  
C504  
76100104  
CERAMIC CHIP 25V F 0.1UF Z  
C505  
76793471  
ELECTROLYTIC 10V 470UF M  
C506  
76100104  
CERAMIC CHIP 25V F 0.1UF Z  
C507  
76793471  
ELECTROLYTIC 10V 470UF M  
C508

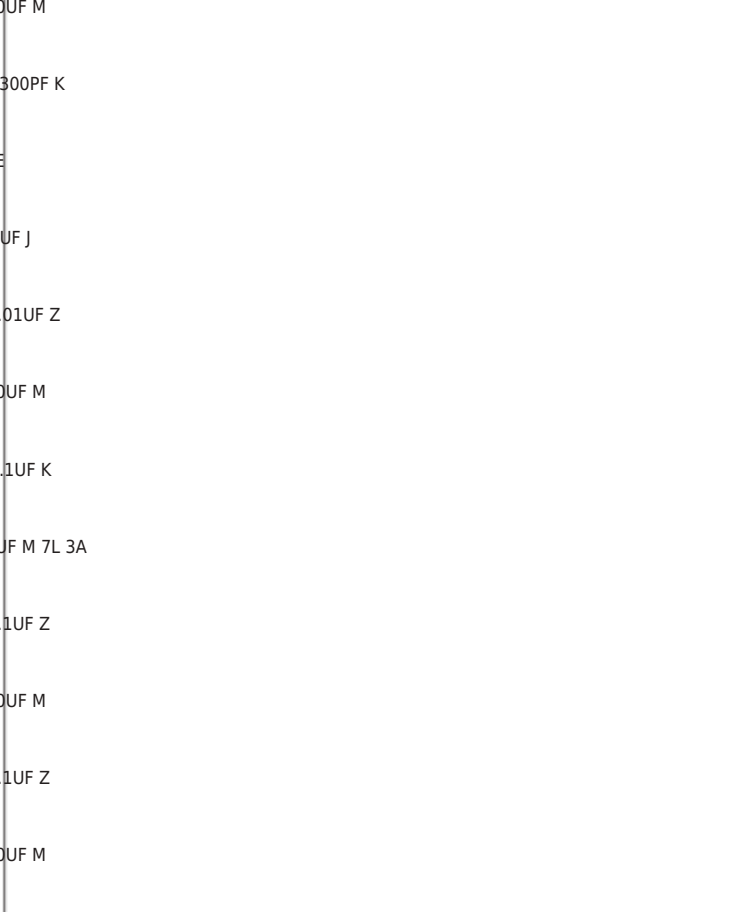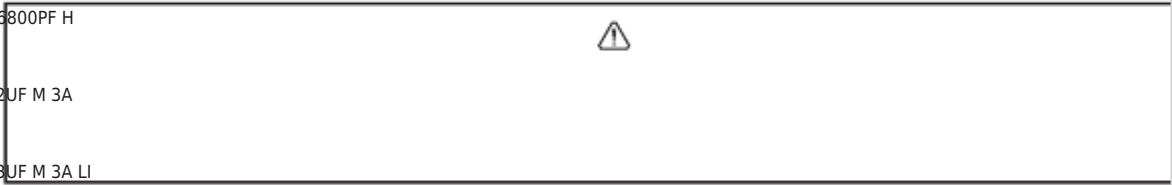

76100104  
CERAMIC CHIP 25V F 0.1UF Z  
EL  
:  
Electrolytic  
MF  
:  
Metal Film  
FR  
:  
Fusible Resistor

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
16  
17  
18  
19  
20  
21  
22  
23



Quick Links:

[Circuit Block Diagram](#)

## Related Manuals for Toshiba S5ES Series

[TV Toshiba S5ES Series Service Manual](#)

(46 pages)

[TV Toshiba 29CZ5DE Service Manual](#)

S5es series (50 pages)

[TV Toshiba 29CZ6DA Owner's Manual](#)

Color television (20 pages)

[TV Toshiba CPBRO2005Eu Catalog](#)

Home cinema catalogue 2005-6 (21 pages)

[TV Toshiba Stasia 17WL46 Catalogue](#)

Television plasma, lcd, projector, dvd video (9 pages)

[TV Toshiba 32SL863B Owner's Manual](#)

SI86\* digital series, ul86\* digital series (102 pages)

[TV Toshiba 22BL704B Owner's Manual](#)

Digital series (48 pages)

[TV Toshiba 32BV801B User Manual](#)

Digital series (45 pages)

[TV Toshiba 32BV501B User Manual](#)

Digital series (49 pages)

[TV Toshiba 42VL963B Owner's Manual](#)

VI96 digital series (92 pages)

[TV Toshiba 32SL753B Owner's Manual](#)

SI75\* digital series, wl75\* digital series, rw75\* digital series (78 pages)

[TV Toshiba 46SV685DB Owner's Manual](#)

Sv6 digital series (62 pages)

[TV Toshiba 29CJZ5SR Service Manual](#)

(52 pages)

[TV Toshiba 43 UF3D Series Operating Instructions Manual](#)

(29 pages)

[TV Toshiba 40VL20 Series Owner's Manual](#)

Led lcd tv (60 pages)

[TV Toshiba 43VJ33P Service Manual](#)

(78 pages)

## Related Content for Toshiba S5ES Series

[36HFX72 Chassis And Cabinet Replacement Parts List](#)

Toshiba 36HFX72

[36A50 Chassis And Cabinet Replacement Parts List](#)

Toshiba 36A50

[21CSZ2R Chassis And Cabinet Replacement Parts List](#)

Toshiba 21CSZ2R

[21SZ5E1 Chassis And Cabinet Replacement Parts List](#)

Toshiba 21SZ5E1

[32Z23B Chassis And Cabinet Replacement Parts List](#)

Toshiba 32Z23B

[14V2E Chassis And Cabinet Replacement Parts List](#)

Toshiba 14V2E

[21VZ5E Chassis And Cabinet Replacement Parts List](#)

Toshiba 21VZ5E

[13A20 Chassis And Cabinet Replacement Parts List](#)

Toshiba 13A20

This manual is also suitable for:

[29cz5de29cz5t29cz6si](#)