

Simple Settings Functions - Sanyo MINI ECO-i SPW-CR365GXH56B Service Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168

169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218

219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



2. Simple Settings Functions


All settings except for the central control address were completed at the time of shipment. The following procedures are necessary only when the functions are changed.

The functions cannot be changed in the case of a wireless remote controller or a system with no remote controller.

Change the functions using the wired remote controller (RCS-TM80BG).

<Function>

This allows the filter lifetime, operating mode priority change, central control address, and other settings to be made for an individual or group-control indoor unit

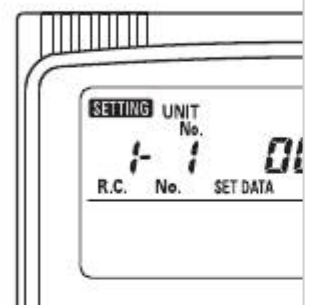

to which the remote controller used for simple settings is connected.

CAUTION

These settings are for items that are extremely important for system operation. Serious trouble may occur if they are set incorrectly. Please use sufficient caution when changing the settings. Some item codes which do not appear in the list are also displayed. These item codes were set at the time of shipment from the factory to the optimal settings for that model; do not change them. Do not change any settings data which does not appear in this list.

<Procedure>

(Perform these steps with the unit stopped.)

1
Press and hold the (VENTILATION) buttons simultaneously for 4 seconds or longer. Check that the (SETTING) display on the remote controller begins to blink.

2
If group control is in effect, press the (UNIT SELECT) button and select the address (unit No.) of the indoor unit to set. At this time, the indoor unit fan begins operating.

* If unit No. " " is displayed, the same setting will be made for all indoor units.




3
Press the temperature setting buttons to select the item code to change. (TEST/CHK) and (SET-

Remote Controller Functions

7
1
5
Press the timer time
4
the desired setting data.

* For item codes and setting data, refer to the following page.

5
Press the (SET) button. The (SETTING) display stops blinking and remains lit, and setting is completed. (If the (TIMER) button is pressed, the settings data will not be changed.)

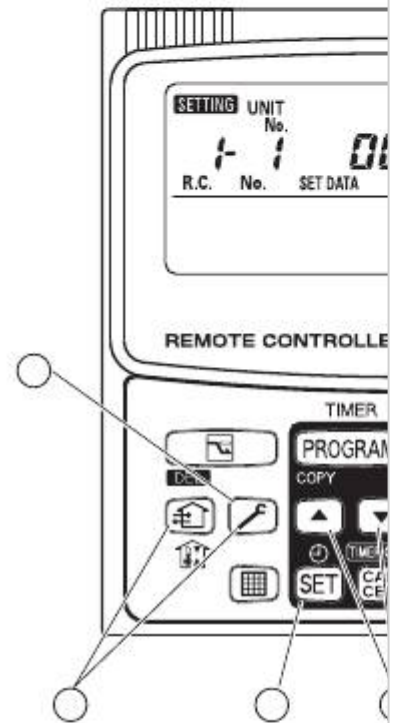

SETTING

(TIMER)

6

Repeat steps (2) - (5) and change the settings.

<Restoring normal mode>

7

Press the (TEST/CHK) button. Check that the remote controller display disappears.

2 - 3

Mini ECO-i System

4


Fig. 1

/

buttons to select (SET- (SET) button is not

2

3

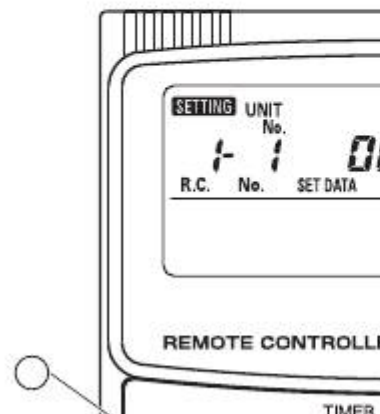

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
14
15
16
17
18
19
20
21

Quick Links:

[Address Settings \(Outdoor Units\)](#)

[Remote Controller Test Run Settings](#)

[Alarm Display](#)

[Outdoor Unit Control Pcb](#)

Chapters

[Table of Contents](#) 4

[Remote Controller Functions](#) 15

[Service Checker](#) 47

[Remote Control Functions](#) 61

[Control System Sha-Kt256Bg](#) 170

[Schedule Timer \(Sha-Tm64Ag\(B\)\)](#) 214

Related Manuals for Sanyo MINI ECO-i SPW-CR365GXH56B

[Air Conditioner Sanyo ECOi C0705DXHN8 Brochure & Specs](#)

2 and 3 pipe electric vrf systems (10 pages)

[Air Conditioner Sanyo SPW-T253G56 Service Manual](#)

Split system air conditioner (71 pages)

[Air Conditioner Sanyo SPW-X253G56 Service Manual](#)

Split system (72 pages)

[Air Conditioner Sanyo SPW-CR365GXH56 Technical Data Manual](#)

Mini eco-i system (346 pages)

[Air Conditioner Sanyo Mini ECO-i SPW-ASR74GXH56\(A/B\) Installation Instructions Manual](#)

System air conditioner (49 pages)

[Air Conditioner Sanyo SPW-C1155DXHN8 Technical Data & Service Manual](#)

2-way eco-i multi system (242 pages)

[Air Conditioner Sanyo 2-WAY ECO-i SPW-C0705DXHN8 Service Manual](#)

Multi system (143 pages)

[Air Conditioner Sanyo SPW-X253GH56 Service Manual](#)

Split system (105 pages)

[Air Conditioner Sanyo SPW-U253GH56 Service Manual](#)

Split system air conditioner (108 pages)

[Air Conditioner Sanyo SPW-T253GH56 Service Manual](#)

Split system (106 pages)

[Air Conditioner Sanyo SPW-D253GH56 Service Manual](#)

Split system (108 pages)

[Air Conditioner Sanyo SPW-C0705DZH8 Technical Data Manual](#)

3-way eco-i multi system 5 series (703 pages)

[Air Conditioner Sanyo SPW-C483GYH8 Service Manual](#)

Eco multi system (235 pages)

[Air Conditioner Sanyo SPW-C256VH Technical Data & Service Manual](#)

4-way air discharge semi-concealed wall-mounted ceiling-mounted concealed-duct (517 pages)

[Air Conditioner Sanyo SPW-CR1503GDYH8 Technical Data & Service Manual](#)

W-eco multi system series (377 pages)

[Air Conditioner Sanyo SPW-FTR124EH56 Installation And Operation Manual](#)

Dc inverter air conditioner for refrigerant r410a (32 pages)

Related Content for Sanyo MINI ECO-i SPW-CR365GXH56B

[XM18AAB Remote Controller Test Run Settings](#)

Sanyo XM18AAB

[SAP-KMRV93GJH Functions](#)

Sanyo SAP-KMRV93GJH

[CM2472 Functions](#)

Sanyo CM2472

[MINI ECO-i XHX1252 Simple Setting Function](#)

Sanyo MINI ECO-i XHX1252

[C2432A I Basic Functions Of The Service Valves](#)

Sanyo C2432A

[ECO-i AHX0752 Main Operating Functions](#)

Sanyo ECO-i AHX0752

[SAP-CMRV3143GJH Functions](#)

Sanyo SAP-CMRV3143GJH

[SPW-C256VH Simple Settings Function](#)

Sanyo SPW-C256VH

This manual is also suitable for:

[Mini eco-i spw-cr485gxh56b](#)[Mini eco-i spw-cr605gxh56b](#)[Mini eco-i spw-cr365gx56b](#)[Mini eco-i spw-cr485gx56b](#)[Mini eco-i spw-cr605gx56b](#)[Mini eco-i spw-cr365gx8b](#) ... [Show all](#)