How To Install The Outdoor Unit; Removing The Protective Spacer For Transportation; Installing The Outdoor Unit; Tubing Direction -Sanyo C2432A Installation Instructions Manual

19	
20	
21	
22	
23	
24	
25	
26	
27	
28	
29	
30	
31	
32	
33	
34	
35	
36	
37	
38	
39	
40	
41	
42	
43	
44	
45	
46	
47	
48 49	
49 50	
20	
-	

Table of Contents

•

Bookmarks

•



6. How to Install the Outdoor Unit

6-1. Remo**vil of the apprective Spacer for** Transportation


Remove the packing skid from the bottom of unit and then remove the plastic spacer used to secure the compressor during transportation. (Fig. 6-1) Place the unit on a level concrete pad, block or equal and anchor.

Refer to Section 2. "Selecting the Installation Site".

6-2. Installing the Outdoor Unit

(1)

Install blocks or a solid platform under the outdoor unit which provides a minimum height of 6 in. cm from ground level. (Fig. 6-2)

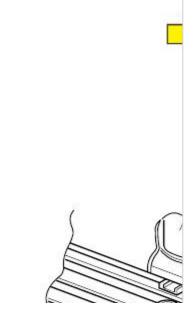

(2)

The outdoor unit must be bolted down tightly to the blocks

6-3. Tubing Direction

Tubing can be extended in 4 different directions as shown in Fig. 6-3.

Service valves are housed inside the unit. To access them, remove the access panel by removing the 3 attaching screws, then slide the panel downward and pull it toward you.


If either rear, right or front tubing is needed, punch out the knockout holes with a hammer or similar tool.

After punching out the knockout holes, mount plastic protectors on the tubing outlets. There accessories are packed inside the unit and can be accessed through the access panel.

Use tube benders to extend refrigerant tubing to the



wiring outlets Access panel Front Tubing outlets Fig. 6-3 Rear Power supply wiring outlets Power Right supply line Down 37 Compressor Packing skid Fig. 6-1 6-11/16 26 Height : Min: 6 in. Fig. 6-2 Power supply line 1/2" Inter-unit power line . 1007_C_I S4179694 Plastic spacer 0496_C_I 4-21/64 Anchor bolts (not supplied) Unit: inch 1168_C_I Inter unit power line 1/2"

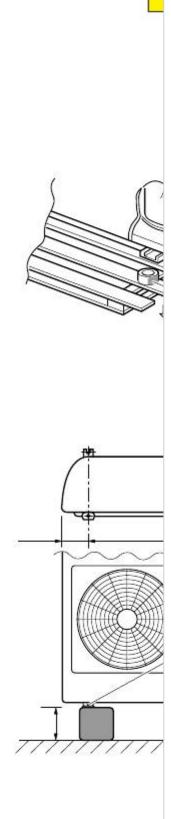



1

Table of Contents

Previous Page Next Page

 Quick Links: Table of Contents General Indoor Unit Outdoor Unit Remote Control Unit

Related Manuals for Sanyo C2432A

Air Conditioner Sanyo 24KLS32A Specification Sheet Sanyo ductless split system air conditioners specification sheet (3 pages) Air Conditioner Sanyo 24XS32A Submittal Sheet Indoor/outdoor ceiling recessed (4-way) air conditioner (3 pages) Air Conditioner Sanyo XS4232 Technical Data And Service Manual (66 pages) Air Conditioner Sanyo KS2432A Technical Data And Service Manual (64 pages) Air Conditioner Sanyo KS2432A Service Manual Split system (63 pages) Air Conditioner Sanyo KS3032 Service Manual Split system air conditioner (56 pages) Air Conditioner Sanyo C3032 Service Manual Split system air conditioner (54 pages) Air Conditioner Sanyo KS2432 Instruction Manual Split system air conditioner; wall-mounted type ceiling-mounted type recessed type cool/fan model (24 pages) Air Conditioner Sanyo KS2432A Instruction Manual Cool/dry model (24 pages) Air Conditioner Sanyo KS2462R Instruction Manual Sanyo split system air conditioner instruction manual ks2462r (24 pages) Air Conditioner Sanyo KS2432A Instruction Manual (24 pages) Air Conditioner Sanyo KS2432 Instruction Manual Split system air conditioner cool/fan model (24 pages) Air Conditioner Sanyo C2432 Installation Instructions Manual Split system air conditioner (17 pages) Air Conditioner Sanyo 24KS62R Specifications Ductless split system air conditioners (3 pages) Air Conditioner Sanyo 36TS32A Datasheet Ceiling suspended air conditioner (3 pages) Air Conditioner Sanyo KS2432A Instruction Manual (1 page)

Related Content for Sanyo C2432A

26 series How To Install The Outdoor Unit Sanyo 26 series COOL How To Install The Outdoor Unit Sanyo COOL R410A How To Install The Outdoor Unit Sanvo R410A KS3082 How To Install The Outdoor Unit Sanyo KS3082 COOL How To Install The Outdoor Unit Sanyo COOL SAP-K18AM Install Outdoor Unit Sanyo SAP-K18AM XHS1271 How To Install The Outdoor Unit Sanyo XHS1271 XS1872 How To Install The Outdoor Unit Sanyo XS1872

This manual is also suitable for:

Ks2432Ks2432aKs3032Cl2432aXs3632Ts3632 ... Show all