


Main Operating Functions; Remote
Control Functions; Room
Temperature Control - Sanyo
CHDZ07263 Service Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128



•

•

Bookmarks



1. Main Operating Functions

1-1. Room Temperature Control

The thermostat is turned ON/OFF according to

When remote controller sensor
is used

When body sensor is used

* Intake shift temperature (enabled only during heating)

During heating, a difference in temperature occurs between the top and bottom of a room. This value is set in consideration for

the difference between the temperature detected by the body sensor and the temperature at the bottom of the room.

<Value set for intake shift temperature at time of shipment>: 7°F

The shift temperature can be selected in the range of 0 - 18°F, by using the remote controller simplified setting mode.

Room temperature

(deg)

1

Set temperature


Thermostat

(1) After the thermostat turns ON, it will not turn OFF again as a result of

(2) After the thermostat turns OFF, it will not turn ON again for 3 minutes. (It also will not turn ON for 3 minutes after the power is switched ON.)

(3) The compressor turns OFF if the mode is changed cooling

(4) If "test run" mode is selected, the thermostat will not turn OFF as a result of ON.)

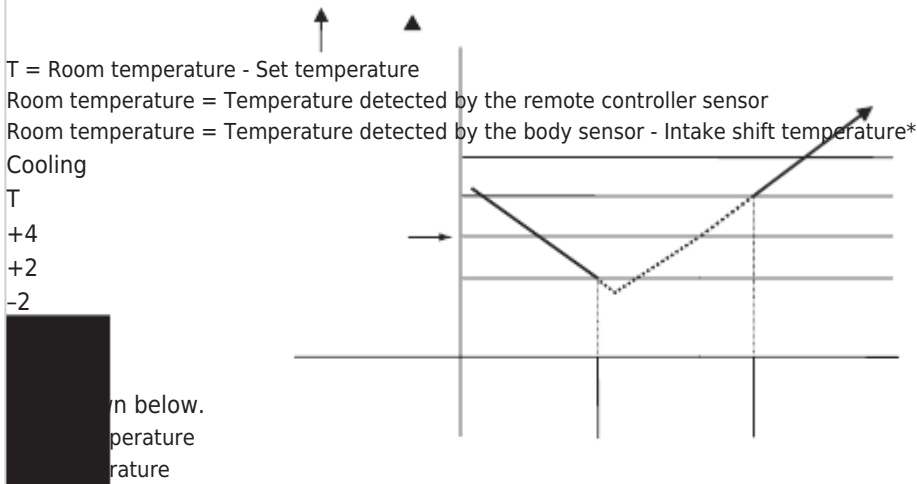

...n below.
...perature
...perature

ON
Thermostat
T for 5 minutes.
heating (or heating
2 - 2

Remote Control Functions

Heating

T
(deg)
+2
-2
-4
ON
OFF
cooling) while the compressor is ON.
T for 60 minutes. (The thermostat is forced
ON

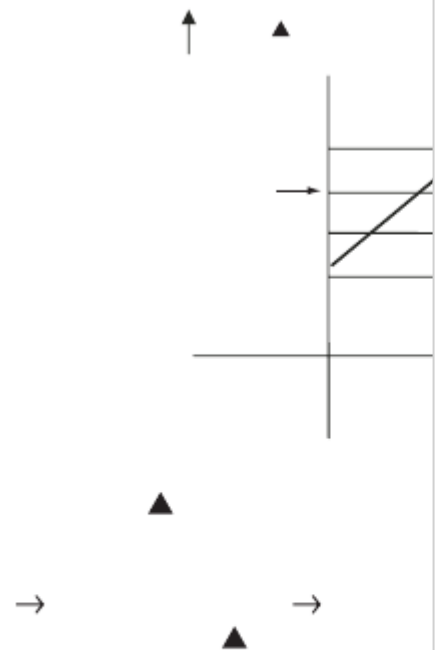


Table of Contents

[Previous Page](#)
[Next Page](#)

1
...
19
20
21
22
23
24
25
26

Quick Links:

[Table of Contents](#)

Chapters

[Section 1](#) 4

[Section 2](#) 21

[Outdoor Unit Control Pcb/Indoor Unit Control Pcb](#) 91

Related Manuals for Sanyo CHDZ07263

[Air Conditioner Sanyo ECO-i CHDZR07263 Series Service Manual](#)

(146 pages)

[Air Conditioner Sanyo ECO-i AHX0752 Technical Data Manual](#)

(265 pages)

[Air Conditioner Sanyo MINI ECO-i XHX1252 Service Manual & Test Run Service Manual](#)

(190 pages)

[Air Conditioner Sanyo CHDXR09663* Service Manual](#)

2-way eco-i multi system (142 pages)

[Air Conditioner Sanyo AHX0752 Service Manual](#)

W-2way eco-i multi system (114 pages)

[Air Conditioner Sanyo W-3WAY ECO-i 85464369098000 Installation Instructions Manual](#)

W-3way eco-i system air conditioner (106 pages)

[Air Conditioner Sanyo 85464359982001 Installation Instructions Manual](#)

W-2way system air conditioner (96 pages)

[Air Conditioner Sanyo Mini ECO-i CHXR03652 Service Manual](#)

(93 pages)

[Air Conditioner Sanyo Mini ECO-i 85464359981002 Installation Instructions Manual](#)

Sanyo air conditioner installation instructions (90 pages)

[Air Conditioner Sanyo R410A Installation Instructions Manual](#)

W-3way eco-i system air conditioner (54 pages)

[Air Conditioner Sanyo XM18AAB Installation Instructions Manual](#)

W-2way system air conditioner (50 pages)

[Air Conditioner Sanyo ECO R410A Installation Instructions Manual](#)

Eco-i system air conditioner (48 pages)

[Air Conditioner Sanyo XHX1252 Instruction Manual](#)

Split system air conditioner (20 pages)

[Air Conditioner Sanyo THX2452 User Manual](#)

(4 pages)

[Air Conditioner Sanyo DHX4852 Manual](#)

Indoor unit (4 pages)

[Air Conditioner Sanyo THX1852 Manual](#)

Indoor unit (4 pages)

Related Content for Sanyo CHDZ07263

[XS3632 Processes And Functions.21](#)

Sanyo XS3632

[KS3032 Processes And Functions](#)

Sanyo KS3032

[SAP-K181AA Operating Range](#)

Sanyo SAP-K181AA

[SAP-K181GJH Operating Range](#)

Sanyo SAP-K181GJH

[SA-99G Operating Range](#)

Sanyo SA-99G

[XM18AAB Main Outdoor Unit Pcb Setting](#)

Sanyo XM18AAB

[SPW-C0705DZH8 Main Operating Functions](#)

Sanyo SPW-C0705DZH8

[SPW-CR365GXH56 Main Operating Functions](#)

Sanyo SPW-CR365GXH56

This manual is also suitable for:

[Chdz09663Chdzt07263Chdzt09663Xhx1252Xhx1852Xhx2452 ...](#) [Show all](#)