

TOSHIBA

Toshiba Carrier RBC-AXU33UP-UL Installation Manual

Wireless receiver kit


1
2
3
4
5
6
7
8

--

•

Bookmarks

Available languages

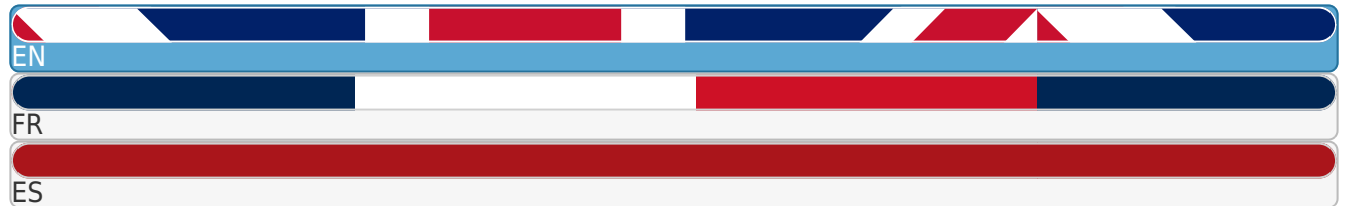

The language selection bar consists of three horizontal buttons. The top button is light blue and contains the text 'EN'. The middle button is dark blue and contains the text 'FR'. The bottom button is red and contains the text 'ES'. The buttons are separated by thin white lines and are set against a light gray background.

Quick Links

[Download this manual](#)



1130615103

INSTALLATION MANUAL

To Qualified Installer in

Installation Work and Service

Wireless receiver kit

(for 4-Way cassette type)

Model RBC-AKU730P-UL

Observe the safety precautions described in the Operation Manual of the Wireless receiver kit, Installation Manual and Operation Manual of the 4-way cassette type air conditioner (indoor unit), or the Installation Manual supplied with the ceiling panel.

ACCESSORIES

Part Name

Wireless receiver

Remote controller

Remote controller holder

Battery

HOW TO INSTALL THE WIRELESS RECEIVER

Install the Wireless receiver in correct orientation, since the Wireless receiver can be



installed at only one corner as shown in (Fig. 1).

Electrical control box
Indoor unit
refrigerant pipe side
Indoor unit
drain pipe side



TOSHIBA Carrier

1. Remove the air filter.
2. Remove the adjust corner cap at the corner where the Wireless receiver is to be installed. (Fig. 2)
 - Pull the adjust corner cap in the direction of (1) and slide it in the direction of (2) to remove it.
 - Remove strap from the pin and detach the adjust corner cap from the ceiling panel.

3. The insulation pad is packed in the two rectangular holes for ceiling panel wires. Remove the insulation pad, and pass the wires from the Wireless receiver through the rectangular holes. (Fig. 3)

4. Make sure that the black sponge wrapped around the wiring is about 0.8"(20 mm) out of the rectangular hole on the indoor unit side, and fix it with the Cord clamp by Screw.

(Fig. 3)
Pass the Wireless receiver lead wire through the Cord clamp and fix it with Screw
Remove the insulation pad from the rectangular hole on the indoor unit side.

(Fig. 3)
Part Name
Q'ty

Operation Manual

1
Installation Manual
(this manual)
Flat head wood screw

1
Cord clamp
1
Screw

2
"Positioning for installing a Wireless receiver" is indicated for guidance (Fig. 1)

Adjust corner cap
(2)
Ceiling panel
Cord clamp
Screw

Pass the Wireless receiver lead wire through the hole in the ceiling panel
Pull out the black sponge wrapped around the wiring about 0.8"(20 mm) from the rectangular hole.

- Thank you for purchasing Wireless receiver kit for air conditioners.
- Read this manual carefully for correct installation of the Wireless receiver kit before starting work.

• After the installation is completed, execute a test run to check for normal operation and explain how to use and maintain the Wireless receiver kit to the customer according to the Operation Manual.





Ask the customer to keep this manual with the Operation Manual.

CAUTION

- If the black sponge is not properly positioned, water leakage, dew condensation, and dew condensation on the wiring may occur, so be sure to do so.

5. Attach the Wireless receiver to the panel. At this time, be careful not to pinch the Q'ty wiring. (Fig. 4) If there is a part where the claws of the Wireless receiver part are not fitted, it may cause water leakage, so push claws A (2 places) and claws B (3 places)

1

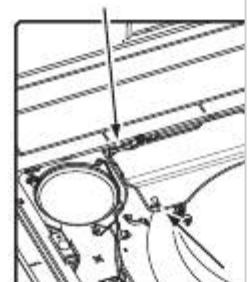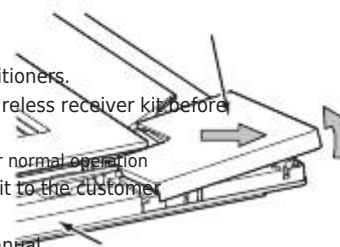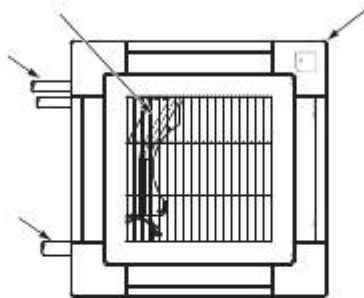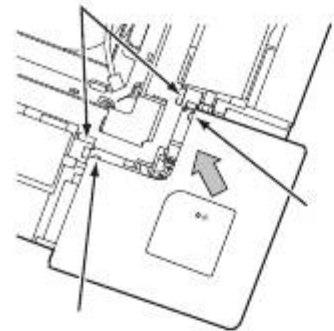

firmly and firmly to make sure that the Wireless receiver part does not float. please confirm.



1
Square hole
2
1
1



Claw A
Insert the claw A (2 places) of the Wireless receiver into the square holes of the panel in the direction of the arrow.

CAUTION
 • Press the three claws B of the adjust corner cap firmly as far as they will go, and then check that the adjust corner cap is closely attached.
 • Failure to do so may result in water leakage.

HOW TO WIRING THE WIRELESS RECEIVER

1.
Remove the mounting screw A on the electric control box cover and loosen the screw B. Slide the cover to remove the hook (the electric control box cover remains hooked on the hinge).




Hook
(Fig. 2)

2.
Connect the wiring from the Wireless receiver to the connector 9P (CN214: white) on the P.C. Board of the indoor unit.
Use the cord clamp inside the electrical parts box to process the excess wiring, and then attach the electric control box cover and air inlet grille.

Cord Clamp
- 1 -

Claw A
There are claws B here, so push it in firmly.
Push in the claw B (3 places) on the back side of the Wireless receiver so that they fit.
(Fig. 4)

Electric control box cover
Hinge ✕
Screw A
Screw B
Clamping claw
Plug into CN214

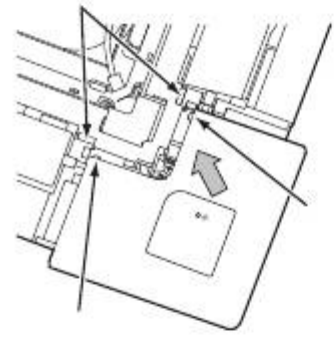

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba Carrier RBC-AXU33UP-UL

[Air Conditioner Toshiba Carrier RBC-AXU33UP-UL Operation Manual](#)

Air conditioner accessories, wireless receiver kit (48 pages)

[Receiver Toshiba RBC-AXU31UP-UL Installation Manual](#)

Wireless receiver kit (8 pages)

[Receiver Toshiba RBC-AXU33UPB-UL Installation Manual](#)

Wireless receiver kit (8 pages)

[Receiver Toshiba SD-6109C Owner's Manual](#)

Toshiba sd-6109c: user guide (69 pages)

[Receiver Toshiba SA-750 Manual](#)

Am/em stereo receiver (14 pages)

[Receiver Toshiba RP-F11 Manual](#)

11 band receiver (18 pages)

[Receiver Toshiba TRX-22 Owner's Manual](#)

Toshiba trx-22: user guide (70 pages)

[Receiver Toshiba SD-43HT Brochure & Specs](#)

Brochure (2 pages)

[Receiver Toshiba SD-42HKSB Service Manual](#)

(103 pages)

[Receiver Toshiba SD-6109C Owner's Manual](#)

(68 pages)

[Receiver Toshiba TRX-80 Troubleshooting Manual](#)

Toshiba trx-80: supplementary guide (10 pages)

[Receiver Toshiba TRX-2000 Owner's Manual](#)

Toshiba trx-2000: user guide (56 pages)

[Receiver Toshiba TRX-1800 Troubleshooting Manual](#)

Toshiba trx-1800: install guide (11 pages)

[Receiver Toshiba TRX-2220 Owner's Manual](#)

Toshiba trx-2220: user guide (69 pages)

[Receiver Toshiba HD-S23 Owner's Manual](#)

Digital high definition receiver (40 pages)

[Receiver Toshiba TRX-2000 Troubleshooting Manual](#)

Toshiba trx-2000: install guide (12 pages)

Summary of Contents for Toshiba Carrier RBC-AXU33UP-UL

[Page 1](#) 1130615103 INSTALLATION MANUAL • Thank you for purchasing Wireless receiver kit for air conditioners. • Read this manual carefully for correct installation of the Wireless receiver kit before To Qualified Installer in starting work. Installation Work and Service • After the installation is completed, execute a test run to check for normal operation and explain how to use and maintain the Wireless receiver kit to the customer Wireless receiver kit according to the Operation Manual.

[Page 2](#) SELF-DIAGNOSIS FUNCTION AND MEASURES NOTE • If you do not connect the connector, the Wireless receiver will not operate, so be sure • The following table shows a few examples. For details of indoor unit errors, refer to to connect it securely. the Installation

Manual of the indoor unit.

[Page 3](#) MANUEL D'INSTALLATION • Merci d'avoir acheté ce kit récepteur sans fil pour climatiseurs. • Pour garantir une installation correcte du récepteur sans fil, veuillez lire attentivement À l'installateur qualifié des travaux le présent manuel avant toute intervention. d'installation et d'entretien •...

[Page 4](#) FONCTIONS ET MESURES D'AUTODIAGNOSTIC REMARQUE • Si vous ne raccordez pas le connecteur, le récepteur sans fil ne fonctionnera pas, • Le tableau suivant montre quelques exemples. Pour en savoir plus sur les erreurs de veillez donc à le raccorder correctement. l'unité...

[Page 5](#) MANUAL DE INSTALACIÓN • Gracias por comprar el kit inalámbrico receptor para los aires acondicionados. • Lea atentamente este manual para la correcta instalación del receptor inalámbrico Al Instalador cualificado del trabajo antes de ponerlo en funcionamiento. de instalación y servicio •...

[Page 6](#) MEDIDAS Y FUNCIÓN DE AUTODIAGNÓSTICO NOTA • Si no conecta el conector, la unidad receptora inalámbrica no funcionará, así que • La siguiente tabla muestra algunos ejemplos. Para obtener detalles sobre los errores asegúrese de conectarlo firmemente. de la unidad interior, consulte el Manual de Instalación de la unidad interior. •...