

Optional Solenoid Valve Kit - Sanyo R410A Installation Instructions Manual

W-3way eco-i system air conditioner

1

2

3

4

5

Table Of Contents

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54


--

•

[Table of Contents](#)

•

Bookmarks

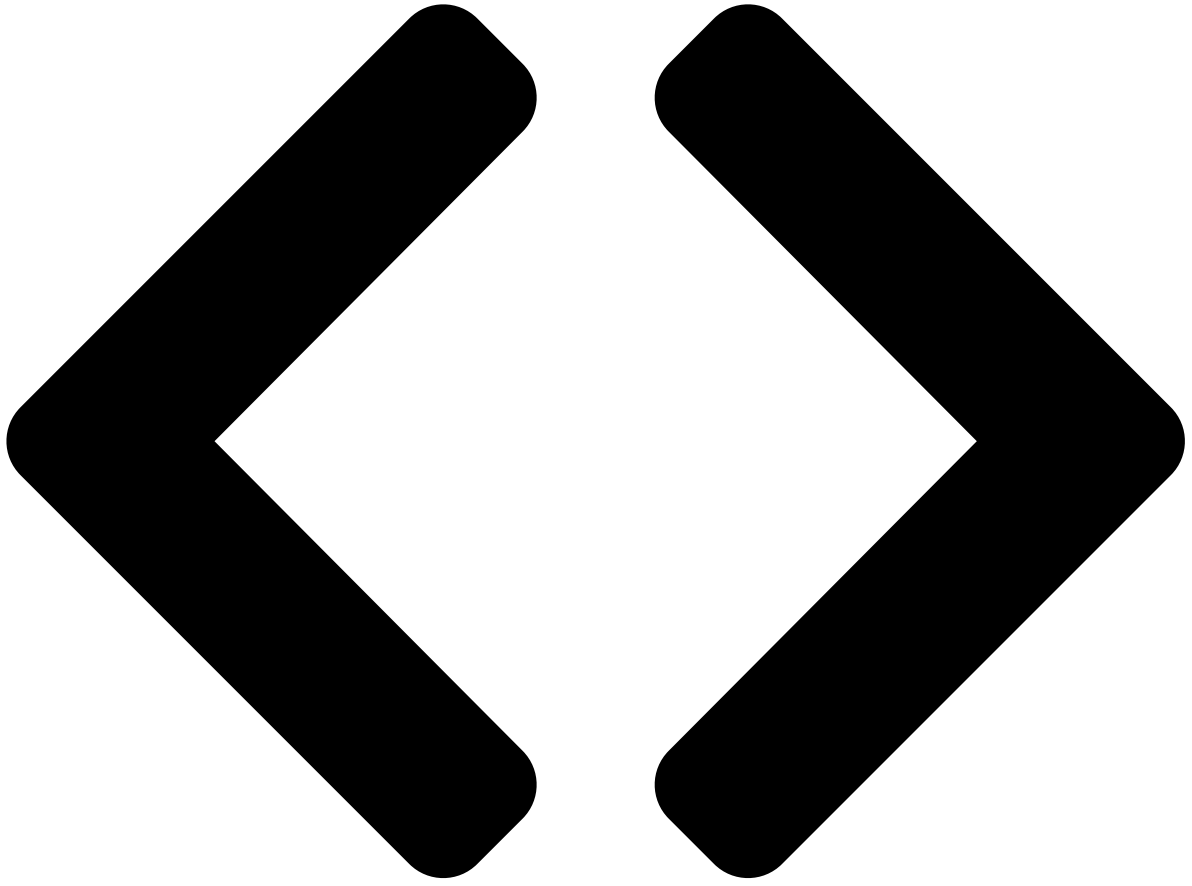

1-14. Optional Solenoid Valve Kit

Precautions on Installation of Solenoid Valve Kit

- (1) Clean base metals thoroughly.
- (2) Use proper ventilation to carry fumes away from the work area.
- (3) Use a high quality silver based solder of at least 15 % silver.
- (4) Heat the base materials broadly and uniformly.
- (5) Take precautions not to overheat the device which could damage sensitive internal components.
- (6) Insure compliance with all local codes!

ATK-RZP56BAWB

Types and specifications of

Part

tubing connections


--

•

Number


- 1 Gas tube: ID1/2"
- 2 Liquid tube : ID1/4"
- 3 Suspension hook
- 4 Liquid tube : ID3/8"
- 5 Suction tube: ID5/8"
- 6 Discharge tube: ID1/2"

7	
8	
9	
10	
11	
12	
13	
14	
5-25/32	
7	
9-13/32	
Specifications	
Compatibility	
Power source	
Power input	
Net weight	
Accessories	

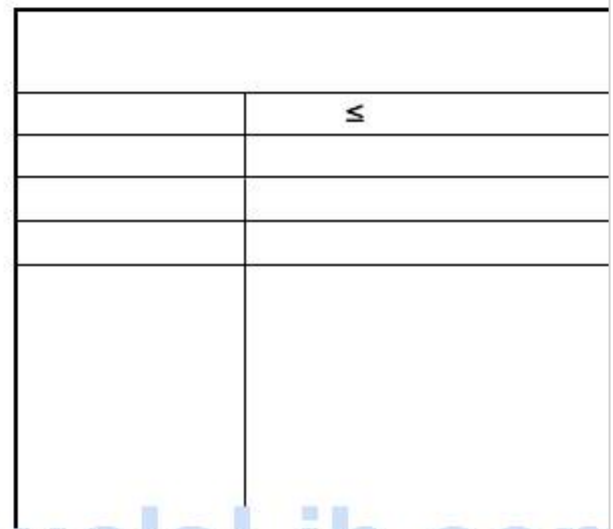

ManualsLib.com

- 3
- 1
- 2
- 12
- 5-55/64
- 4-21/64
- 4-21/64
- 9
- 11
- 8
- 5-3/64
- 4-1/4
- 3-25/32
- 14
- 13
- 10

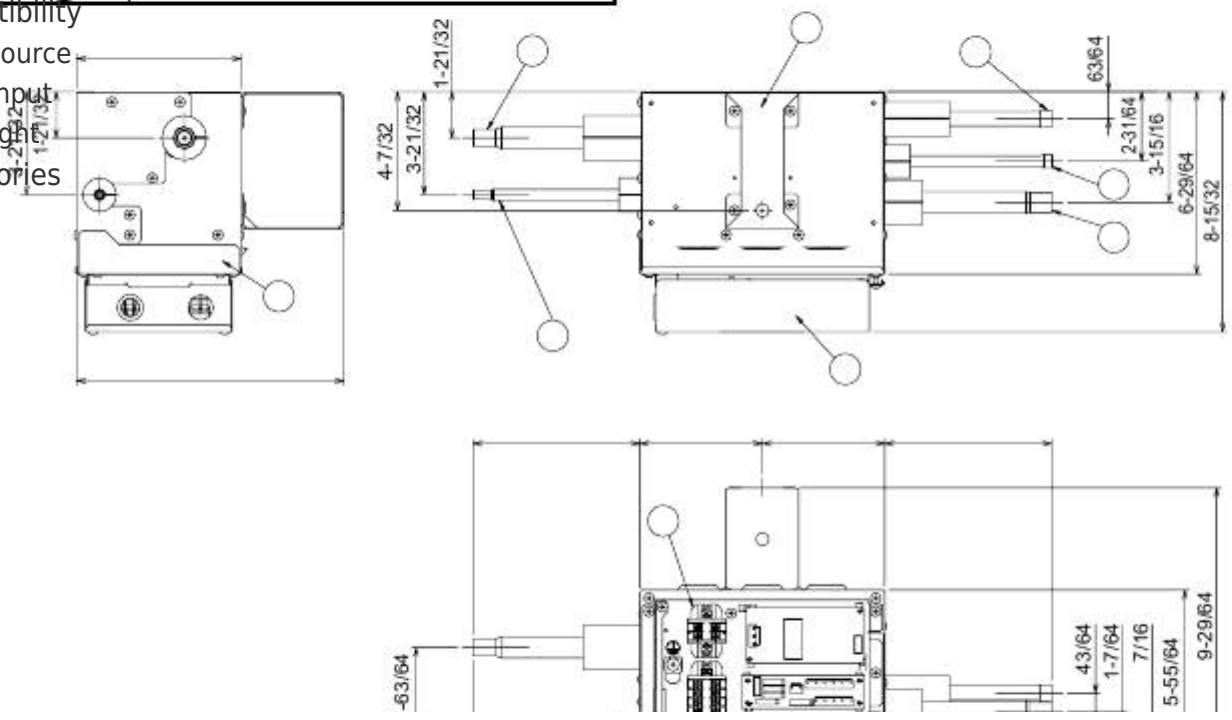

15

ATK-RZP56BAWB

7.500 Total capacity of indoor units (BTU/h) < 19.000

Single-phase AC 208-230V 60Hz (supplied by indoor unit)

33 W max.

151.7 oz.

Washer x 2

Hanging hook

M4 screw x 4

Tapping screw x 4

Wire holder

3-WAY connect wire

ACC-3WAY-AAB (Solenoid Valve Relay Kit)

6


4

5

5-55/64

2-3/64

Unit: in

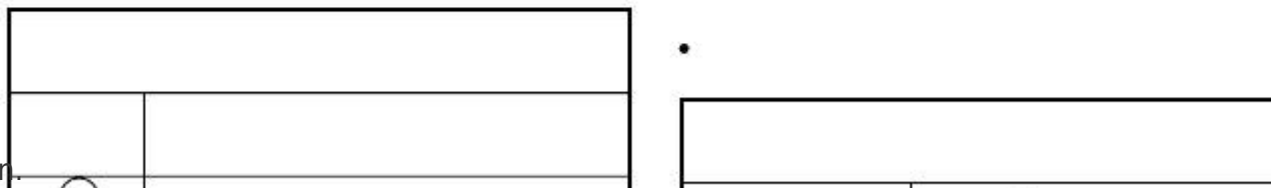

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
12
13
14
15
16
17
18
19

Quick Links:

[Remote Controller Test Run Settings](#)

[Meaning of Alarm Messages](#)

Related Manuals for Sanyo R410A

[Air Conditioner Sanyo PW-UMR184EXH56 Installation And Operation Manual](#)

Eco-i system air conditioner (36 pages)

[Air Conditioner Sanyo ECO-i AHX0752 Technical Data Manual](#)

(265 pages)

[Air Conditioner Sanyo MINI ECO-i XHX1252 Service Manual & Test Run Service Manual](#)

(190 pages)

[Air Conditioner Sanyo ECO-i CHDZR07263 Series Service Manual](#)

(146 pages)

[Air Conditioner Sanyo CHDXR09663* Service Manual](#)

2-way eco-i multi system (142 pages)

[Air Conditioner Sanyo CHDZ07263 Service Manual](#)

(128 pages)

[Air Conditioner Sanyo AHX0752 Service Manual](#)

W-2way eco-i multi system (114 pages)

[Air Conditioner Sanyo W-3WAY ECO-i 85464369098000 Installation Instructions Manual](#)

W-3way eco-i system air conditioner (106 pages)

[Air Conditioner Sanyo 85464359982001 Installation Instructions Manual](#)

W-2way system air conditioner (96 pages)

[Air Conditioner Sanyo Mini ECO-i CHXR03652 Service Manual](#)

(93 pages)

[Air Conditioner Sanyo Mini ECO-i 85464359981002 Installation Instructions Manual](#)

Sanyo air conditioner installation instructions (90 pages)

[Air Conditioner Sanyo XM18AAB Installation Instructions Manual](#)

W-2way system air conditioner (50 pages)

[Air Conditioner Sanyo ECO R410A Installation Instructions Manual](#)

Eco-i system air conditioner (48 pages)

[Air Conditioner Sanyo THX2452 User Manual](#)

(4 pages)

[Air Conditioner Sanyo DHX4852 Manual](#)

Indoor unit (4 pages)

[Air Conditioner Sanyo THX1852 Manual](#)

Indoor unit (4 pages)

Related Content for Sanyo R410A

[W MULTI SGP-EW120M2G2W O Perating The Fuel Gas Solenoid Valve Forced Off Switch](#)

Sanyo W MULTI SGP-EW120M2G2W

[SPW-CR1503GDYH8 Solenoid Valve Control](#)

Sanyo SPW-CR1503GDYH8

[SAP-KMRV74EH Optional Copper Tubing Kit](#)

Sanyo SAP-KMRV74EH

[SAP-CMRV3656EH Optional Copper Tubing Kit](#)

Sanyo SAP-CMRV3656EH

[KMS0772 Optional Copper Tubing Kit](#)

Sanyo KMS0772

[KHS0951 Optional Copper Tubing Kit](#)

Sanyo KHS0951

[SAP-KMRV74EH Optional Copper Tubing Kit](#)

Sanyo SAP-KMRV74EH

[SPW-C0705DZH8 Optional Solenoid Valve Kit](#)

Sanyo SPW-C0705DZH8

This manual is also suitable for:

[Xhx1252Xhx1852Xhx2452Xhx3652Xmhx1252Xmhx1852](#) ... [Show all](#)