



Whirlpool GAS DRYER Installation Instructions Manual

Gas dryer

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36

• PAGE

1

OF 36 GO

•

[Table of Contents](#)

-


Troubleshooting

•

Bookmarks

--

Available languages

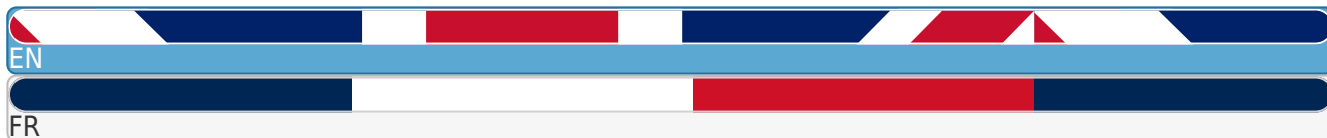


Quick Links

[1 Gas Dryer Power Hookup](#)

[2 Troubleshooting](#)

[Download this manual](#)

See also: [Use and Care Manual](#) , [Instruction and Installation Manual](#)

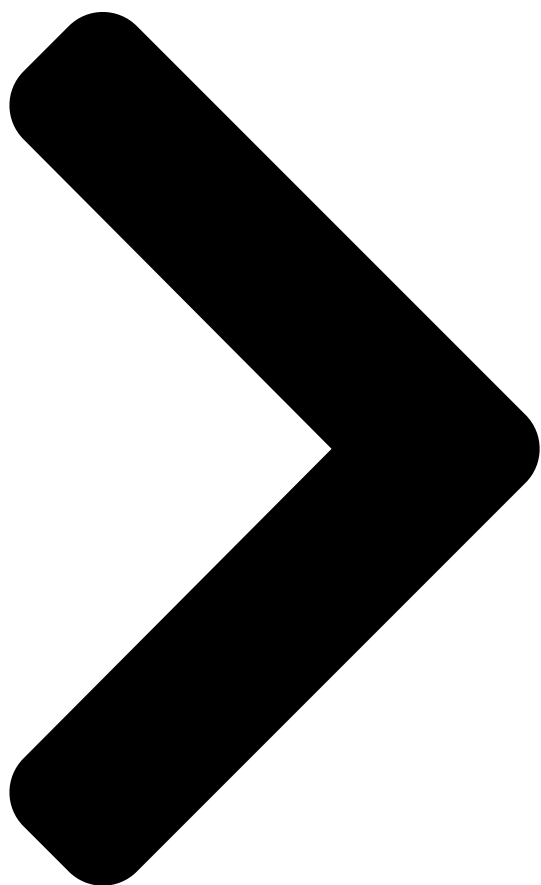

GAS DRYER INSTALLATION INSTRUCTIONS
CANADIAN ELECTRIC DRYER INSTALLATION
INSTRUCTIONS
INSTRUCTIONS POUR L'INSTALLATION
DE LA SÉCHEUSE À GAZ (É.-U. ET CANADA)
ÉLECTRIQUE (CANADA UNIQUEMENT)

Table of Contents

DRYER SAFETY	2
INSTALLATION REQUIREMENTS	4
Tools and Parts	4
LOCAtION REQUIREMENTS	5
ELEcTRIC DRYER POWER HOOKUP-cANADA ONLY	7
GAS DRYER POWER HOOKUP	8
INSTALL LEvELING LEGS	10
MAkE GAS cONNEcTION	10
vENTING	11
venting Requirements	11
Plan vent System	12
Install vent System	13
cONNEcT INLET HOSE	14
cONNEcT vENT	15
LEvEL DRYER	16
cOMplete INSTALLAtION cHEckLIST	16
DOOR REvERSAL KIT (OPTIONAL)	17
STAckING WASHER AND DRYER (OPTIONAL)	17
TROUBLESHOOTING	17
INSTALLATION NOTES	

Date of purchase:

Date of installation:

Installer:

Model number:

Serial number:

W10385100A

W10385101A - SP

Para una version de estas instrucciones en español, visite www.Whirlpool.com

Table des matières

SÉcURITÉ DE LA SÉcHEUSE	18
EXIGENcES D'INSTALLAtION	20
Outillage et pièces	21
EXIGENcES D'EMPLAcEMENT	22
SÉcHEUSE ÉLEcTRIQUE RAccORDEMENT à	
L'ALIMENTAtION ÉLEcTRIQUE - cANADA SEULEMENT	23
RAccORDEMENT D'UNE SÉcHEUSE à GAZ	24
INSTALLAtION DES PIEDS DE NIVELLEMENT	26
INSTRUcTIONS POUR LE RAccORDEMENT AU GAZ	26
SYSTÈME D'ÉvAcUAtION	27
Exigences concernant l'évacuation	27

[Planification du système d'évacuation](#)28

[Installation du système d'évacuation](#)30

[RAccORDEMENT DES TUYAUX D'ALIMENTATION](#)30

[RAccORDEMENT DU cONDUIT D'ÉvAcUATION](#)34

[RÉGLAGE DE L'APLOMB DE LA SÉcHEUSE](#).....32

[AcHEvER L'INSTALLATION LISTE DE vÉRIFication](#)33

[INVERSION DE LA PORTE \(FACULTATIF\)](#)34

[LAvEUSE ET SÉcHEUSE SUPERPOSÉES \(FACULTATIF\)](#)34

[DÉPANNAGE](#)34

NOTES cONcERNANT L'INSTALLATION

Date d'achat:

Date d'installation:

Installateur:

Numéro de modèle:

Numéro de série:

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool GAS DRYER

[Dryer Whirlpool GAS DRYER Installation Instructions Manual](#)

Gas dryer/canadian electric dryer (44 pages)

[Dryer Whirlpool WED4800BQ Use And Care Manual](#)

Electric or gas dryer (28 pages)

[Dryer Whirlpool Electric Dryer Use And Care Manual](#)

Electric and gas dryers (23 pages)

[Ranges Whirlpool Gas Range User Manual](#)

(48 pages)

[Ranges Whirlpool ELECTRIC RANGE User Instructions](#)

(44 pages)

[Ranges Whirlpool ELECTRIC RANGE User Instructions](#)

(40 pages)

[Ranges Whirlpool ELECTRIC RANGE User Instructions](#)

(36 pages)

[Ranges Whirlpool GAS RANGE Use & Care Manual](#)

(36 pages)

[Ranges WHIRLPOOL GAS RANGE Use & Care Manual](#)

Gas range (36 pages)

[Ranges Whirlpool ELECTRIC RANGE User Instructions](#)

Electric range (32 pages)

[Dryer Whirlpool Commercial Dryer Installation Instructions Manual](#)

Commercial dryer gas (120-volt, 60-hz) or electric (120/240-volt, 60-hz) (28 pages)

[Refrigerator Whirlpool Freezer Refrigerator Use And Care Manual](#)

22' to 25' no-frost top freezer refrigerator (24 pages)

[Ranges Whirlpool Electric Range User Manual](#)

Electric range aqualift self-cleaning technology (20 pages)

[Ranges Whirlpool GAS RANGE Installation Instructions Manual](#)

30" eye-level microwave continuous cleaning gas range (7 pages)

[Dryer Whirlpool Electric Dryer Installation Instructions Manual](#)

Electric dryer (7 pages)

[Dryer Whirlpool Electric dryer Installation Instructions](#)

(5 pages)

Summary of Contents for Whirlpool GAS DRYER

[Page 1: Table Of Contents](#)

INvERSION DE LA PORTE (FACULTATIF)	34
STACKING WASHER AND DRYER (OPTIONAL)	
.....17 LAveUSE ET SÉCHEUSE SUPERPOSÉES (FACULTATIF) ..	34
TROUBLESHOOTING	17
DÉPANNAGE	34
Para una version de estas instrucciones en español, visite	
www.Whirlpool.com INSTALLATION NOTES NOTES cONcERNANT L'INSTALLATION	

_____ Date of purchase: Date
d'achat:...

[Page 2: Dryer Safety](#)

DRYER SAFETY...

[Page 3](#) IMPORTANT: When discarding or storing your old clothes dryer, remove the door.

[Page 4: Installation Requirements](#)

INSTALLATION REQUIREMENTS TOOLS AND PARTS Tools needed for gas installations: Gather the required tools and parts before starting installation. Tools needed for all installations: 8" or 10" pipe wrench 8" or 10" adjustable wrench (for gas connections) Flat-blade screwdriver #2 Phillips screwdriver Pipe-joint compound resistant to LP gas 1/4"...

[Page 5: Location Requirements](#)

(737 mm) A location allowing for proper exhaust installation. ■ See "Venting Requirements." A separate 15 or 20 amp circuit for a gas dryer or 30 amp ■ circuit for an electric dryer. " If using power supply cord, a grounded electrical outlet (899 mm) ■...

[Page 6](#) Installation spacing for recessed area cabinet installation (dryer only): or closet installation All dimensions show recommended and minimum spacing allowed. 7" Additional spacing should be considered for ease of (178 mm) ■ installation and servicing. Additional clearances might be required for wall, door, floor ■...

[Page 7: Electric Dryer Power Hookup-Canada Only](#)

If using a replacement power supply cord, it is recommended that ELECTRIC DRYER you use Power Supply Cord Replacement Part Number 8529008. POWER HOOKUP- CANADA ONLY GROUNDING INSTRUCTIONS For further information, please reference service numbers located ELEcTRICAL REQUIREMENTS in "Assistance or Service" section of your Use and Care Guide. For a grounded, cord-connected dryer: ◆...

[Page 8: Gas Dryer Power Hookup](#)

GAS SUPPLY REQUIREMENTS GAS DRYER POWER HOOKUP ELEcTRICAL REQUIREMENTS 120 Volt, 60 Hz, AC only, 15- or 20- amp fused electrical ■ supply is required. A time-delay fuse or circuit breaker is recommended. It is also recommended that a separate circuit serving only this dryer be provided.

[Page 9](#) GAS SUPPLY LINE GAS SUPPLY cONNEction REQUIREMENTS Option 1 (Recommended Method) Use an elbow and a 3/8" flare x 3/8" NPT adapter fitting ■ between the flexible gas connector and the dryer gas pipe, Flexible stainless steel gas connector: as needed to avoid kinking. If local codes permit, use a new flexible stainless steel gas ■...

[Page 10: Install Leveling Legs](#)

INSTALL LEvELING LEGS MAKE GAS CONNECTION (gas dryer models only) connect gas supply to dryer Prepare dryer for leveling legs A. Flared male fitting B. Non-flared male fitting Remove red cap from gas pipe. Using a wrench to tighten, connect gas supply to dryer. Use pipe-joint compound on threads of all non-flared male fittings.

[Page 11: Venting](#)

vENTING Exhaust hoods: An exhaust hood should cap the vent to keep rodents and ■ venting Requirements insects from entering the home. Must be at least 12" (305 mm) from ground or any object ■ that may obstruct exhaust (such as flowers, rocks, bushes, or snow).

[Page 12: Plan Vent System](#)

Alternate exhaust installations (for close clearance): Plan vent System choose your exhaust installation type Recommended exhaust installation: Over-the-top installation (also available with one offset elbow) Dryer Rigid metal or flexible metal vent Elbow G. Vent length C. Wall necessary to D.

[Page 13: Install Vent System](#)

Determine vent path: Install vent System Select route that will provide straightest and most direct ■ path outdoors. Install exhaust hood Plan installation to use fewest number of elbows

and turns. ■ When using elbows or making turns, allow as much room ■...

[Page 14: Connect Inlet Hose](#)

CONNECT INLET HOSE Tighten couplings The dryer must be connected to the cold water faucet using the new inlet hoses. Do not use old hoses. NOTE: Replace inlet hoses after 5 years of use to reduce the risk of hose failure. Record hose installation or replacement dates on the hoses for future reference.

[Page 15: Connect Vent](#)

CONNECT vENT Attach long hose to dryer fill valve and tighten coupling connect vent to exhaust outlet Using a 4" (102 mm) clamp, connect vent to exhaust outlet in dryer. If connecting to existing vent, make sure vent is clean. Dryer vent must fit over dryer exhaust outlet and inside exhaust hood.

[Page 16: Level Dryer](#)

LEVEL DRYER COMPLETE INSTALLATION CHECKLIST Level dryer Check that all parts are now installed. If there is an extra part, go back through steps to see what was skipped. Check that you have all of your tools. Place Dispose of/recycle all packaging materials. level here Be sure the water faucets are on.

[Page 17: Door Reversal Kit \(Optional\)](#)

DOOR REVERSAL (OPTIONAL) TROUBLESHOOTING If you prefer to reverse the door swing on your dryer: See your "Use and Care Guide" or visit our website and reference Frequently Asked Questions to possibly avoid A door reversal kit, Part Number W10406955 is available the cost of a service call.

[Page 18: Sécurité De La Sécheuse](#)

SÉCURITÉ DE LA SÉCHEUSE...

[Page 20: Exigences D'installation](#)

EXIGENCES D'INSTALLATION OUTILLAGE ET PIÈCES Outils nécessaires aux installations au gaz : Rassembler les outils et composants nécessaires avant d'entreprendre l'installation. Outils nécessaires pour toutes les installations : Clé à tuyau de 8" ou 10" Clé à mollette de 8" ou 10" (pour le raccordement au gaz) Tournevis à...

[Page 21: Exigences D'emplacement](#)

Équipement facultatif : (Non fourni avec la sécheuse) **DIMENSIONS DE LA SÉCHEUSE** Se référer au Guide d'utilisation et d'entretien pour des vue de face : renseignements sur les accessoires disponibles pour la sécheuse. 27" (686 mm) **EXIGENCES D'EMPLACEMENT** " (899 mm) 1"* (25 mm) * Mesures approximatives...

Page 22 Distances de dégagement à respecter Installation dans un placard (laveuse et sécheuse superposées) : Pour chaque aménagement, prévoir davantage d'espace pour faciliter l'installation et l'entretien; des espacements pour les 6" (152 mm) appareils voisins, les murs, les portes et les plinthes. L'espace doit être assez grand pour permettre l'ouverture complète de la porte.

[Page 23: Sécheuse Électrique Raccordement À L'alimentation Électrique - Canada Seulement](#)

Installation dans une résidence mobile – exigences Autres critères à respecter pour une installation supplémentaires : en résidence mobile : Toutes les sécheuses : Cette sécheuse peut être installée dans une résidence mobile. L'installation doit être conforme aux critères de la version la plus Un système d'évacuation en métal qui peut être acheté...

[Page 24: Raccordement D'une Sécheuse À Gaz](#)

SPÉCIFICATIONS DE L'ALIMENTATION EN GAZ RACCORDEMENT D'UNE SÉCHEUSE À GAZ
SPÉCIFICATIONS ÉLECTRIQUES L'appareil doit être alimenté par un circuit de 120 V, CA ■ seulement, 60 Hz, 15 ou 20 ampères, protégé par fusible. On recommande l'emploi d'un fusible ou d'un disjoncteur temporisé.

[Page 25](#) CANALISATION DE GAZ EXIGENCES CONCERNANT LE RACCORDEMENT AU GAZ Option 1 (méthode recommandée) Utiliser un coude et un adaptateur NPT de 3/8" x 3/8" entre ■ Raccord à gaz en acier inoxydable flexible : le connecteur de gaz flexible et la conduite de gaz de la Si les codes locaux le permettent, utiliser un raccord neuf ■...

[Page 26: Installation Des Pieds De Nivellement](#)

INSTALLATION DES PIEDS INSTRUCTIONS POUR LE DE NIVELLEMENT RACCORDEMENT AU GAZ (modèles à gaz uniquement) connecter l'alimentation en gaz à la sècheuse Préparer la sècheuse pour les pieds de nivellement A. Raccord mâle conique B. Raccord mâle non conique Retirer le capuchon rouge de la canalisation d'arrivée de gaz.

[Page 27: Système D'évacuation](#)

conduit métallique rigide Ouvrir le robinet d'arrêt Recommandé pour une meilleure performance de séchage et ■ pour réduire les risques d'écrasement et de déformation. conduit métallique flexible (Acceptable uniquement si accessible pour le nettoyage) Doit être complètement déployé et supporté dans ■...

[Page 28: Planification Du Système D'évacuation](#)

Planification du système coudes : Les coudes à 45° permettent une meilleure circulation de l'air d'évacuation ■ que les coudes à 90°. choisir un type de système d'évacuation : Installations d'évacuation recommandées : Meilleure Bonne Brides de serrage : Utiliser des brides de serrages pour sceller tous les joints. ■...

[Page 29](#) Autres installations où le dégagement est réduit: Déterminer l'itinéraire d'acheminement du conduit : Choisir l'itinéraire d'acheminement vers l'extérieur qui sera le ■ plus direct et le plus rectiligne. Planifier l'installation pour introduire le nombre minimal ■ de coudes et de changements de direction. Si des coudes ou changements de direction sont utilisés, ■...

[Page 30: Installation Du Système D'évacuation](#)

Raccorder du système d'évacuation RACCORDEMENT DES TUYAUX D'ALIMENTATION Installer le clapet d'évacuation La sècheuse doit être connectée au robinet d'eau froide à l'aide des nouveaux tuyaux d'alimentation. Ne pas utiliser de tuyaux usagés. 12" min. (305 mm) REMARQUE : Remplacer les tuyaux d'arrivée d'eau après 5 ans d'utilisation pour réduire le risque de défaillance intempestive.

[Page 31](#) Fixer le long tuyau à l'électrovanne de Serrer les raccords remplissage de la sècheuse et serrer les raccords À l'aide d'une pince, serrer les raccords en effectuant deux tiers de tour supplémentaire. REMARQUE : Ne pas serrer excessivement. Le raccord risque d'être endommagé.

[Page 32: Raccordement Du Conduit D'évacuation](#)

RACCORDEMENT DU CONDUIT vérifier qu'il n'y a pas de fuites D'évacuation Raccorder le conduit d'évacuation à la bouche d'évacuation Vérifier qu'il n'y a pas de fuites autour du connecteur en Y, du robinet et des tuyaux d'alimentation. À l'aide d'une bride de serrage de 4" (102 mm), relier le conduit d'évacuation à...

[Page 33: Réglage De L'aplomb De La Sècheuse](#)

RÉGLAGE DE L'APLOMB DE LA ACHEVER L'INSTALLATION SÉCHEUSE LISTE DE VÉRIFICATION Régler l'aplomb de la sècheuse Vérifier que toutes les pièces sont maintenant installées. S'il reste une pièce, passer en revue les différentes étapes pour découvrir laquelle aurait été oubliée. Vérifier la présence de tous les outils.

[Page 34: Inversion De La Porte \(Facultatif\)](#)

INVERSION DE LA PORTE DÉPANNAGE (FACULTATIF) : Voir le "Guide d'utilisation et d'entretien" ou consulter notre site Web et la Foire aux questions pour tenter d'éviter le coût d'une Si vous préférez inverser le sens d'ouverture de la porte de intervention de réparation.

[Page 36](#) W10385100A W10385101-SP © 2011 03/11 All rights reserved Printed in U.S.A. Tous droits réservés Imprimé aux E.U.

