


Selecting The Installation Site; Indoor Unit - Sanyo SPW-X483GH56 Installation Instruction

Eco multi system air conditioner

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91




•

[Table of Contents](#)

•

Bookmarks

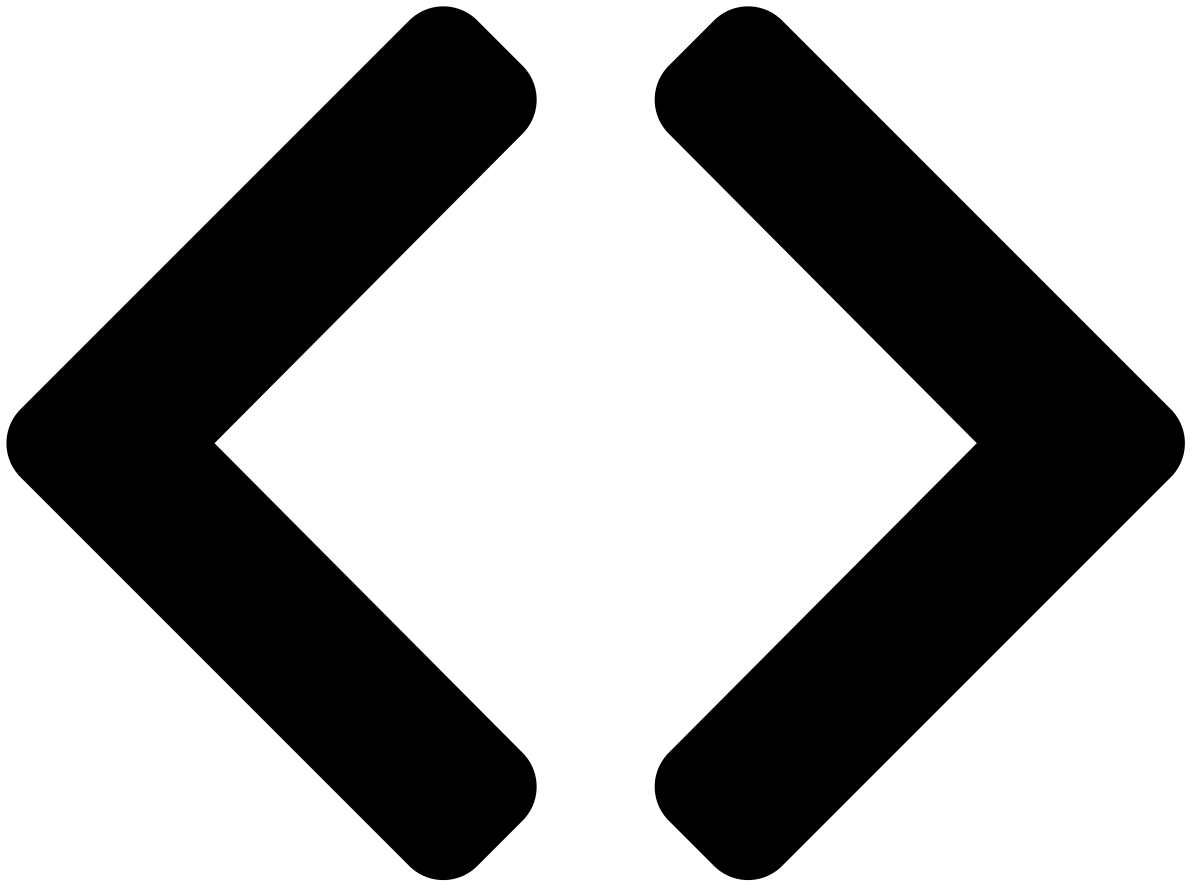

Enlarged version

2. SELECTING THE INSTALLATION SITE

Indoor Unit

AVOID:



areas where leakage of flammable gas may be expected.


places where large amounts of oil mist exist.

direct sunlight.

locations near heat sources which may affect the performance of the unit.

locations where external air may enter the room directly. This may cause "sweating" on the air discharge ports, causing them to spray or drip.


locations where the remote controller will be

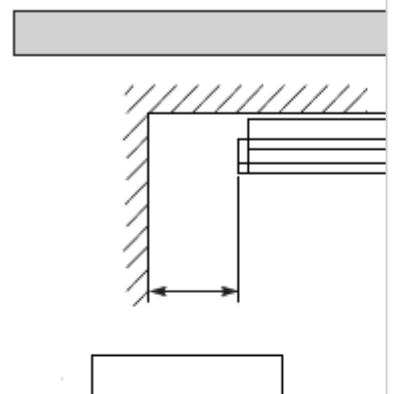

splashed with water or affected by dampness or humidity.

installing the remote controller behind curtains or furniture.

DO:



select an appropriate position from which every corner of the room can be uniformly cooled.

select a location where the ceiling is strong enough to support the weight of the unit.

select a location where tubing and drain pipe have the shortest run to the outdoor unit.

allow room for operation and maintenance as well as unrestricted air flow around the unit.

install the unit within the maximum elevation difference above or below the outdoor unit and within a total tubing length from the outdoor unit as detailed in Table 1-10.

allow room for mounting the remote controller about 1m off the floor, in an area that is not in direct sunlight nor in the flow of cool air from the indoor unit.

NOTE

Air delivery will be degraded if the distance from the floor to the ceiling is greater than 3 m.

Floor-Standing, Concealed Floor-Standing Type

min.

10 cm

min. 100 cm

Horizontal view

min.

10 cm

min. 100 cm

0754_M_1

Vertical view

Ceiling-Mounted Type

min. 25 cm

Front view

NOTE

The rear of the indoor unit can be installed flush against the wall.

Air

discharge

min. 30 cm

Side view

Concealed-Duct Type

2-Way, 4-Way Semi-Concealed Type

1-Way Semi-Concealed Type




Obstacle

Air

discharge


min. 5 cm

Wall-Mounted Type

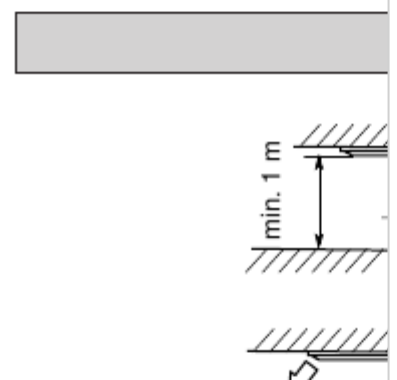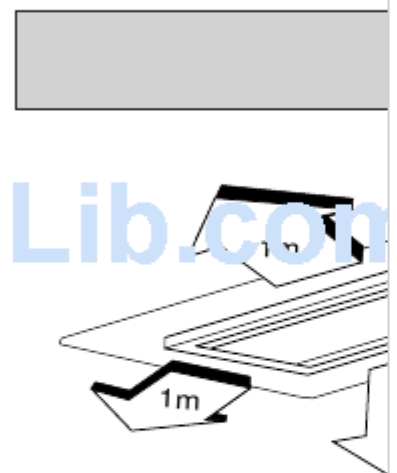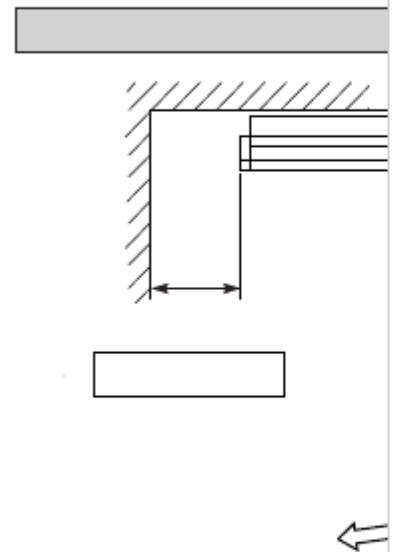

ManualsLib.com

min.
15 cm
13
S4179544
Ceiling
Wall
min. 25 cm
Front view
Air intake
Side view
0769_T_I
Ceiling
min. 5 cm
Wall
Air
Wall
intake
0770_AS_I
Side view
min.15 cm
min.
15 cm
0771_K_I
Front View

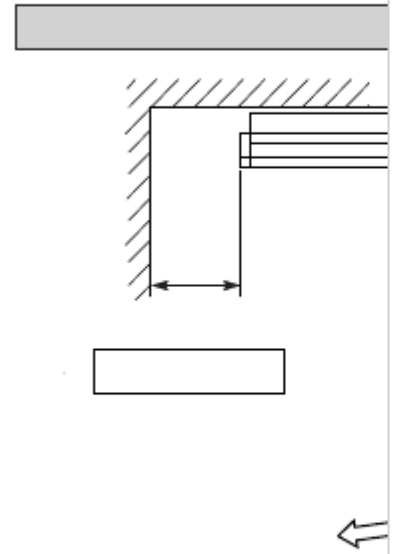

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
12
13
14
15
16
17
18
19

Quick Links:

[Please Read before Starting](#)

[Indoor Unit](#)

[Outdoor Unit](#)

Chapters

[Table of Contents](#) 4

[Concealed-Duct Type \(U Type\) 3-25. Required Minimum Space for Installation and Service](#) 44

Related Manuals for Sanyo SPW-X483GH56

[Air Conditioner Sanyo SPW-U253GH56 Service Manual](#)

Split system air conditioner (108 pages)

[Air Conditioner Sanyo SPW-D253GH56 Service Manual](#)

Split system (108 pages)

[Air Conditioner Sanyo SPW-T253GH56 Service Manual](#)

Split system (106 pages)

[Air Conditioner Sanyo SPW-X253GH56 Service Manual](#)

Split system (105 pages)

[Air Conditioner Sanyo 2-WAY ECO-i SPW-C0705DXHN8 Service Manual](#)

Multi system (143 pages)

[Air Conditioner Sanyo SPW-C1155DXHN8 Technical Data & Service Manual](#)

2-way eco-i multi system (242 pages)

[Air Conditioner Sanyo ECOi C0705DXHN8 Brochure & Specs](#)

2 and 3 pipe electric vrf systems (10 pages)

[Air Conditioner Sanyo MINI ECO-i SPW-CR365GXH56B Service Manual](#)

(252 pages)

[Air Conditioner Sanyo SPW-D253G56 Service Manual](#)

Split system air conditioner (66 pages)

[Air Conditioner Sanyo SPW-CR365GXH56 Technical Data Manual](#)

Mini eco-i system (346 pages)

[Air Conditioner Sanyo SPW-C483GYH8 Service Manual](#)

Eco multi system (235 pages)

[Air Conditioner Sanyo SPW-C256VH Technical Data & Service Manual](#)

4-way air discharge semi-concealed wall-mounted ceiling-mounted concealed-duct (517 pages)

[Air Conditioner Sanyo Big PACi 18 Series Technical Data & Service Manual](#)

Big pack i dc inverter (275 pages)

[Air Conditioner Sanyo SPW-CR1503GDYH8 Technical Data & Service Manual](#)

W-eco multi system series (377 pages)

[Air Conditioner Sanyo SPW-XR253GH56 Technical Data & Service Manual](#)

(223 pages)

[Air Conditioner Sanyo SPW-XR254EH56 Installation And Operation Manual](#)

Dc inverter air conditioner (40 pages)

Related Content for Sanyo SPW-X483GH56

[CH2442 Selecting The Installation Site](#)

Sanyo CH2442

[W-3WAY ECO-i 85464369098000 Selecting The Installation Site](#)

Sanyo W-3WAY ECO-i 85464369098000

[Mini ECO-i 85464359981002 Selecting The Installation Site](#)

Sanyo Mini ECO-i 85464359981002

[PNR-XS2432 Selecting The Installation Site](#)

Sanyo PNR-XS2432

[ECO R410A Selecting The Installation Site](#)

Sanyo ECO R410A

[C4272R Selecting The Installation Site](#)

Sanyo C4272R

[C4272R S/C Selecting The Installation Site](#)

Sanyo C4272R S/C

[85464359982001 Selecting The Installation Site](#)

Sanyo 85464359982001

This manual is also suitable for:

[Spw-d483gh56Spw-x363gh56Spw-t363gh56Spw-u363gh56Spw-d363gh56Spw-t483gh56](#) ... [Show all](#)