


Checking The Drainage - Sanyo SPW-X483GH56 Installation Instruction

Eco multi system air conditioner

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91




•

[Table of Contents](#)

•

Bookmarks

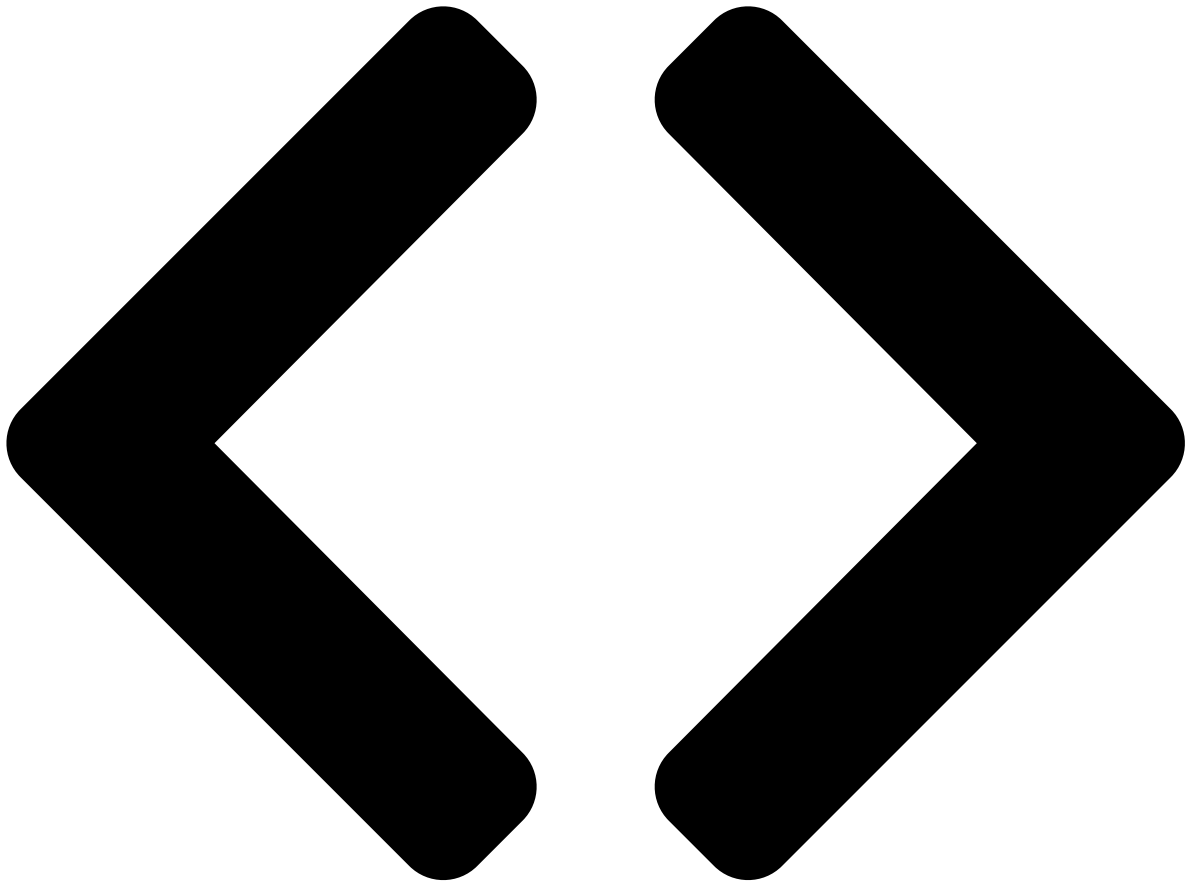

Enlarged version

3-13.

Checking the Drainage

3-13. Checking the Drainage
After wiring and drain piping are completed, use the following procedure to check that the water will drain smoothly. For this, prepare a bucket and wiping cloth to catch and wipe up spilled water.

- (1) Connect power to the power terminal board (L1, L2 terminal) inside the electrical component box.
- (2) Remove the tube cover and through the opening, slowly pour about 1,200 cc of water into the drain pan to check drainage.
- (3) Short the check pin (CN5 white) on the indoor control board and operate the drain pump. Check the water flow and see if there is any leakage.

(3) Short the check pin (CN5 white) on the indoor

Be careful since the fan will start when you short the pin

CAUTION

on the indoor control board.

(4) When the check of drainage is complete, open the check pin (CN5 white) and remount the tube cover.

To mount the tube cover, use 4 x 8 tapping screws.

CAUTION

(Fig. 3-32)

Do not use long screws as

they may puncture the drain pan and cause water leakage.

Fig. 3-44

33

S4179544
3 3 3 3 3


X

4 X 8 mm
tapping screw
Tube cover
0062_X_1

3-19 Checking the Drainage

After wiring and drain piping are completed, use the following procedure to check that the water will drain smoothly. For this, prepare a bucket and wiping cloth to catch and wipe up spilled water.

- (1) Connect power to the power terminal board (L1, L2 terminal) inside the electrical component box.
- (2) Remove the tube cover and through the opening, slowly pour about 1,200 cc of water into the drain pan to check drainage.
- (3) Short the check pin (CN5 white) on the indoor control board and operate the drain pump. Check the water flow and see if there is any leakage.



Be careful since the fan will start when you short the pin

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
32
33
34
35
36
37
38
39

Quick Links:

[Please Read before Starting](#)

[Indoor Unit](#)

[Outdoor Unit](#)

Chapters

[Table of Contents](#) 4

[Concealed-Duct Type \(U Type\) 3-25. Required Minimum Space for Installation and Service](#) 44

Related Manuals for Sanyo SPW-X483GH56

[Air Conditioner Sanyo SPW-U253GH56 Service Manual](#)

Split system air conditioner (108 pages)

[Air Conditioner Sanyo SPW-D253GH56 Service Manual](#)

Split system (108 pages)

[Air Conditioner Sanyo SPW-T253GH56 Service Manual](#)

Split system (106 pages)

[Air Conditioner Sanyo SPW-X253GH56 Service Manual](#)

Split system (105 pages)

[Air Conditioner Sanyo 2-WAY ECO-i SPW-C0705DXHN8 Service Manual](#)

Multi system (143 pages)

[Air Conditioner Sanyo SPW-C1155DXHN8 Technical Data & Service Manual](#)

2-way eco-i multi system (242 pages)

[Air Conditioner Sanyo ECOi C0705DXHN8 Brochure & Specs](#)

2 and 3 pipe electric vrf systems (10 pages)

[Air Conditioner Sanyo MINI ECO-i SPW-CR365GXH56B Service Manual](#)

(252 pages)

[Air Conditioner Sanyo SPW-D253G56 Service Manual](#)

Split system air conditioner (66 pages)

[Air Conditioner Sanyo SPW-CR365GXH56 Technical Data Manual](#)

Mini eco-i system (346 pages)

[Air Conditioner Sanyo SPW-C483GYH8 Service Manual](#)

Eco multi system (235 pages)

[Air Conditioner Sanyo SPW-C256VH Technical Data & Service Manual](#)

4-way air discharge semi-concealed wall-mounted ceiling-mounted concealed-duct (517 pages)

[Air Conditioner Sanyo Big PACi 18 Series Technical Data & Service Manual](#)

Big pack i dc inverter (275 pages)

[Air Conditioner Sanyo SPW-CR1503GDYH8 Technical Data & Service Manual](#)

W-eco multi system series (377 pages)

[Air Conditioner Sanyo SPW-XR253GH56 Technical Data & Service Manual](#)

(223 pages)

[Air Conditioner Sanyo SPW-XR254EH56 Installation And Operation Manual](#)

Dc inverter air conditioner (40 pages)

Related Content for Sanyo SPW-X483GH56

[CH2442 Checking The Drainage](#)

Sanyo CH2442

[W-3WAY ECO-i 85464369098000 Checking The Drainage](#)

Sanyo W-3WAY ECO-i 85464369098000

[Mini ECO-i 85464359981002 Checking The Drainage](#)

Sanyo Mini ECO-i 85464359981002

[PNR-XS2432 Checking The Drainage](#)

Sanyo PNR-XS2432

[ECO R410A Checking The Drainage](#)

Sanyo ECO R410A

[C4272R S/C Checking The Drainage](#)

Sanyo C4272R S/C

[85464359982001 Checking The Drainage](#)

Sanyo 85464359982001

[XS3632 Checking The Electrical Components.46](#)

Sanyo XS3632

This manual is also suitable for:

[Spw-d483gh56Spw-x363gh56Spw-t363gh56Spw-u363gh56Spw-d363gh56Spw-t483gh56](#) ... [Show all](#)