

Installing The Drain Piping; Installing The Remote Controller - Sanyo SPW-X483GH56 Installation Instruction

Eco multi system air conditioner

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91

--


•

[Table of Contents](#)

•

Bookmarks

--

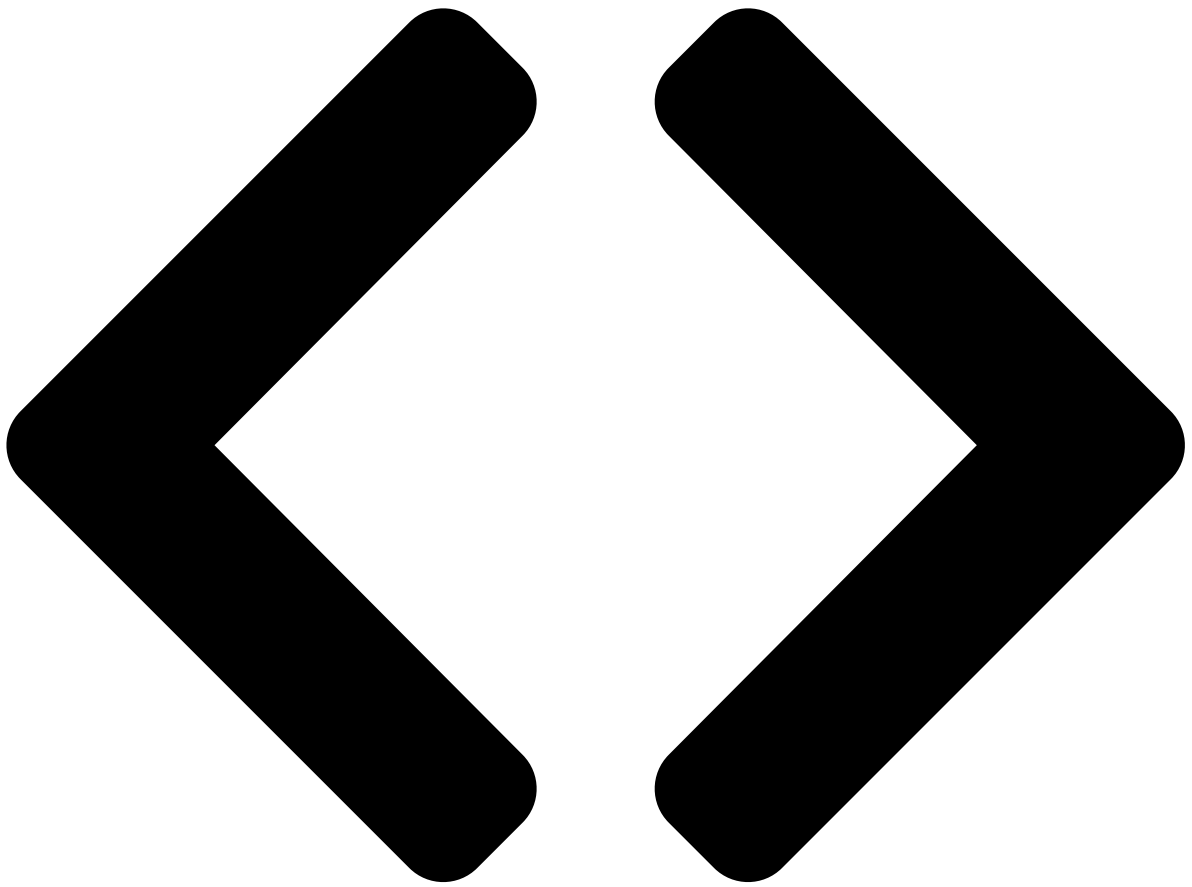

3-38. Installing the Drain Piping

Water leaks may occur if the drain pipes are connected

CAUTION

inadequately.


(1)



When rear-side drain piping is required bend the drain hose attached to the indoor unit by 90°. Connect a drain pipe (field supply) to the drain hose through the rear tubing outlet in the rear panel. Use a hard PVC pipe (VP20) for the drain piping.

(2)

Ensure that the drain pipe has a downward

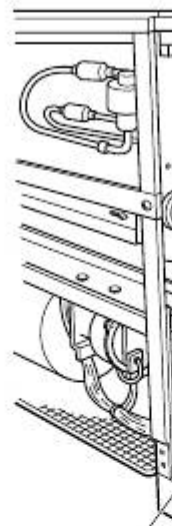

gradient of 1/100 or more and that there are no water traps.

(3)

Provide insulation for the drain pipe.

(4)

After the drain piping is completed, pour water into the drain pan to check if the water drains smoothly.



(5)

Remove any dust in the drain pan so that the pipe is not clogged.

3-39. Installing the Remote Controller

A remote controller (optional wired remote controller) can be mounted in the indoor unit (floor-standing type).

(1)

Remove the cover of the optional wired remote controller. (Fig. 3-113)

(2)

Remove the front panel. Remove the screws and fixture. (Fig. 3-114)

(3)

Place the remote controller into the space in the unit as shown in Fig 3-114. Assemble the lead wires of the remote controller to its rear side center and route them to the lead wire guide.

(4)

Secure the fixture by the screws.

Lead wire guide

Remote

controller

Screw

Fig. 3-114

Drain hose

Drain pipe (PVC)

Drain hose (supplied)

Hose band

(supplied)

Hard PVC pipe

VP20.

(field supply)

Cover

To remove the cover from the remote controller, insert a screwdriver between the cover and the controller as shown in the figure above, and turn the screwdriver in the direction indicated by the arrow.

0764_M_1

55

S4179544





0761_M_1

Fig. 3-111

Drain insulator (supplied)

Insulating tape

Vinyl clamp

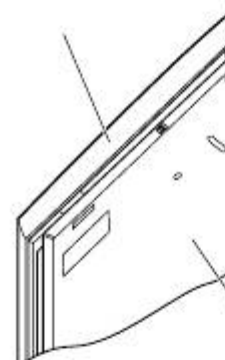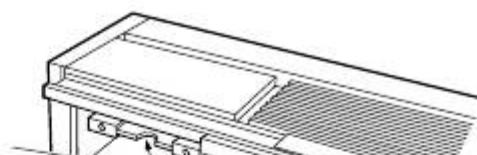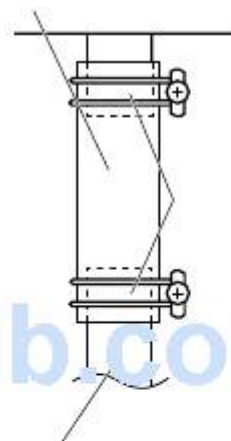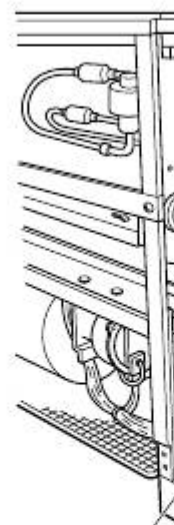


(supplied)
(supplied)
Vinyl clamp
Drain hose insulator
(supplied)
(field supply)
0762_M_I

Fig. 3-112

Screwdriver
Rear side of the
wired remote controller
0763_M_I



Fig. 3-113

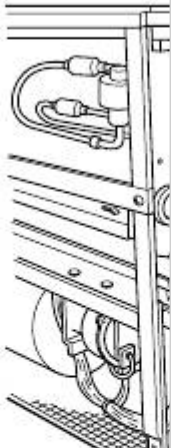

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
54
55
56
57
58
59
60
61

Quick Links:

[Please Read before Starting](#)

[Indoor Unit](#)

[Outdoor Unit](#)

Chapters

[Table of Contents](#) 4

[Concealed-Duct Type \(U Type\) 3-25. Required Minimum Space for Installation and Service](#) 44

Related Manuals for Sanyo SPW-X483GH56

[Air Conditioner Sanyo SPW-U253GH56 Service Manual](#)

Split system air conditioner (108 pages)

[Air Conditioner Sanyo SPW-D253GH56 Service Manual](#)

Split system (108 pages)

[Air Conditioner Sanyo SPW-T253GH56 Service Manual](#)

Split system (106 pages)

[Air Conditioner Sanyo SPW-X253GH56 Service Manual](#)

Split system (105 pages)

[Air Conditioner Sanyo 2-WAY ECO-i SPW-C0705DXHN8 Service Manual](#)

Multi system (143 pages)

[Air Conditioner Sanyo SPW-C1155DXHN8 Technical Data & Service Manual](#)

2-way eco-i multi system (242 pages)

[Air Conditioner Sanyo ECOi C0705DXHN8 Brochure & Specs](#)

2 and 3 pipe electric vrf systems (10 pages)

[Air Conditioner Sanyo MINI ECO-i SPW-CR365GXH56B Service Manual](#)

(252 pages)

[Air Conditioner Sanyo SPW-D253G56 Service Manual](#)

Split system air conditioner (66 pages)

[Air Conditioner Sanyo SPW-CR365GXH56 Technical Data Manual](#)

Mini eco-i system (346 pages)

[Air Conditioner Sanyo SPW-C483GYH8 Service Manual](#)

Eco multi system (235 pages)

[Air Conditioner Sanyo SPW-C256VH Technical Data & Service Manual](#)

4-way air discharge semi-concealed wall-mounted ceiling-mounted concealed-duct (517 pages)

[Air Conditioner Sanyo Big PACi 18 Series Technical Data & Service Manual](#)

Big pack i dc inverter (275 pages)

[Air Conditioner Sanyo SPW-CR1503GDYH8 Technical Data & Service Manual](#)

W-eco multi system series (377 pages)

[Air Conditioner Sanyo SPW-XR253GH56 Technical Data & Service Manual](#)

(223 pages)

[Air Conditioner Sanyo SPW-XR254EH56 Installation And Operation Manual](#)

Dc inverter air conditioner (40 pages)

Related Content for Sanyo SPW-X483GH56

[CH2442 Installing The Drain Piping](#)

Sanyo CH2442

[W-3WAY ECO-i 85464369098000 Installing The Drain Piping](#)

Sanyo W-3WAY ECO-i 85464369098000

[Mini ECO-i 85464359981002 Installing The Drain Piping](#)

Sanyo Mini ECO-i 85464359981002

[PNR-XS2432 Installing The Drain Piping](#)

Sanyo PNR-XS2432

[ECO R410A Installing The Drain Piping](#)

Sanyo ECO R410A

[C4272R S/C Installing The Drain Piping](#)

Sanyo C4272R S/C

[85464359982001 Installing The Drain Piping](#)

Sanyo 85464359982001

[XS3632 Drain Pump Control.23](#)

Sanyo XS3632

This manual is also suitable for:

[Spw-d483gh56Spw-x363gh56Spw-t363gh56Spw-u363gh56Spw-d363gh56Spw-t483gh56](#) ... [Show all](#)