



Whirlpool AKT 933 Instruction Manual

Whirlpool akt 933 built-in gas hob

1
2
3
4

--


•

Bookmarks

--

[Download this manual](#)

Quick Links

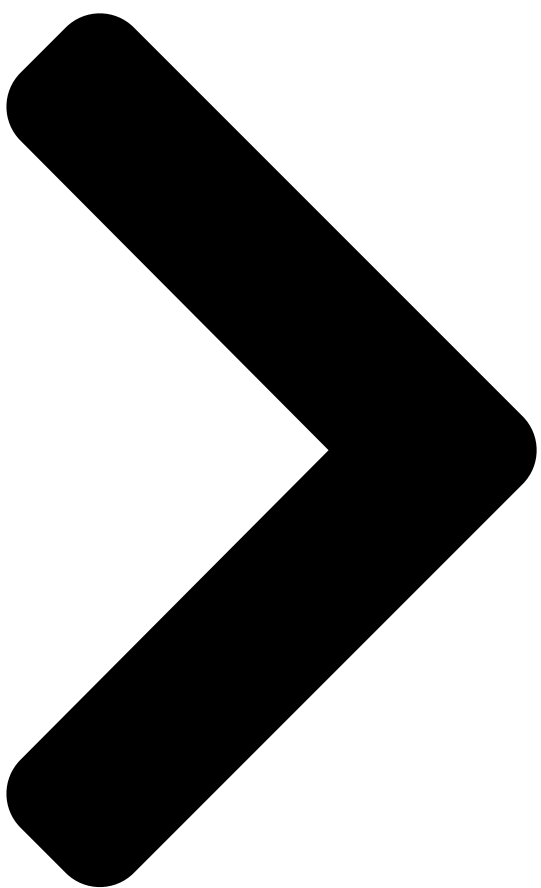

AKT 933



IMPORTANT SAFETY INSTRUCTIONS

YOUR SAFETY AND THE SAFETY OF OTHERS ARE VERY IMPORTANT

This manual and the appliance itself provide important safety messages, to be read and observed at all times.

This is the safety alert symbol, pertaining to safety, which alerts users to potential hazards to themselves and others.

All safety messages will follow the safety alert symbol and either the terms:

Indicates a hazardous situation which, if not avoided, will cause serious injury.

Indicates a hazardous situation which, if not avoided, could cause serious injury.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can be done if the instructions are not followed.

The appliance must be disconnected from the power supply before carrying out any installation work.

Installation and maintenance must be carried out by a qualified technician, in compliance with the manufacturer's instructions and local safety regulations. Do not repair or replace any part of the appliance unless specifically stated in the user manual.

If the information in this manual is not followed exactly, a fire or explosion may result

causing property damage or injury.

Do not use gasoline or other flammable vapors and liquids in the vicinity of this appliance.

What to do if you smell gas:

Do not try to light any appliance.

Do not touch any electrical switch.

Do not use any phone in your building.

Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.

If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency or the gas supplier.

Use appliance in well ventilated rooms only.

The electrical and gas connections must comply with local regulations.

When the hob is installed, provide a multi-pole circuit breaker with a contact separation of at least 3 mm, that provides full disconnection.

Regulations require that the appliance is grounded.

The power cable must be long enough for connecting the appliance, once fitted in its housing, to the power supply

Use only flexible or rigid metal hose for gas connection.

If necessary, the electrical power cable must be replaced exclusively with a power cable having identical characteristics to the original supplied by manufacturer (type H05V2V2-F 90°C or H05RR-F). This operation must be performed by a qualified electrician.

The manufacturer cannot be held responsible for any injury to persons or animals or damage to property arising from failure to comply with these requirements.

Do not use multiple plug adapters or extension cords.

Do not pull the power supply cord in order to unplug the appliance.

The electrical components must not be accessible to the user after installation.

Do not touch the appliance with any wet part of the body and do not operate it when barefoot.

This hob (class 3) is designed solely for private household use for cooking food. Do not use this appliance as a space heater to heat or warm the room. Doing so may result in carbon monoxide poisoning and overheating of the hob. The Manufacturer declines all responsibility for inappropriate use or incorrect setting of the controls.

The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or with lack of experience and knowledge of the appliance, unless supervised or previously instructed in its use by those responsible for their safety.

Young children should be kept away from the appliance and supervised to ensure that they do not play with it.

501 819 01806

BUILT-IN GAS HOB

Manufacturer: Whirlpool Europe S.r.l. Viale G. Borghi, 27 21025 Comerio (VA) ITALY

The use of a gas appliance produces heat and humidity in the room. Make sure the room is well-ventilated, or install an extractor hood with exhaust duct.

In case of prolonged use, additional ventilation may be necessary (by opening a window or increasing the hood extraction speed).

After use, make sure the knobs are in off position and close the main gas supply cock or the gas cylinder valve.

Overheated oils and fats catch fire easily. Always remain vigilant when cooking foods rich in fat, oil or alcohol (e.g. rum, cognac, wine).

Keep the packaging materials out of the reach of children.

Before cleaning or maintenance wait for hob to cool down.

SAVE THESE INSTRUCTIONS



INSTALLATION

After unpacking the hob, make sure that it has not been damaged during transport. In the event of problems, contact the dealer or your nearest After-sales Service.

TECHNICAL INFORMATION FOR THE INSTALLER

This product can be embedded in a worktop 20 to 60 mm thick.

If there is no oven beneath the hob, insert a separator panel that has a surface at least equal to the opening in the work surface. This panel must be positioned at a maximum distance of 150 mm below the upper surface of the work surface but, in no case less than 20 mm from the bottom of the hob. In the case that you intend to install an oven beneath the hob, make sure that it is manufactured by Whirlpool and equipped with a cooling system. The manufacturer declines all liability if another brand oven is installed beneath the hob.

Before installation, make sure that:

the gas delivery conditions (nature and pressure) are compatible with the settings of the hob (see the rating plate and injector table);

the outer surfaces of the furniture or appliances adjacent to the hob are heat resistant according to local regulations;

this appliance is not connected to a fume exhaust device. It shall be installed in accordance with current installation regulations. Particular attention shall be given to the relevant requirements regarding ventilation;

combustion products are discharged outdoors through specific hoods or wall and/or window mounted electrical fans.

GAS CONNECTION

This operation must be performed by a qualified technician.

The gas supply system must comply with local regulations.

You can find specific local regulations for some countries in the paragraph "Reference to Local Regulations". If no information concerning your Country is given, please ask details to your Installer.

The connection of the hob to the gas pipe network or gas cylinder must be made by means of a rigid copper or steel pipe with fittings complying with local regulations, or by means of a continuous-surface stainless steel hose complying with local regulations. The maximum length of the hose is 2 linear metres.

Connect elbow (A)* or (B)* supplied with to the hob inlet main pipe and interpose the washer (C) supplied, in compliance with EN 549.

*

Use elbow (A) for France and elbow (B) for all other destinations.

IMPORTANT: if a stainless steel hose is used, it must be installed so as not to touch any mobile part of the furniture. It must pass through an area where there are no obstructions and where it is possible to inspect it on all its length.

After connection to the gas supply, check for leaks with soapy water. Light up the burners and turn the knobs from max position flame stability.

to minimum position

to check

A

C

C

B

C



[Next Page](#)

1
2
3
4

Summary of Contents for Whirlpool AKT 933

[Page 1](#) Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this appliance. oven beneath the hob, make sure that it is manufactured by Whirlpool and equipped with a cooling system. The manufacturer declines all liability if another brand oven is installed beneath the hob.

[Page 2](#) ELECTRICAL CONNECTION REPLACING THE INJECTORS (see the injector table in the Instruction) This operation must be performed by a qualified technician. • Remove grids (A). WARNING • Extract burners (B). • Using a socket spanner of the appropriate size unscrew •...

[Page 3](#) TROUBLESHOOTING GUIDE DECLARATION OF CONFORMITY If the hob will not operate correctly, before calling the After-Sales Service, refer to the Troubleshooting Guide to determine the problem. • This hob has been designed, constructed and marketed in compliance with: 1. The burner fails to ignite or the flame is not even safety requirements of "Gas"...

[Page 4](#) PRATICAL ADVICE FOR USING THE BURNERS INJECTORS TABLE CATEGORY I12H3+ This hob has burners of different diameters. For better burner performance, Burner Pot Ø Type of gas Type of burner Injector Rated thermal Rated Reduced heat Gas pressure please stick to the following rules: Ultra-rapid From 24 to 26 cm used...